

**Gmsh**



# Gmsh Reference Manual

---

The documentation for Gmsh 1.65

A finite element mesh generator with built-in pre- and post-processing facilities

15 May 2006

---

Christophe Geuzaine  
Jean-François Remacle

---

Copyright © 1997-2006 Christophe Geuzaine, Jean-François Remacle

Permission is granted to make and distribute verbatim copies of this manual provided the copyright notice and this permission notice are preserved on all copies.

## Short Contents

Copying conditions . . . . .	1
1 Overview . . . . .	3
2 General tools . . . . .	9
3 Geometry module . . . . .	39
4 Mesh module . . . . .	49
5 Solver module . . . . .	65
6 Post-processing module . . . . .	83
7 Tutorial . . . . .	113
8 Running Gmsh . . . . .	137
9 File formats . . . . .	145
10 Programming notes . . . . .	159
11 Bugs, versions and credits . . . . .	161
A Tips and tricks . . . . .	175
B Frequently asked questions . . . . .	177
C License . . . . .	189
Concept index . . . . .	195
Syntax index . . . . .	199



# Table of Contents

<b>Copying conditions . . . . .</b>	<b>1</b>
<b>1 Overview . . . . .</b>	<b>3</b>
1.1 Geometry: geometrical entity definition . . . . .	3
1.2 Mesh: finite element mesh generation . . . . .	3
1.3 Solver: external solver interface . . . . .	4
1.4 Post-processing: scalar, vector and tensor field visualization . . . . .	4
1.5 What Gmsh is pretty good at . . . . .	4
1.6 . . . and what Gmsh is not so good at . . . . .	6
1.7 Syntactic rules used in this document . . . . .	6
1.8 Comments . . . . .	6
<b>2 General tools . . . . .</b>	<b>9</b>
2.1 Expressions . . . . .	9
2.1.1 Floating point expressions . . . . .	9
2.1.2 Character expressions . . . . .	10
2.1.3 Color expressions . . . . .	11
2.2 Operators . . . . .	11
2.3 Built-in functions . . . . .	13
2.4 User-defined functions . . . . .	14
2.5 Loops and conditionals . . . . .	14
2.6 General commands . . . . .	15
2.7 General options . . . . .	18
<b>3 Geometry module . . . . .</b>	<b>39</b>
3.1 Geometry commands . . . . .	39
3.1.1 Points . . . . .	39
3.1.2 Lines . . . . .	40
3.1.3 Surfaces . . . . .	41
3.1.4 Volumes . . . . .	42
3.1.5 Extrusions . . . . .	42
3.1.6 Transformations . . . . .	43
3.1.7 Miscellaneous . . . . .	43
3.2 Geometry options . . . . .	44
<b>4 Mesh module . . . . .</b>	<b>49</b>
4.1 Elementary vs. physical entities . . . . .	49
4.2 Mesh commands . . . . .	49
4.2.1 Characteristic lengths . . . . .	49
4.2.2 Structured grids . . . . .	51
4.2.3 Miscellaneous . . . . .	52
4.3 Mesh options . . . . .	53

<b>5</b>	<b>Solver module .....</b>	<b>65</b>
5.1	Solver options .....	65
5.2	Solver example.....	79
<b>6</b>	<b>Post-processing module .....</b>	<b>83</b>
6.1	Post-processing commands .....	83
6.2	Post-processing plugins.....	85
6.3	Post-processing options.....	96
<b>7</b>	<b>Tutorial .....</b>	<b>113</b>
7.1	't1.geo' .....	113
7.2	't2.geo' .....	115
7.3	't3.geo' .....	117
7.4	't4.geo' .....	119
7.5	't5.geo' .....	122
7.6	't6.geo' .....	125
7.7	't7.geo' .....	131
7.8	't8.geo' .....	132
7.9	't9.geo' .....	135
<b>8</b>	<b>Running Gmsh .....</b>	<b>137</b>
8.1	Interactive mode .....	137
8.2	Non-interactive mode.....	138
8.3	Command-line options.....	138
8.4	Mouse actions.....	140
8.5	Keyboard shortcuts .....	140
<b>9</b>	<b>File formats .....</b>	<b>145</b>
9.1	Gmsh mesh file formats.....	145
9.1.1	Version 1.0 .....	145
9.1.2	Version 2.0 .....	146
9.2	Gmsh post-processing file formats .....	148
9.2.1	Parsed post-processing file format.....	149
9.2.2	ASCII post-processing file format .....	151
9.2.3	Binary post-processing file format .....	154
9.3	Gmsh node ordering.....	155
<b>10</b>	<b>Programming notes .....</b>	<b>159</b>
10.1	Coding style .....	159
10.2	Option handling .....	159
<b>11</b>	<b>Bugs, versions and credits.....</b>	<b>161</b>
11.1	Bugs .....	161
11.2	Versions .....	161
11.3	Credits .....	171

Appendix A Tips and tricks .....	175
Appendix B Frequently asked questions .....	177
Appendix C License .....	189
Concept index .....	195
Syntax index .....	199



## Copying conditions

Gmsh is “free software”; this means that everyone is free to use it and to redistribute it on a free basis. Gmsh is not in the public domain; it is copyrighted and there are restrictions on its distribution, but these restrictions are designed to permit everything that a good cooperating citizen would want to do. What is not allowed is to try to prevent others from further sharing any version of Gmsh that they might get from you.

Specifically, we want to make sure that you have the right to give away copies of Gmsh, that you receive source code or else can get it if you want it, that you can change Gmsh or use pieces of Gmsh in new free programs, and that you know you can do these things.

To make sure that everyone has such rights, we have to forbid you to deprive anyone else of these rights. For example, if you distribute copies of Gmsh, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must tell them their rights.

Also, for our own protection, we must make certain that everyone finds out that there is no warranty for Gmsh. If Gmsh is modified by someone else and passed on, we want their recipients to know that what they have is not what we distributed, so that any problems introduced by others will not reflect on our reputation.

The precise conditions of the license for Gmsh are found in the General Public License that accompanies the source code (see [Appendix C \[License\]](#), page 189). Further information about this license is available from the GNU Project webpage <http://www.gnu.org/copyleft/gpl-faq.html>. Detailed copyright information can be found in [Section 11.3 \[Credits\]](#), page 171.

The source code and various pre-compiled versions of Gmsh (for Unix, Windows and Mac OS) can be downloaded from the webpage <http://geuz.org/gmsh/>.

If you use Gmsh, we would appreciate that you mention it in your work. References, as well as the latest news about Gmsh development, are always available on <http://geuz.org/gmsh/>. Please send all Gmsh-related questions to the public Gmsh mailing list at [gmsh@geuz.org](mailto:gmsh@geuz.org).

If you want to integrate Gmsh into a closed-source software, or want to sell a modified closed-source version of Gmsh, please contact one of the authors. You can purchase a version of Gmsh under a different license, with “no strings attached” (for example allowing you to take parts of Gmsh and integrate them into your own proprietary code).



# 1 Overview

Gmsh is an automatic three-dimensional finite element mesh generator, primarily Delaunay, with built-in pre- and post-processing facilities. Its design goal is to provide a simple meshing tool for academic problems with parametric input and advanced visualization capabilities.

Gmsh is built around four modules: geometry, mesh, solver and post-processing. All geometrical, mesh, solver and post-processing instructions are prescribed either interactively using the graphical user interface (GUI) or in ASCII data files using Gmsh's own scripting language. Interactive actions generate language bits in the input files, and vice versa. This makes it possible to automate all treatments, using loops, conditionals and external system calls. A brief description of the four modules is given hereafter.

## 1.1 Geometry: geometrical entity definition

Geometries are created in a bottom-up flow by successively defining points, oriented lines (line segments, circles, ellipses, splines, . . .), oriented surfaces (plane surfaces, ruled surfaces, triangulated surfaces, . . .) and volumes. Compound groups of geometrical entities can be defined, based on these elementary geometric entities. Gmsh's scripting language allows all geometrical entities to be fully parameterized.

## 1.2 Mesh: finite element mesh generation

A finite element mesh is a tessellation of a given subset of the three-dimensional space by elementary geometrical elements of various shapes (in Gmsh's case: lines, triangles, quadrangles, tetrahedra, prisms, hexahedra and pyramids), arranged in such a way that if two of them intersect, they do so along a face, an edge or a node, and never otherwise. All the finite element meshes produced by Gmsh are considered as “unstructured”, even if they were generated in a “structured” way (e.g., by extrusion). This implies that the elementary geometrical elements are defined only by an ordered list of their nodes but that no predefined order relation is assumed between any two elements.

The mesh generation is performed in the same bottom-up flow as the geometry creation: lines are discretized first; the mesh of the lines is then used to mesh the surfaces; then the mesh of the surfaces is used to mesh the volumes. In this process, the mesh of an entity is only constrained by the mesh of its boundary<sup>1</sup>. This automatically assures the conformity of the mesh when, for example, two surfaces share a common line. But this

---

<sup>1</sup> For example, in three dimensions:

- the triangles discretizing a surface will be forced to be faces of tetrahedra in the final 3D mesh only if the surface is part of the boundary of a volume;
- the line elements discretizing a curve will be forced to be edges of tetrahedra in the final 3D mesh only if the curve is part of the boundary of a surface, itself part of the boundary of a volume;
- a single node discretizing a point in the middle of a volume will be forced to be a vertex of one of the tetrahedra in the final 3D mesh only if this point is connected to a curve, itself part of the boundary of a surface, itself part of the boundary of a volume...

also implies that the discretization of an “isolated”  $(n-1)$ -th dimensional entity inside an  $n$ -th dimensional entity does *not* constrain the  $n$ -th dimensional mesh. Every meshing step is constrained by the characteristic length field, which can be uniform, specified by characteristic lengths associated with elementary geometrical entities, or associated with another mesh (the background mesh).

For each meshing step, all structured mesh directives are executed first, and serve as additional constraints for the unstructured parts<sup>2</sup>. The implemented Delaunay algorithm is subdivided in the following five steps for surface/volume discretization:

1. trivial meshing of a box including the convex polygon/polyhedron defined by the boundary nodes resulting from the discretization of the lines/surfaces;
2. creation of the initial mesh by insertion of all the nodes on the lines/surfaces thanks to the Bowyer algorithm;
3. boundary restoration to force all the edges/faces of the lines/surfaces to be present in the initial mesh;
4. suppression of all the unwanted triangles/tetrahedra (in particular those containing the nodes of the initial box);
5. insertion of new nodes by the Bowyer algorithm until the characteristic size of each simplex is lower or equal to the characteristic length field evaluated at the center of its circumscribed circle/sphere.

### 1.3 Solver: external solver interface

External solvers can be interfaced with Gmsh through Unix or TCP/IP sockets, which permits to easily launch external computations and to collect and exploit the simulation results within Gmsh’s post-processing module. The default solver interfaced with Gmsh is GetDP (<http://www.geuz.org/getdp/>). Small examples of solvers written in C, C++, Perl and Python are available in the source distribution (in the ‘utils/solvers/’ directory).

### 1.4 Post-processing: scalar, vector and tensor field visualization

Multiple post-processing scalar, vector or tensor maps can be loaded and manipulated (globally or individually) along with the geometry and the mesh. Scalar fields are represented by iso-value lines/surfaces or color maps, while vector fields are represented by three-dimensional arrows or displacement maps. Post-processing functions include section computation, offset, elevation, boundary and component extraction, color map and range modification, animation, vector graphic output, etc. All post-processing options can be accessed either interactively or through the input ASCII text files. Scripting permits to automate all post-processing operations, e.g., for the creation of animations. User-defined operations can also be performed on post-processing views through dynamically loadable plugins.

---

<sup>2</sup> Note that mixing structured volume grids with unstructured volume grids generated with the default 3D isotropic Delaunay algorithm can result, in certain cases, to non-conform surface meshes on their shared boundary. If this happens, you may consider using the Netgen algorithm for the unstructured part.

## 1.5 What Gmsh is pretty good at . . .

Gmsh is a (relatively) small program, and was principally developed “in academia, to solve academic problems” . . . Nevertheless, over the years, many people outside universities have found Gmsh useful in their day-to-day jobs. Here is a tentative list of what Gmsh does best:

- quickly describe simple and/or “repetitive” geometries, thanks to user-defined functions, loops, conditionals and includes (see [Section 2.4 \[User-defined functions\]](#), page 14, [Section 2.5 \[Loops and conditionals\]](#), page 14, and [Section 2.6 \[General commands\]](#), page 15);
- parameterize these geometries. Gmsh’s scripting language enables all commands and command arguments to depend on previous calculations (see [Section 2.1 \[Expressions\]](#), page 9, and [Section 3.1 \[Geometry commands\]](#), page 39);
- generate 1D, 2D and 3D simplicial (i.e., using line segments, triangles and tetrahedra) finite element meshes. The performance of the 1D and 2D algorithms is pretty good; the 3D algorithm is still experimental and slow (see [Chapter 4 \[Mesh module\]](#), page 49, and [Chapter 7 \[Tutorial\]](#), page 113);
- specify target element sizes accurately. Gmsh provides several mechanisms to control the size of the elements in the final mesh: through interpolation from geometrical point characteristic lengths or geometrical attractors, or from user-defined background meshes (see [Section 4.2 \[Mesh commands\]](#), page 49);
- create simple extruded geometries and meshes (see [Section 3.1 \[Geometry commands\]](#), page 39, and [Section 4.2 \[Mesh commands\]](#), page 49);
- interact with external solvers. Gmsh provides C, C++, Perl and Python interfaces, and others can be easily added (see [Chapter 5 \[Solver module\]](#), page 65);
- visualize computational results in a great variety of ways. Gmsh can display scalar, vector and tensor data sets, and can perform various operations on the resulting post-processing views (see [Chapter 6 \[Post-processing module\]](#), page 83);
- export plots in many different formats: vector PostScript or encapsulated PostScript, LaTeX, PNG, JPEG, . . . (see [Section 2.7 \[General options\]](#), page 18);
- generate complex animations (see [Chapter 2 \[General tools\]](#), page 9, and [Section 7.8 \[t8.geo\]](#), page 132);
- run on low end machines and/or machines with no graphic system. Gmsh can be compiled with or without the graphical user interface, and all versions can be used either interactively or not, directly from the command line (see [Chapter 8 \[Running Gmsh\]](#), page 137);
- configure your preferred options. Gmsh has a large number of configuration options that can be set interactively using the GUI, scattered inside command files, changed on the fly in scripts, set in per-user configuration files, or specified on the command-line (see [Section 2.7 \[General options\]](#), page 18, [Section 3.2 \[Geometry options\]](#), page 44, [Section 4.3 \[Mesh options\]](#), page 53, [Section 6.3 \[Post-processing options\]](#), page 96, and [Chapter 8 \[Running Gmsh\]](#), page 137);
- and do all the above on various platforms (Windows, Mac and Unix), for free (see [\[Copying conditions\]](#), page 1), using clear-text ASCII files and/or a small but powerful graphical user interface.

## 1.6 . . . and what Gmsh is not so good at

Due to its historical background and limited developer manpower, Gmsh has also some (a lot of?) weaknesses:

- the bottom-up approach for describing geometries can become inconvenient for complex models;
- there is no support for NURBS and only very limited support for trimmed surfaces;
- Gmsh is not primarily a structured mesh generator: no automatic quadrilateral or hexahedral meshing algorithm is provided. If you want quadrangles, you have to use transfinite, elliptic or extruded meshes or recombine unstructured triangular meshes. For hexahedra, your only choice is transfinite or extruded meshes;
- Gmsh is not a multi-bloc generator: all meshes produced by Gmsh are conforming in the sense of finite element meshes;
- the 2D anisotropic and the 3D unstructured algorithms are still experimental and not very robust. If these algorithms fail, try to change some characteristic lengths to generate meshes that better suit the geometrical details of the structures;
- Gmsh was designed to solve academic “test cases”, not industrial-size problems. You may find that Gmsh is too slow for large problems (with thousands of geometric primitives, or millions of mesh/post-processing elements).

If you have the skills and some free time, feel free to join the project! We gladly accept any code contributions (see [Chapter 10 \[Programming notes\]](#), page 159) to remedy the aforementioned (and all other) shortcomings...

## 1.7 Syntactic rules used in this document

Here are the rules we tried to follow when writing this user’s guide. Note that metasyntactic variable definitions stay valid throughout the manual (and not only in the sections where the definitions appear).

1. Keywords and literal symbols are printed like **this**.
2. Metasyntactic variables (i.e., text bits that are not part of the syntax, but stand for other text bits) are printed like *this*.
3. A colon (:) after a metasyntactic variable separates the variable from its definition.
4. Optional rules are enclosed in < > pairs.
5. Multiple choices are separated by |.
6. Three dots ( . . . ) indicate a possible (multiple) repetition of the preceding rule.

## 1.8 Comments

All Gmsh ASCII text input files support both C and C++ style comments:

1. any text comprised between /\* and \*/ pairs is ignored;
2. the rest of a line after a double slash // is ignored.

These commands won't have the described effects inside double quotes or inside keywords. Also note that 'white space' (spaces, tabs, new line characters) is ignored inside all expressions.



## 2 General tools

This chapter describes the general commands and options that can be used in Gmsh’s ASCII text input files. By “general”, we mean “not specifically related to one of the geometry, mesh, solver or post-processing modules”. Commands peculiar to these modules will be introduced in [Chapter 3 \[Geometry module\], page 39](#), [Chapter 4 \[Mesh module\], page 49](#), [Chapter 5 \[Solver module\], page 65](#), and [Chapter 6 \[Post-processing module\], page 83](#), respectively.

Note that, if you are just beginning to use Gmsh, or just want to see what Gmsh is all about, you really don’t need to read this chapter and the four next ones. Just have a quick look at [Chapter 8 \[Running Gmsh\], page 137](#), and go play with the graphical user interface, running the tutorials and demonstration files bundled in the distribution! Most of the commands and options described in the following chapters are available interactively in the GUI, so you don’t need to worry about Gmsh’s internals for creating your first geometries, meshes and post-processing plots. Once you master the tutorial (read the source files: they are heavily commented—see [Chapter 7 \[Tutorial\], page 113](#)), you might want to come back here to learn more about the specific syntax of Gmsh’s commands and esoteric options.

### 2.1 Expressions

The two constant types used in Gmsh are *real* and *string* (there is no integer type). These types have the same meaning and syntax as in the C or C++ programming languages.

#### 2.1.1 Floating point expressions

Floating point expressions (or, more simply, “expressions”) are denoted by the metasyntactic variable *expression* (remember the definition of the syntactic rules in [Section 1.7 \[Syntactic rules\], page 6](#)), and are evaluated during the parsing of the data file:

```
expression:
  real |
  string |
  string [ expression ] |
  # string [ ] |
  ( expression ) |
  operator-unary-left expression |
  expression operator-unary-right |
  expression operator-binary expression |
  expression operator-ternary-left expression operator-ternary-right expression |
  built-in-function |
  real-option |
  GetValue("string", expression)
```

Such *expressions* are used in most of Gmsh’s commands. The third and fourth cases in this definition permit to extract one item from a list (see below) and get the size of a list, respectively. The operators *operator-unary-left*, *operator-unary-right*, *operator-binary*, *operator-ternary-left* and *operator-ternary-right* are defined in [Section 2.2 \[Operators\], page 11](#). For

the definition of *built-in-functions*, see [Section 2.3 \[Built-in functions\]](#), page 13. The various *real-options* are listed in [Section 2.7 \[General options\]](#), page 18, [Section 3.2 \[Geometry options\]](#), page 44, [Section 4.3 \[Mesh options\]](#), page 53, [Section 5.1 \[Solver options\]](#), page 65, and [Section 6.3 \[Post-processing options\]](#), page 96.

The last case in the definition allows to ask the user for a value interactively. For example, inserting `GetValue("Value of parameter alpha?", 5.76)` in an input file will query the user for the value of a certain parameter alpha, assuming the default value is 5.76. If the option `General.NoPopup` is set (see [Section 2.7 \[General options\]](#), page 18), no question is asked and the default value is automatically used.

List of expressions are also widely used, and are defined as:

```
expression-list:
  expression-list-item <, expression-list-item> ...
```

with

```
expression-list-item:
  expression |
  expression : expression |
  expression : expression : expression |
  string [ ] |
  string [ { expression-list } ] |
  Point { expression } |
  transform |
  extrude
```

The second case in this last definition permits to create a list containing the range of numbers comprised between two *expressions*, with a unit incrementation step. The third case also permits to create a list containing the range of numbers comprised between two *expressions*, but with a positive or negative incrementation step equal to the third *expression*. The fourth case permits to reference an expression list. The fifth case permits to reference an expression sublist (whose elements are those corresponding to the indices provided by the *expression-list*). The sixth case permits to retrieve the coordinates of a given geometry point (see [Section 3.1.1 \[Points\]](#), page 39). The last two cases permit to retrieve the indices of entities created through geometrical transformations and extrusions (see [Section 3.1.6 \[Transformations\]](#), page 43, and [Section 3.1.5 \[Extrusions\]](#), page 42).

To see the practical use of such expressions, have a look at the first couple of examples in [Chapter 7 \[Tutorial\]](#), page 113. Note that, in order to lighten the syntax, you can always omit the braces {} enclosing an *expression-list* if this *expression-list* only contains a single item. Also note that a braced *expression-list* can be preceded by a minus sign in order to change the sign of all the *expression-list-items*.

## 2.1.2 Character expressions

Character expressions are defined as:

```
char-expression:
  "string" |
  Today |
  StrPrefix ( char-expression ) |
```

```

StrRelative ( char-expression ) |
StrCat ( char-expression , char-expression ) |
Sprintf ( char-expression , expression-list ) |
Sprintf ( char-expression )
Sprintf ( char-option )

```

The third and fourth cases in this definition permit to take the prefix (e.g. to remove the extension) or the relative path of a string. The fifth case permits to concatenate two character expressions, and the sixth and seventh are equivalent to the **sprintf** C function (where *char-expression* is a format string that can contain floating point formatting characters: `%e`, `%g`, etc.). The last case permits to use the value of a *char-option* as a *char-expression*. The various *char-options* are listed in Section 2.7 [General options], page 18, Section 3.2 [Geometry options], page 44, Section 4.3 [Mesh options], page 53, Section 5.1 [Solver options], page 65, and Section 6.3 [Post-processing options], page 96.

Character expressions are mostly used to specify non-numeric options and input/output file names. See Section 7.8 [t8.geo], page 132, for an interesting usage of *char-expressions* in an animation script.

### 2.1.3 Color expressions

Colors expressions are hybrids between fixed-length braced *expression-lists* and *strings*:

```

color-expression:
  string |
  { expression , expression , expression } |
  { expression , expression , expression , expression } |
  color-option

```

The first case permits to use the X Windows names to refer to colors, e.g., `Red`, `SpringGreen`, `LavenderBlush3`, ... (see ‘Common/Colors.h’ in Gmsh’s source tree for a complete list). The second case permits to define colors by using three expressions to specify their red, green and blue components (with values comprised between 0 and 255). The third case permits to define colors by using their red, green and blue color components as well as their alpha channel. The last case permits to use the value of a *color-option* as a *color-expression*. The various *color-options* are listed in Section 2.7 [General options], page 18, Section 3.2 [Geometry options], page 44, Section 4.3 [Mesh options], page 53, Section 5.1 [Solver options], page 65, and Section 6.3 [Post-processing options], page 96.

See Section 7.3 [t3.geo], page 117, for an example of the use of color expressions.

## 2.2 Operators

Gmsh’s operators are similar to the corresponding operators in C and C++. Here is the list of the unary, binary and ternary operators currently implemented.

*operator-unary-left*:

- Unary minus.
- !        Logical not.

*operator-unary-right*:

<code>++</code>	Post-incrementation.
<code>--</code>	Post-decrementation.
<i>operator-binary:</i>	
<code>^</code>	Exponentiation.
<code>*</code>	Multiplication.
<code>/</code>	Division.
<code>%</code>	Modulo.
<code>+</code>	Addition.
<code>-</code>	Subtraction.
<code>==</code>	Equality.
<code>!=</code>	Inequality.
<code>&gt;</code>	Greater.
<code>&gt;=</code>	Greater or equality.
<code>&lt;</code>	Less.
<code>&lt;=</code>	Less or equality.
<code>&amp;&amp;</code>	Logical ‘and’.
<code>  </code>	Logical ‘or’. (Warning: the logical ‘or’ always implies the evaluation of both arguments. That is, unlike in C or C++, the second operand of <code>  </code> is evaluated even if the first one is true).

*operator-ternary-left:*`?`*operator-ternary-right:*

- `:` The only ternary operator, formed by *operator-ternary-left* and *operator-ternary-right*, returns the value of its second argument if the first argument is non-zero; otherwise it returns the value of its third argument.

The evaluation priorities are summarized below<sup>1</sup> (from stronger to weaker, i.e., `*` has a highest evaluation priority than `+`). Parentheses `()` may be used anywhere to change the order of evaluation:

1. `()`, `[]`, `.`, `#`
2. `^`
3. `!`, `++`, `--`, `-` (unary)
4. `*`, `/`, `%`
5. `+`, `-`
6. `<`, `>`, `<=`, `>=`

---

<sup>1</sup> The affectation operators are introduced in Section 2.6 [General commands], page 15.

7. `==, !=`
8. `&&`
9. `||`
10. `?:`
11. `=, +=, -=, *=, /=`

## 2.3 Built-in functions

A built-in function is composed of an identifier followed by a pair of parentheses containing an *expression-list* (the list of its arguments)<sup>2</sup>. Here is the list of the built-in functions currently implemented:

*build-in-function*:

- Acos ( *expression* )**  
Arc cosine (inverse cosine) of an *expression* in [-1,1]. Returns a value in [0,Pi].
- Asin ( *expression* )**  
Arc sine (inverse sine) of an *expression* in [-1,1]. Returns a value in [-Pi/2,Pi/2].
- Atan ( *expression* )**  
Arc tangent (inverse tangent) of *expression*. Returns a value in [-Pi/2,Pi/2].
- Atan2 ( *expression*, *expression* )**  
Arc tangent (inverse tangent) of the first *expression* divided by the second.  
Returns a value in [-Pi,Pi].
- Ceil ( *expression* )**  
Rounds *expression* up to the nearest integer.
- Cos ( *expression* )**  
Cosine of *expression*.
- Cosh ( *expression* )**  
Hyperbolic cosine of *expression*.
- Exp ( *expression* )**  
Returns the value of e (the base of natural logarithms) raised to the power of *expression*.
- Fabs ( *expression* )**  
Absolute value of *expression*.
- Fmod ( *expression*, *expression* )**  
Remainder of the division of the first *expression* by the second, with the sign of the first.
- Floor ( *expression* )**  
Rounds *expression* down to the nearest integer.
- Hypot ( *expression*, *expression* )**  
Returns the square root of the sum of the square of its two arguments.

---

<sup>2</sup> For compatibility with GetDP (<http://www.geuz.org/getdp/>), parentheses can be replaced by brackets [].

**Log ( *expression* )**  
     Natural logarithm of *expression* (*expression* > 0).

**Log10 ( *expression* )**  
     Base 10 logarithm of *expression* (*expression* > 0).

**Modulo ( *expression*, *expression* )**  
     see **Fmod( *expression*, *expression* ).**

**Rand ( *expression* )**  
     Random number between zero and *expression*.

**Sqrt ( *expression* )**  
     Square root of *expression* (*expression* >= 0).

**Sin ( *expression* )**  
     Sine of *expression*.

**Sinh ( *expression* )**  
     Hyperbolic sine of *expression*.

**Tan ( *expression* )**  
     Tangent of *expression*.

**Tanh ( *expression* )**  
     Hyperbolic tangent of *expression*.

## 2.4 User-defined functions

User-defined functions take no arguments, and are evaluated as if a file containing the function body was included at the location of the **Call** statement.

**Function** *string*

Begins the declaration of a user-defined function named *string*. The body of the function starts on the line after ‘**Function** *string*’, and can contain any Gmsh command.

**Return**     Ends the body of the current user-defined function. Function declarations cannot be imbricated.

**Call** *string*;

Executes the body of a (previously defined) function named *string*.

See [Section 7.5 \[t5.geo\]](#), page 122, for an example of a user-defined function.

## 2.5 Loops and conditionals

Loops and conditionals are defined as follows, and can be imbricated:

**For** ( *expression* : *expression* )

Iterates from the value of the first *expression* to the value of the second *expression*, with a unit incrementation step. At each iteration, the commands comprised between ‘**For** ( *expression* : *expression* )’ and the matching **EndFor** are executed.

**For** (*expression* : *expression* : *expression*)

Iterates from the value of the first *expression* to the value of the second *expression*, with a positive or negative incrementation step equal to the third *expression*. At each iteration, the commands comprised between ‘**For** (*expression* : *expression* : *expression*)’ and the matching **EndFor** are executed.

**For** *string* **In** { *expression* : *expression* }

Iterates from the value of the first *expression* to the value of the second *expression*, with a unit incrementation step. At each iteration, the value of the iterate is affected to an expression named *string*, and the commands comprised between ‘**For** *string* **In** { *expression* : *expression* }’ and the matching **EndFor** are executed.

**For** *string* **In** { *expression* : *expression* : *expression* }

Iterates from the value of the first *expression* to the value of the second *expression*, with a positive or negative incrementation step equal to the third *expression*. At each iteration, the value of the iterate is affected to an expression named *string*, and the commands comprised between ‘**For** *string* **In** { *expression* : *expression* : *expression* }’ and the matching **EndFor** are executed.

**EndFor**      Ends a matching **For** command.

**If** (*expression*)

The body enclosed between ‘**If** (*expression*)’ and the matching **Endif** is evaluated if *expression* is non-zero.

**EndIf**      Ends a matching **If** command.

See [Section 7.5 \[t5.geo\]](#), page 122, for an example of **For** and **If** commands. Gmsh does not provide any **Else** (or similar) command at the time of this writing.

## 2.6 General commands

The following commands can be used anywhere in a Gmsh ASCII text input file:

*string* = *expression*;

Creates a new expression identifier *string*, or affects *expression* to an existing expression identifier. Eleven expression identifiers are predefined (hardcoded in Gmsh’s parser):

**Pi**              Returns 3.1415926535897932.

**GMSH\_MAJOR\_VERSION**

Returns Gmsh’s major version number.

**GMSH\_MINOR\_VERSION**

Returns Gmsh’s minor version number.

**GMSH\_PATCH\_VERSION**

Returns Gmsh’s patch version number.

**MPI\_Size**      Returns the number of processors on which Gmsh is running (always 1, except if you compiled Gmsh’s parallel extensions).

<b>MPI_Rank</b>	Returns the rank of the current processor.
<b>newp</b>	Returns the next available point number. As explained in <a href="#">Chapter 3 [Geometry module], page 39</a> , a unique number must be associated with every geometrical point: <b>newp</b> permits to know the highest number already attributed (plus one). This is mostly useful when writing user-defined functions (see <a href="#">Section 2.4 [User-defined functions], page 14</a> ) or general geometric primitives, when one does not know <i>a priori</i> which numbers are already attributed, and which ones are still available.
<b>newl</b>	Returns the next available line number.
<b>news</b>	Returns the next available surface number.
<b>newv</b>	Returns the next available volume number.
<b>newll</b>	Returns the next available line loop number.
<b>news1</b>	Returns the next available surface loop number.
<b>newreg</b>	Returns the next available region number. That is, <b>newreg</b> returns the maximum of <b>newp</b> , <b>newl</b> , <b>news</b> , <b>newv</b> and all physical entity numbers <sup>3</sup> .

*string* [ ] = { };

Creates a new expression list identifier *string*[] with an empty list.

*string* [ ] = { *expression-list* };

Creates a new expression list identifier *string*[] with the list *expression-list*, or affects *expression-list* to an existing expression list identifier. (Remember the remark we made when we defined *expression-lists*: the braces enclosing an *expression-list* are optional if the list only contains a single item.)

*string* [ { *expression-list* } ] = { *expression-list* };

Affects each item in the right hand side *expression-list* to the elements (indexed by the left hand side *expression-list*) of an existing expression list identifier. The two *expression-lists* must contain the same number of items.

*real-option* = *expression*;

Affects *expression* to a real option.

*char-option* = *char-expression*;

Affects *char-expression* to a character option.

*color-option* = *color-expression*;

Affects *color-expression* to a color option.

*string* | *real-option* += *expression*;

Adds and affects *expression* to an existing expression identifier or to a real option.

---

<sup>3</sup> For compatibility purposes, the behavior of **newl**, **news**, **newv** and **newreg** can be modified with the **Geometry.OldNewReg** option (see [Section 3.2 \[Geometry options\], page 44](#)).

*string | real-option -= expression;*  
          Subtracts and affects *expression* to an existing expression identifier or to a real option.

*string | real-option \*= expression;*  
          Multiplies and affects *expression* to an existing expression identifier or to a real option.

*string | real-option /= expression;*  
          Divides and affects *expression* to an existing expression identifier or to a real option.

*string [ ] += { expression-list };*  
          Appends *expression-list* to an existing expression list or creates a new expression list with *expression-list*).

*string [ { expression-list } ] += { expression-list };*  
          Adds and affects, item per item, the right hand side *expression-list* to an existing expression list identifier.

*string [ { expression-list } ] -= { expression-list };*  
          Subtracts and affects, item per item, the right hand side *expression-list* to an existing expression list identifier.

*string [ { expression-list } ] \*= { expression-list };*  
          Multiplies and affects, item per item, the right hand side *expression-list* to an existing expression list identifier.

*string [ { expression-list } ] /= { expression-list };*  
          Divides and affects, item per item, the right hand side *expression-list* to an existing expression list identifier.

**Exit;**       Aborts the current script.

**Printf ( char-expression , expression-list );**  
          Prints a character expression in the information window and/or on the terminal.  
          **Printf** is equivalent to the **printf** C function: *char-expression* is a format string that can contain formatting characters (%f, %e, etc.). Note that all *expressions* are evaluated as floating point values in Gmsh (see [Section 2.1 \[Expressions\], page 9](#)), so that only valid floating point formatting characters make sense in *char-expression*. See [Section 7.5 \[t5.geo\], page 122](#), for an example of the use of **Printf**.

**Merge** *char-expression*;  
          Merges a file named *char-expression*. This command is equivalent to the ‘File->Merge’ menu in the graphical user interface. If the path in *char-expression* is not absolute, *char-expression* is appended to the path of the current file.

**Draw;**       Redraws the scene.

**BoundingBox;**  
          Recomputes the bounding box of the scene (which is normally computed only after new geometrical entities are added or after files are included or merged).  
          The bounding box is computed as follows:

1. If there is a mesh (i.e., at least one mesh vertex), the bounding box is taken as the box enclosing all the mesh vertices;
2. If there is no mesh but there is a geometry (i.e., at least one geometrical point), the bounding box is taken as the box enclosing all the geometrical points;
3. If there is no mesh and no geometry, but there are some post-processing views, the bounding box is taken as the box enclosing all the primitives in the views.

**BoundingBox { *expression*, *expression*, *expression*, *expression*, *expression*, *expression* };**  
Forces the bounding box of the scene to the given *expressions* (X min, X max, Y min, Y max, Z min, Z max).

**Delete All;**

Deletes all geometrical entities and all currently loaded meshes.

**Delete Physicals;**

Deletes all physical groups.

**Print *char-expression*;**

Prints the graphic window in a file named *char-expression*, using the current **Print.Format** (see [Section 2.7 \[General options\], page 18](#)). If the path in *char-expression* is not absolute, *char-expression* is appended to the path of the current file.

**Sleep *expression*;**

Suspends the execution of Gmsh during *expression* seconds.

**Status *expression*;**

Forces mesh status to *expression*.

**System *char-expression*;**

Executes a system call.

**Include *char-expression*;**

Includes the file named *char-expression* at the current position in the input file. The include command should be given on a line of its own. If the path in *char-expression* is not absolute, *char-expression* is appended to the path of the current file.

## 2.7 General options

Here is the list of the general *char-options*, *real-options* and *color-options* (in that order—check the default values to see the actual types). Most of these options are accessible in the graphical user interface, but not all of them. When running Gmsh interactively, changing an option in the ASCII text input file will modify the option in the GUI in real time. This permits for example to resize the graphical window in a script, or to interact with animations in the script and in the GUI at the same time.

Gmsh's default behavior is to save some of these options in a per-user “session resource” file (**General.SessionFileName**) every time Gmsh is shut down. This permits for example to

automatically remember the size and location of the windows or which fonts to use. Other options can be saved in a per-user “option” file (`General.OptionsFileName`), automatically loaded by Gmsh every time it starts up, by using the ‘Tools->Options->Save’ menu.

**General.AxesFormatX**

Number format for X-axis (in standard C form)  
Default value: "%.3g"  
Saved in: `General.OptionsFileName`

**General.AxesFormatY**

Number format for Y-axis (in standard C form)  
Default value: "%.3g"  
Saved in: `General.OptionsFileName`

**General.AxesFormatZ**

Number format for Z-axis (in standard C form)  
Default value: "%.3g"  
Saved in: `General.OptionsFileName`

**General.AxesLabelX**

X-axis label  
Default value: ""  
Saved in: `General.OptionsFileName`

**General.AxesLabelY**

Y-axis label  
Default value: ""  
Saved in: `General.OptionsFileName`

**General.AxesLabelZ**

Z-axis label  
Default value: ""  
Saved in: `General.OptionsFileName`

**General.DefaultFileName**

Default project file name  
Default value: "untitled.geo"  
Saved in: `General.OptionsFileName`

**General.Display**

X server to use (only for Unix versions)  
Default value: ""  
Saved in: -

**General.ErrorFileName**

File into which the log is saved if a fatal error occurs  
Default value: ".gmsh-errors"  
Saved in: `General.OptionsFileName`

**General.FileName**

Current project file name (read-only)  
Default value: ""  
Saved in: -

**General.GraphicsFont**

Font used in the graphic window  
Default value: "Helvetica"  
Saved in: General.OptionsFileName

**General.OptionsFileName**

Option file created with 'Tools->Options->Save'; automatically read on startup  
Default value: ".gmsh-options"  
Saved in: General.SessionFileName

**General.SessionFileName**

Option file into which session specific information is saved; automatically read on startup  
Default value: ".gmshrc"  
Saved in: -

**General.Scheme**

FLTK user interface scheme (try e.g. plastic)  
Default value: ""  
Saved in: General.OptionsFileName

**General.TextEditor**

System command to launch a text editor  
Default value: "open -e %s"  
Saved in: General.OptionsFileName

**General.TmpFileName**

Temporary file used by the geometry module  
Default value: ".gmsh-tmp"  
Saved in: General.SessionFileName

**General.WebBrowser**

System command to launch a web browser  
Default value: "open %s"  
Saved in: General.OptionsFileName

**General.AlphaBlending**

Enable alpha blending (transparency) in post-processing views  
Default value: 1  
Saved in: General.OptionsFileName

**General.ArrowHeadRadius**

Relative radius of arrow head  
Default value: 0.12  
Saved in: General.OptionsFileName

**General.ArrowStemLength**

Relative length of arrow stem  
Default value: 0.56  
Saved in: General.OptionsFileName

**General.ArrowStemRadius**

Relative radius of arrow stem

Default value: 0.02

Saved in: **General.OptionsFileName**

**General.Axes**

Axes (0=none, 1=simple axes, 2=box, 3=full grid, 4=open grid, 5=ruler)

Default value: 0

Saved in: **General.OptionsFileName**

**General.AxesAutoPosition**

Position the axes automatically

Default value: 1

Saved in: **General.OptionsFileName**

**General.AxesMaxX**

Maximum X-axis coordinate

Default value: 1

Saved in: **General.OptionsFileName**

**General.AxesMaxY**

Maximum Y-axis coordinate

Default value: 1

Saved in: **General.OptionsFileName**

**General.AxesMaxZ**

Maximum Z-axis coordinate

Default value: 1

Saved in: **General.OptionsFileName**

**General.AxesMinX**

Minimum X-axis coordinate

Default value: 0

Saved in: **General.OptionsFileName**

**General.AxesMinY**

Minimum Y-axis coordinate

Default value: 0

Saved in: **General.OptionsFileName**

**General.AxesMinZ**

Minimum Z-axis coordinate

Default value: 0

Saved in: **General.OptionsFileName**

**General.AxesTicsX**

Number of tics on the X-axis

Default value: 5

Saved in: **General.OptionsFileName**

**General.AxesTicsY**

Number of tics on the Y-axis

Default value: 5

Saved in: General.OptionsFileName

**General.AxesTicsZ**

Number of tics on the Z-axis

Default value: 5

Saved in: General.OptionsFileName

**General.BackgroundGradient**

Draw background gradient (0=none, 1=vertical, 2=horizontal, 3=radial)

Default value: 1

Saved in: General.OptionsFileName

**General.Clip0**

Enable clipping plane 0 (Geometry=2^0, Mesh=2^1, View[i]=2^(2+i))

Default value: 0

Saved in: -

**General.Clip0A**

First coefficient in equation for clipping plane 0 ('A' in 'AX+BY+CZ+D=0')

Default value: 1

Saved in: -

**General.Clip0B**

Second coefficient in equation for clipping plane 0 ('B' in 'AX+BY+CZ+D=0')

Default value: 0

Saved in: -

**General.Clip0C**

Third coefficient in equation for clipping plane 0 ('C' in 'AX+BY+CZ+D=0')

Default value: 0

Saved in: -

**General.Clip0D**

Fourth coefficient in equation for clipping plane 0 ('D' in 'AX+BY+CZ+D=0')

Default value: 0

Saved in: -

**General.Clip1**

Enable clipping plane 1 (Geometry=2^0, Mesh=2^1, View[i]=2^(2+i))

Default value: 0

Saved in: -

**General.Clip1A**

First coefficient in equation for clipping plane 1

Default value: 1

Saved in: -

**General.Clip1B**

Second coefficient in equation for clipping plane 1

Default value: 0

Saved in: -

**General.Clip1C**

Third coefficient in equation for clipping plane 1

Default value: 0

Saved in: -

**General.Clip1D**

Fourth coefficient in equation for clipping plane 1

Default value: 0

Saved in: -

**General.Clip2**

Enable clipping plane 2 (Geometry=2^0, Mesh=2^1, View[i]=2^(2+i))

Default value: 0

Saved in: -

**General.Clip2A**

First coefficient in equation for clipping plane 2

Default value: 1

Saved in: -

**General.Clip2B**

Second coefficient in equation for clipping plane 2

Default value: 0

Saved in: -

**General.Clip2C**

Third coefficient in equation for clipping plane 2

Default value: 0

Saved in: -

**General.Clip2D**

Fourth coefficient in equation for clipping plane 2

Default value: 0

Saved in: -

**General.Clip3**

Enable clipping plane 3 (Geometry=2^0, Mesh=2^1, View[i]=2^(2+i))

Default value: 0

Saved in: -

**General.Clip3A**

First coefficient in equation for clipping plane 3

Default value: 1

Saved in: -

**General.Clip3B**

Second coefficient in equation for clipping plane 3  
Default value: 0  
Saved in: -

**General.Clip3C**

Third coefficient in equation for clipping plane 3  
Default value: 0  
Saved in: -

**General.Clip3D**

Fourth coefficient in equation for clipping plane 3  
Default value: 0  
Saved in: -

**General.Clip4**

Enable clipping plane 4 (Geometry=2^0, Mesh=2^1, View[i]=2^(2+i))  
Default value: 0  
Saved in: -

**General.Clip4A**

First coefficient in equation for clipping plane 4  
Default value: 1  
Saved in: -

**General.Clip4B**

Second coefficient in equation for clipping plane 4  
Default value: 0  
Saved in: -

**General.Clip4C**

Third coefficient in equation for clipping plane 4  
Default value: 0  
Saved in: -

**General.Clip4D**

Fourth coefficient in equation for clipping plane 4  
Default value: 0  
Saved in: -

**General.Clip5**

Enable clipping plane 5 (Geometry=2^0, Mesh=2^1, View[i]=2^(2+i))  
Default value: 0  
Saved in: -

**General.Clip5A**

First coefficient in equation for clipping plane 5  
Default value: 1  
Saved in: -

**General.Clip5B**

Second coefficient in equation for clipping plane 5  
Default value: 0  
Saved in: -

**General.Clip5C**

Third coefficient in equation for clipping plane 5  
Default value: 0  
Saved in: -

**General.Clip5D**

Fourth coefficient in equation for clipping plane 5  
Default value: 0  
Saved in: -

**General.ClipFactor**

Near and far clipping plane distance factor (decrease value for better z-buffer resolution)  
Default value: 5  
Saved in: -

**General.ClipPositionX**

Horizontal position (in pixels) of the upper left corner of the clipping planes window  
Default value: 650  
Saved in: **General.SessionFileName**

**General.ClipPositionY**

Vertical position (in pixels) of the upper left corner of the clipping planes window  
Default value: 150  
Saved in: **General.SessionFileName**

**General.ColorScheme**

Default color scheme (0, 1 or 2)  
Default value: 0  
Saved in: **General.OptionsFileName**

**General.ConfirmOverwrite**

Ask confirmation before overwriting files?  
Default value: 1  
Saved in: **General.OptionsFileName**

**General.ContextPositionX**

Horizontal position (in pixels) of the upper left corner of the contextual windows  
Default value: 650  
Saved in: **General.SessionFileName**

**General.ContextPositionY**

Vertical position (in pixels) of the upper left corner of the contextual windows  
Default value: 150  
Saved in: **General.SessionFileName**

**General.DoubleBuffer**

Use a double buffered graphic window (on Unix, should be set to 0 when working on a remote host without GLX)

Default value: 1

Saved in: General.OptionsFileName

**General.DrawBoundingBoxes**

Draw bounding boxes

Default value: 0

Saved in: General.OptionsFileName

**General.ExpertMode**

Enable expert mode (to disable all the messages meant for inexperienced users)

Default value: 0

Saved in: General.OptionsFileName

**General.FastRedraw**

Draw simplified model while rotating, panning and zooming

Default value: 0

Saved in: General.OptionsFileName

**General.FileChooserPositionX**

Horizontal position (in pixels) of the upper left corner of the file chooser windows

Default value: 200

Saved in: General.SessionFileName

**General.FileChooserPositionY**

Vertical position (in pixels) of the upper left corner of the file chooser windows

Default value: 200

Saved in: General.SessionFileName

**General.FontSize**

Size of the font in the user interface

Default value: 12

Saved in: General.OptionsFileName

**General.GraphicsFontSize**

Size of the font in the graphic window

Default value: 14

Saved in: General.OptionsFileName

**General.GraphicsHeight**

Height (in pixels) of the graphic window

Default value: 600

Saved in: General.SessionFileName

**General.GraphicsPositionX**

Horizontal position (in pixels) of the upper left corner of the graphic window

Default value: 50

Saved in: General.SessionFileName

**General.GraphicsPositionY**  
Vertical position (in pixels) of the upper left corner of the graphic window  
Default value: 50  
Saved in: **General.SessionFileName**

**General.GraphicsWidth**  
Width (in pixels) of the graphic window  
Default value: 600  
Saved in: **General.SessionFileName**

**General.InitialModule**  
Module launched on startup (0=automatic, 1=geometry, 2=mesh, 3=solver, 4=post-processing)  
Default value: 0  
Saved in: **General.OptionsFileName**

**General.Light0**  
Enable light source 0  
Default value: 1  
Saved in: **General.OptionsFileName**

**General.Light0X**  
X position of light source 0  
Default value: 0.65  
Saved in: **General.OptionsFileName**

**General.Light0Y**  
Y position of light source 0  
Default value: 0.65  
Saved in: **General.OptionsFileName**

**General.Light0Z**  
Z position of light source 0  
Default value: 1  
Saved in: **General.OptionsFileName**

**General.Light0W**  
Divisor of the X, Y and Z coordinates of light source 0 (W=0 means infinitely far source)  
Default value: 0  
Saved in: **General.OptionsFileName**

**General.Light1**  
Enable light source 1  
Default value: 0  
Saved in: **General.OptionsFileName**

**General.Light1X**  
X position of light source 1  
Default value: 0.5  
Saved in: **General.OptionsFileName**

**General.Light1Y**  
Y position of light source 1  
Default value: 0.3  
Saved in: General.OptionsFileName

**General.Light1Z**  
Z position of light source 1  
Default value: 1  
Saved in: General.OptionsFileName

**General.Light1W**  
Divisor of the X, Y and Z coordinates of light source 1 (W=0 means infinitely far source)  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light2**  
Enable light source 2  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light2X**  
X position of light source 2  
Default value: 0.5  
Saved in: General.OptionsFileName

**General.Light2Y**  
Y position of light source 2  
Default value: 0.3  
Saved in: General.OptionsFileName

**General.Light2Z**  
Z position of light source 2  
Default value: 1  
Saved in: General.OptionsFileName

**General.Light2W**  
Divisor of the X, Y and Z coordinates of light source 2 (W=0 means infinitely far source)  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light3**  
Enable light source 3  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light3X**  
X position of light source 3  
Default value: 0.5  
Saved in: General.OptionsFileName

**General.Light3Y**  
Y position of light source 3  
Default value: 0.3  
Saved in: General.OptionsFileName

**General.Light3Z**  
Z position of light source 3  
Default value: 1  
Saved in: General.OptionsFileName

**General.Light3W**  
Divisor of the X, Y and Z coordinates of light source 3 (W=0 means infinitely far source)  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light4**  
Enable light source 4  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light4X**  
X position of light source 4  
Default value: 0.5  
Saved in: General.OptionsFileName

**General.Light4Y**  
Y position of light source 4  
Default value: 0.3  
Saved in: General.OptionsFileName

**General.Light4Z**  
Z position of light source 4  
Default value: 1  
Saved in: General.OptionsFileName

**General.Light4W**  
Divisor of the X, Y and Z coordinates of light source 4 (W=0 means infinitely far source)  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light5**  
Enable light source 5  
Default value: 0  
Saved in: General.OptionsFileName

**General.Light5X**  
X position of light source 5  
Default value: 0.5  
Saved in: General.OptionsFileName

**General.Light5Y**  
Y position of light source 5  
Default value: 0.3  
Saved in: General.OptionsFileName

**General.Light5Z**  
Z position of light source 5  
Default value: 1  
Saved in: General.OptionsFileName

**General.Light5W**  
Divisor of the X, Y and Z coordinates of light source 5 (W=0 means infinitely far source)  
Default value: 0  
Saved in: General.OptionsFileName

**General.LineWidth**  
Display width of lines (in pixels)  
Default value: 1  
Saved in: General.OptionsFileName

**General.ManipulatorPositionX**  
Horizontal position (in pixels) of the upper left corner of the manipulator window  
Default value: 650  
Saved in: General.SessionFileName

**General.ManipulatorPositionY**  
Vertical position (in pixels) of the upper left corner of the manipulator window  
Default value: 150  
Saved in: General.SessionFileName

**General.MenuPositionX**  
Horizontal position (in pixels) of the upper left corner of the menu window  
Default value: 800  
Saved in: General.SessionFileName

**General.MenuPositionY**  
Vertical position (in pixels) of the upper left corner of the menu window  
Default value: 50  
Saved in: General.SessionFileName

**General.MessagePositionX**  
Horizontal position (in pixels) of the upper left corner of the message window  
Default value: 650  
Saved in: General.SessionFileName

**General.MessagePositionY**  
Vertical position (in pixels) of the upper left corner of the message window  
Default value: 150  
Saved in: General.SessionFileName

**General.MessageHeight**

Height (in pixels) of the message window  
Default value: 350  
Saved in: **General.SessionFileName**

**General.MessageWidth**

Width (in pixels) of the message window  
Default value: 450  
Saved in: **General.SessionFileName**

**General.MouseSelection**

Mouse selection mode (0=none, 1=no hover, 2=full)  
Default value: 2  
Saved in: **General.OptionsFileName**

**General.NoPopup**

Disable interactive dialog windows in scripts (and use default values instead)  
Default value: 0  
Saved in: **General.OptionsFileName**

**General.OptionsPositionX**

Horizontal position (in pixels) of the upper left corner of the option window  
Default value: 650  
Saved in: **General.SessionFileName**

**General.OptionsPositionY**

Vertical position (in pixels) of the upper left corner of the option window  
Default value: 150  
Saved in: **General.SessionFileName**

**General.Orthographic**

Orthographic projection mode (0=perspective projection)  
Default value: 1  
Saved in: **General.OptionsFileName**

**General.PointSize**

Display size of points (in pixels)  
Default value: 3  
Saved in: **General.OptionsFileName**

**General.PolygonOffsetAlwaysOn**

Always apply polygon offset, instead of trying to detect when it is required  
Default value: 0  
Saved in: **General.OptionsFileName**

**General.PolygonOffsetFactor**

Polygon offset factor (offset = factor \* DZ + r \* units)  
Default value: 1  
Saved in: **General.OptionsFileName**

**General.PolygonOffsetUnits**  
Polygon offset units (offset = factor \* DZ + r \* units)  
Default value: 1  
Saved in: General.OptionsFileName

**General.QuadricSubdivisions**  
Number of subdivisions used to draw points or lines as spheres or cylinders  
Default value: 8  
Saved in: General.OptionsFileName

**General.RotationX**  
First Euler angle (used if Trackball=0)  
Default value: 0  
Saved in: -

**General.RotationY**  
Second Euler angle (used if Trackball=0)  
Default value: 0  
Saved in: -

**General.RotationZ**  
Third Euler angle (used if Trackball=0)  
Default value: 0  
Saved in: -

**General.RotationCenterGravity**  
Rotate around the (pseudo) center of mass instead of (RotationCenterX, RotationCenterY, RotationCenterZ)  
Default value: 1  
Saved in: General.OptionsFileName

**General.RotationCenterX**  
X coordinate of the center of rotation  
Default value: 0  
Saved in: -

**General.RotationCenterY**  
Y coordinate of the center of rotation  
Default value: 0  
Saved in: -

**General.RotationCenterZ**  
Z coordinate of the center of rotation  
Default value: 0  
Saved in: -

**General.SaveOptions**  
Automatically save current options in General.OptionsFileName each time you quit Gmsh?  
Default value: 0  
Saved in: General.SessionFileName

**General.SaveSession**

Automatically save session specific information in General.SessionFileName each time you quit Gmsh?

Default value: 1

Saved in: General.SessionFileName

**General.ScaleX**

X-axis scale factor

Default value: 1

Saved in: -

**General.ScaleY**

Y-axis scale factor

Default value: 1

Saved in: -

**General.ScaleZ**

Z-axis scale factor

Default value: 1

Saved in: -

**General.Shininess**

Material shininess

Default value: 0.4

Saved in: General.OptionsFileName

**General.ShininessExponent**

Material shininess exponent (between 0 and 128)

Default value: 40

Saved in: General.OptionsFileName

**General.SmallAxes**

Display the small axes

Default value: 1

Saved in: General.OptionsFileName

**General.SmallAxesPositionX**

X position of small axes (use negative values for right alignment)

Default value: -60

Saved in: General.OptionsFileName

**General.SmallAxesPositionY**

Y position of small axes (use negative values for bottom alignment)

Default value: -40

Saved in: General.OptionsFileName

**General.SmallAxesSize**

Size (in pixels) of small axes

Default value: 30

Saved in: General.OptionsFileName

**General.SolverPositionX**

Horizontal position (in pixels) of the upper left corner of the solver windows  
Default value: 650  
Saved in: General.SessionFileName

**General.SolverPositionY**

Vertical position (in pixels) of the upper left corner of the solver windows  
Default value: 150  
Saved in: General.SessionFileName

**General.StatisticsPositionX**

Horizontal position (in pixels) of the upper left corner of the statistic window  
Default value: 650  
Saved in: General.SessionFileName

**General.StatisticsPositionY**

Vertical position (in pixels) of the upper left corner of the statistic window  
Default value: 150  
Saved in: General.SessionFileName

**General.SystemMenuBar**

Use the system menu bar on Mac OS X?  
Default value: 1  
Saved in: General.SessionFileName

**General.Terminal**

Should information be printed on the terminal (if available)?  
Default value: 0  
Saved in: General.OptionsFileName

**General.Tooltips**

Show tooltips in the user interface  
Default value: 1  
Saved in: General.OptionsFileName

**General.Trackbar**

Use trackball rotation mode  
Default value: 1  
Saved in: General.OptionsFileName

**General.TrackbarQuaternion0**

First trackball quaternion component (used if General.Trackbar=1)  
Default value: 0  
Saved in: -

**General.TrackbarQuaternion1**

Second trackball quaternion component (used if General.Trackbar=1)  
Default value: 0  
Saved in: -

**General.TrackballQuaternion2**

Third trackball quaternion component (used if General.Trackball=1)

Default value: 0

Saved in: -

**General.TrackballQuaternion3**

Fourth trackball quaternion component (used if General.Trackball=1)

Default value: 1

Saved in: -

**General.TranslationX**

X-axis translation (in model units)

Default value: 0

Saved in: -

**General.TranslationY**

Y-axis translation (in model units)

Default value: 0

Saved in: -

**General.TranslationZ**

Z-axis translation (in model units)

Default value: 0

Saved in: -

**General.VectorType**

Default vector display type (for normals, etc.)

Default value: 4

Saved in: **General.OptionsFileName**

**General.Verbosity**

Level of information printed during processing (0=no information)

Default value: 3

Saved in: **General.OptionsFileName**

**General.VisibilityMode**

Default mode for the visibility browser (0=Geometry+Mesh, 1=Geometry, 2=Mesh)

Default value: 0

Saved in: **General.OptionsFileName**

**General.VisibilityPositionX**

Horizontal position (in pixels) of the upper left corner of the visibility window

Default value: 650

Saved in: **General.SessionFileName**

**General.VisibilityPositionY**

Vertical position (in pixels) of the upper left corner of the visibility window

Default value: 150

Saved in: **General.SessionFileName**

**General.ZoomFactor**  
Middle mouse button zoom acceleration factor  
Default value: 4  
Saved in: General.OptionsFileName

**General.Color.Background**  
Background color  
Default value: {0,0,0}  
Saved in: General.OptionsFileName

**General.Color.BackgroundGradient**  
Background gradient color  
Default value: {0,0,125}  
Saved in: General.OptionsFileName

**General.Color.Foreground**  
Foreground color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**General.Color.Text**  
Text color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**General.Color.Axes**  
Axes color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**General.Color.SmallAxes**  
Small axes color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**General.Color.AmbientLight**  
Ambient light color  
Default value: {25,25,25}  
Saved in: General.OptionsFileName

**General.Color.DiffuseLight**  
Diffuse light color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**General.Color.SpecularLight**  
Specular light color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**Print.EpsBackground**  
Save image background in PostScript/PDF output  
Default value: 1  
Saved in: `General.OptionsFileName`

**Print.EpsBestRoot**  
Try to minimize primitive splitting in BSP tree sorted PostScript/PDF output  
Default value: 1  
Saved in: `General.OptionsFileName`

**Print.EpsCompress**  
Compress PostScript/PDF output using zlib  
Default value: 0  
Saved in: `General.OptionsFileName`

**Print.EpsLineWidthFactor**  
Width factor for lines in PostScript/PDF output  
Default value: 0.5  
Saved in: `General.OptionsFileName`

**Print.EpsOcclusionCulling**  
Cull occluded primitives (to reduce PostScript/PDF file size)  
Default value: 1  
Saved in: `General.OptionsFileName`

**Print.EpsPointSizeFactor**  
Size factor for points in PostScript/PDF output  
Default value: 1  
Saved in: `General.OptionsFileName`

**Print.EpsPS3Shading**  
Enable PostScript Level 3 shading  
Default value: 0  
Saved in: `General.OptionsFileName`

**Print.EpsQuality**  
PostScript/PDF quality (0=bitmap, 1=vector (simple sort), 2=vector (accurate sort))  
Default value: 1  
Saved in: `General.OptionsFileName`

**Print.Format**  
File format (10=automatic)  
Default value: 10  
Saved in: `General.OptionsFileName`

**Print.GifDither**  
Apply dithering to GIF output  
Default value: 0  
Saved in: `General.OptionsFileName`

```
Print.GifInterlace
    Interlace GIF output
    Default value: 0
    Saved in: General.OptionsFileName

Print.GifSort
    Sort the colormap in GIF output
    Default value: 1
    Saved in: General.OptionsFileName

Print.GifTransparent
    Output transparent GIF image
    Default value: 0
    Saved in: General.OptionsFileName

Print.JpegQuality
    JPEG quality (between 1 and 100)
    Default value: 100
    Saved in: General.OptionsFileName

Print.JpegSmoothing
    JPEG smoothing (between 0 and 100)
    Default value: 0
    Saved in: General.OptionsFileName
```

## 3 Geometry module

Gmsh's geometry module provides a simple CAD engine, using a bottom-up (boundary representation) approach: you need to first define points (using the `Point` command: see below), then lines (using `Line`, `Circle`, `Spline`, ..., commands or by extruding points), then surfaces (using for example the `Plane Surface` or `Ruled Surface` commands, or by extruding lines), and finally volumes (using the `Volume` command or by extruding surfaces). These geometrical entities are called “elementary” in Gmsh's jargon, and are assigned identification numbers when they are created:

1. each elementary point must possess a unique identification number;
2. each elementary line must possess a unique identification number;
3. each elementary surface must possess a unique identification number;
4. each elementary volume must possess a unique identification number.

Elementary geometrical entities can then be manipulated in various ways, for example using the `Translate`, `Rotate`, `Scale` or `Symmetry` commands.

Compound groups of elementary geometrical entities can also be defined and are called “physical” entities. These physical entities cannot be modified by geometry commands: their only purpose is to assemble elementary entities into larger groups, possibly modifying their orientation, so that they can be referred to by the mesh module as single entities. As is the case with elementary entities, each physical point, physical line, physical surface or physical volume must be assigned a unique identification number. See [Chapter 4 \[Mesh module\]](#), page 49, for more information about how physical entities affect the way meshes are saved.

### 3.1 Geometry commands

The next subsections describe all the available geometry commands. These commands can be used anywhere in a Gmsh ASCII text input file. Note that the following general syntax rule is followed for the definition of geometrical entities: “If an *expression* defines a new entity, it is enclosed between parentheses. If an *expression* refers to a previously defined entity, it is enclosed between braces.”

#### 3.1.1 Points

`Point ( expression ) = { expression, expression, expression, expression };`

Creates an elementary point. The *expression* inside the parentheses is the point's identification number; the three first *expressions* inside the braces on the right hand side give the three X, Y and Z coordinates of the point in the three-dimensional Euclidean space; the last *expression* sets the characteristic mesh length at that point. See [Section 4.2.1 \[Characteristic lengths\]](#), page 50, for more information about how this characteristic length information is used in the meshing process.

`Physical Point ( expression ) = { expression-list };`

Creates a physical point. The *expression* inside the parentheses is the physical point's identification number; the *expression-list* on the right hand side should

contain the identification numbers of all the elementary points that need to be grouped inside the physical point.

### 3.1.2 Lines

**Bezier** ( *expression* ) = { *expression-list* };

Creates a Bezier curve. The *expression* inside the parentheses is the Bezier curve's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the curve's control points.

**BSpline** ( *expression* ) = { *expression-list* };

Creates a B-spline curve. The *expression* inside the parentheses is the B-spline curve's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the B-spline's control points. Repeating control points has the expected effect.

**Circle** ( *expression* ) = { *expression*, *expression*, *expression* };

Creates a circle arc (strictly) smaller than Pi. The *expression* inside the parentheses is the circle arc's identification number; the first *expression* inside the braces on the right hand side gives the identification number of the start point of the arc; the second *expression* gives the identification number of the center of the circle; the last *expression* gives the identification number of the end point of the arc.

**CatmullRom** ( *expression* ) = { *expression-list* };

**CatmullRom** is a synonym for **Spline**.

**Ellipse** ( *expression* ) = { *expression*, *expression*, *expression*, *expression* };

Creates an ellipse arc. The *expression* inside the parentheses is the ellipse arc's identification number; the first *expression* inside the braces on the right hand side gives the identification number of the start point of the arc; the second *expression* gives the identification number of the center of the ellipse; the third *expression* gives the identification number of any point located on the major axis of the ellipse; the last *expression* gives the identification number of the end point of the arc.

(A deprecated synonym for **Ellipse** is **Ellipsis**.)

**Line** ( *expression* ) = { *expression*, *expression* };

Creates a straight line segment. The *expression* inside the parentheses is the line segment's identification number; the two *expressions* inside the braces on the right hand side give identification numbers of the start and end points of the segment.

**Spline** ( *expression* ) = { *expression-list* };

Creates a spline curve. The *expression* inside the parentheses is the spline's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the spline's control points.

**Line Loop** ( *expression* ) = { *expression-list* };

Creates an oriented line loop. The *expression* inside the parentheses is the line loop's identification number; the *expression-list* on the right hand side should

contain the identification numbers of all the elementary lines that constitute the line loop. A line loop must be a closed loop, and the elementary lines should be ordered and oriented (using negative identification numbers to specify reverse orientation). If the orientation is correct, but the ordering is wrong, Gmsh will actually reorder the list internally to create a consistent loop. Although Gmsh supports it, it is not recommended to specify multiple line loops (or subloops) in a single `Line Loop` command. (Line loops are used to create surfaces: see [Section 3.1.3 \[Surfaces\]](#), page 41.)

`Physical Line ( expression ) = { expression-list };`

Creates a physical line. The *expression* inside the parentheses is the physical line's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the elementary lines that need to be grouped inside the physical line. Specifying negative identification numbers in the *expression-list* will reverse the orientation of the mesh elements belonging to the corresponding elementary lines in the saved mesh.

### 3.1.3 Surfaces

`Plane Surface ( expression ) = { expression-list };`

Creates a plane surface. The *expression* inside the parentheses is the plane surface's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the line loops defining the surface. The first line loop defines the exterior boundary of the surface; all other line loops define holes in the surface. A line loop defining a hole should not have any lines in common with the exterior line loop (in which case it is not a hole, and the two surfaces should be defined separately). Likewise, a line loop defining a hole should not have any lines in common with another line loop defining a hole in the same surface (in which case the two line loops should be combined).

`Ruled Surface ( expression ) = { expression-list };`

Creates a ruled surface, i.e., a surface that can be interpolated using transfinite interpolation. The *expression* inside the parentheses is the ruled surface's identification number; the *expression-list* on the right hand side should be the identification number of a single line loop, composed of either three or four elementary lines.

`Surface Loop ( expression ) = { expression-list };`

Creates a surface loop (a shell). The *expression* inside the parentheses is the surface loop's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the elementary surfaces that constitute the surface loop. A surface loop must always represent a closed shell, and the elementary surfaces should be oriented consistently (using negative identification numbers to specify reverse orientation). (Surface loops are used to create volumes: see [Section 3.1.4 \[Volumes\]](#), page 42.)

`Physical Surface ( expression ) = { expression-list };`

Creates a physical surface. The *expression* inside the parentheses is the physical surface's identification number; the *expression-list* on the right hand side should

contain the identification numbers of all the elementary surfaces that need to be grouped inside the physical surface. Specifying negative identification numbers in the *expression-list* will reverse the orientation of the mesh elements belonging to the corresponding elementary surfaces in the saved mesh.

### 3.1.4 Volumes

**Volume ( *expression* ) = { *expression-list* };**

Creates a volume. The *expression* inside the parentheses is the volume's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the surface loops defining the volume. The first surface loop defines the exterior boundary of the volume; all other surface loops define holes in the volume. A surface loop defining a hole should not have any surfaces in common with the exterior surface loop (in which case it is not a hole, and the two volumes should be defined separately). Likewise, a surface loop defining a hole should not have any surfaces in common with another surface loop defining a hole in the same volume (in which case the two surface loops should be combined).

(A deprecated synonym for **Volume** is **Complex Volume**.)

**Physical Volume ( *expression* ) = { *expression-list* };**

Creates a physical volume. The *expression* inside the parentheses is the physical volume's identification number; the *expression-list* on the right hand side should contain the identification numbers of all the elementary volumes that need to be grouped inside the physical volume.

### 3.1.5 Extrusions

Lines, surfaces and volumes can also be created through extrusion of points, lines and surfaces, respectively. Here is the syntax of the geometrical extrusion commands (go to [Section 4.2.2 \[Structured grids\]](#), page 51, to see how these commands can be extended in order to also extrude the mesh):

*extrude:*

**Extrude { *expression-list* } { *extrude-list* }**

Extrudes all elementary entities (points, lines or surfaces) in *extrude-list* using a translation. The *expression-list* should contain three *expressions* giving the X, Y and Z components of the translation vector.

**Extrude { { *expression-list* } , { *expression-list* } , *expression* } { *extrude-list* }**

Extrudes all elementary entities (points, lines or surfaces) in *extrude-list* using a rotation. The first *expression-list* should contain three *expressions* giving the X, Y and Z direction of the rotation axis; the second *expression-list* should contain three *expressions* giving the X, Y and Z components of any point on this axis; the last *expression* should contain the rotation angle (in radians).

**Extrude** { { *expression-list* } , { *expression-list* } , { *expression-list* } , *expression* } { *extrude-list* }

Extrudes all elementary entities (points, lines or surfaces) in *extrude-list* using a translation combined with a rotation. The first *expression-list* should contain three *expressions* giving the X, Y and Z components of the translation vector; the second *expression-list* should contain three *expressions* giving the X, Y and Z direction of the rotation axis; the third *expression-list* should contain three *expressions* giving the X, Y and Z components of any point on this axis; the last *expression* should contain the rotation angle (in radians).

with

*extrude-list*:

Point | Line | Surface { *expression-list* }; ...

### 3.1.6 Transformations

Geometrical transformations can be applied to elementary entities, or to copies of elementary entities (using the **Duplicata** command: see below). The syntax of the transformation commands is:

*transform*:

**Dilate** { { *expression-list* } , *expression* } { *transform-list* }

Scales all elementary entities (points, lines or surfaces) in *transform-list* by a factor *expression*. The *expression-list* should contain three *expressions* giving the X, Y and Z direction of the homothetic transformation.

**Rotate** { { *expression-list* } , { *expression-list* } , *expression* } { *transform-list* }

Rotates all elementary entities (points, lines or surfaces) in *transform-list* by an angle of *expression* radians. The first *expression-list* should contain three *expressions* giving the X, Y and Z direction of the rotation axis; the second *expression-list* should contain three *expressions* giving the X, Y and Z components of any point on this axis.

**Symmetry** { *expression-list* } { *transform-list* }

Transforms all elementary entities (points, lines or surfaces) symmetrically to a plane. The *expression-list* should contain four *expressions* giving the coefficients of the plane's equation.

**Translate** { *expression-list* } { *transform-list* }

Translates all elementary entities (points, lines or surfaces) in *transform-list*. The *expression-list* should contain three *expressions* giving the X, Y and Z components of the translation vector.

with

*transform-list*:

Point | Line | Surface { *expression-list* }; ... |

**Duplicata** { Point | Line | Surface { *expression-list* } ; ... } |

*transform*

### 3.1.7 Miscellaneous

Here is a list of all other geometry commands currently available:

**Coherence;**

Removes all duplicate elementary geometrical entities (e.g., points having identical coordinates). Note that Gmsh executes the **Coherence** command automatically after each geometrical transformation, unless **Geometry.AutoCoherence** is set to zero (see [Section 3.2 \[Geometry options\], page 44](#)).

**Delete { Point | Line | Surface | Volume { *expression-list* } ; ... }**

Deletes all elementary entities (points, lines, surfaces or volumes) whose identification numbers are given in *expression-list*.

**Hide { Point | Line | Surface | Volume { *expression-list* } ; ... }**

Hide the entities listed in *expression-list*, if **General.VisibilityMode** is set to 0 or 1.

**Hide *char-expression*;**

Hide the entity *char-expression*, if **General.VisibilityMode** is set to 0 or 1 (*char-expression* can for example be "\*").

**Show { Point | Line | Surface | Volume { *expression-list* } ; ... }**

Show the entities listed in *expression-list*, if **General.VisibilityMode** is set to 0 or 1.

**Show *char-expression*;**

Show the entity *char-expression*, if **General.VisibilityMode** is set to 0 or 1 (*char-expression* can for example be "\*").

## 3.2 Geometry options

Geometry options control the behavior of geometry commands, as well as the way geometrical entities are handled in the graphical user interface. For the signification of the ‘Saved in’ field in the following list, see [Section 2.7 \[General options\], page 18](#).

**Geometry.AutoCoherence**

Should all duplicate entities be automatically removed?

Default value: 1

Saved in: **General.OptionsFileName**

**Geometry.CirclePoints**

Number of points used to draw a circle/ellipse

Default value: 20

Saved in: **General.OptionsFileName**

**Geometry.ExtrudeSplinePoints**

Number of control points for splines created during extrusion

Default value: 5

Saved in: **General.OptionsFileName**

**Geometry.Light**

Enable lighting for the geometry  
Default value: 1  
Saved in: `General.OptionsFileName`

**Geometry.Lines**

Display geometry curves?  
Default value: 1  
Saved in: `General.OptionsFileName`

**Geometry.LineNumbers**

Display curve numbers?  
Default value: 0  
Saved in: `General.OptionsFileName`

**Geometry.LineSelectWidth**

Display width of selected lines (in pixels)  
Default value: 2  
Saved in: `General.OptionsFileName`

**Geometry.LineType**

Display lines as solid color segments (0) or 3D cylinders (1)  
Default value: 0  
Saved in: `General.OptionsFileName`

**Geometry.LineWidth**

Display width of lines (in pixels)  
Default value: 2  
Saved in: `General.OptionsFileName`

**Geometry.Normals**

Display size of normal vectors (in pixels)  
Default value: 0  
Saved in: `General.OptionsFileName`

**Geometry.OldCircle**

Use old circle description (compatibility option for old Gmsh geometries)  
Default value: 0  
Saved in: `General.OptionsFileName`

**Geometry.OldNewReg**

Use old newreg definition for geometrical transformations (compatibility option for old Gmsh geometries)  
Default value: 1  
Saved in: `General.OptionsFileName`

**Geometry.Points**

Display geometry points?  
Default value: 1  
Saved in: `General.OptionsFileName`

**Geometry.PointNumbers**  
Display points numbers?  
Default value: 0  
Saved in: General.OptionsFileName

**Geometry.PointSelectSize**  
Display size of selected points (in pixels)  
Default value: 5  
Saved in: General.OptionsFileName

**Geometry.PointSize**  
Display size of points (in pixels)  
Default value: 4  
Saved in: General.OptionsFileName

**Geometry.PointType**  
Display points as solid color dots (0) or 3D spheres (1)  
Default value: 0  
Saved in: General.OptionsFileName

**Geometry.ScalingFactor**  
Global geometry scaling factor  
Default value: 1  
Saved in: General.OptionsFileName

**Geometry.SnapX**  
Snapping grid spacing along the X-axis  
Default value: 0.1  
Saved in: General.OptionsFileName

**Geometry.SnapY**  
Snapping grid spacing along the Y-axis  
Default value: 0.1  
Saved in: General.OptionsFileName

**Geometry.SnapZ**  
Snapping grid spacing along the Z-axis  
Default value: 0.1  
Saved in: General.OptionsFileName

**Geometry.Surfaces**  
Display geometry surfaces?  
Default value: 0  
Saved in: General.OptionsFileName

**Geometry.SurfaceNumbers**  
Display surface numbers?  
Default value: 0  
Saved in: General.OptionsFileName

**Geometry.Tangents**

Display size of tangent vectors (in pixels)

Default value: 0

Saved in: General.OptionsFileName

**Geometry.Volumes**

Display geometry volumes? (not implemented yet)

Default value: 0

Saved in: General.OptionsFileName

**Geometry.VolumeNumbers**

Display volume numbers? (not implemented yet)

Default value: 0

Saved in: General.OptionsFileName

**Geometry.Color.Points**

Normal geometry point color

Default value: {178,182,129}

Saved in: General.OptionsFileName

**Geometry.Color.Lines**

Normal geometry curve color

Default value: {0,0,255}

Saved in: General.OptionsFileName

**Geometry.Color.Surfaces**

Normal geometry surface color

Default value: {128,128,128}

Saved in: General.OptionsFileName

**Geometry.Color.Volumes**

Normal geometry volume color

Default value: {128,128,128}

Saved in: General.OptionsFileName

**Geometry.Color.PointsSelect**

Selected geometry point color

Default value: {255,0,0}

Saved in: General.OptionsFileName

**Geometry.Color.LinesSelect**

Selected geometry curve color

Default value: {255,0,0}

Saved in: General.OptionsFileName

**Geometry.Color.SurfacesSelect**

Selected geometry surface color

Default value: {255,0,0}

Saved in: General.OptionsFileName

```
Geometry.Color.VolumesSelect
    Selected geometry volume color
    Default value: {255,0,0}
    Saved in: General.OptionsFileName

Geometry.Color.Tangents
    Tangent geometry vectors color
    Default value: {255,255,0}
    Saved in: General.OptionsFileName

Geometry.ColorNormals
    Normal geometry vectors color
    Default value: {255,0,0}
    Saved in: General.OptionsFileName
```

## 4 Mesh module

Gmsh’s mesh module regroups several 1D, 2D and 3D mesh algorithms, all producing grids conforming in the sense of finite elements (see [Section 1.2 \[Mesh\], page 3](#)).

The 2D *unstructured* algorithms generate triangles or both triangles and quadrangles (when `Recombine Surface` is used: see [Section 4.2.3 \[Miscellaneous mesh commands\], page 52](#)). The 3D unstructured algorithms only generate tetrahedra.

The 2D *structured* algorithms (transfinite, elliptic and extrusion) generate triangles by default, but quadrangles can be obtained by using the `Recombine` commands (see [Section 4.2.2 \[Structured grids\], page 51](#), and [Section 4.2.3 \[Miscellaneous mesh commands\], page 52](#)). The 3D structured algorithms generate tetrahedra, hexahedra, prisms and pyramids, depending on the type of the surface meshes they are based on.

### 4.1 Elementary vs. physical entities

If only elementary geometrical entities are defined (or if the `Mesh.SaveAll` option is set; see [Section 4.3 \[Mesh options\], page 53](#)), the grid produced by the mesh module will be saved “as is”. That is, all the elements in the grid will be saved to disk using the identification number of the elementary entities they discretize as their region number (see [Section 9.1 \[Gmsh mesh file formats\], page 145](#)). This can sometimes be inconvenient:

- mesh elements cannot be duplicated;
- the orientation of the mesh elements (the ordering of their nodes) is determined entirely by the orientation of their “parent” elementary entities, and cannot be modified;
- elements belonging to different elementary entities cannot be linked as being part of a larger group having a physical or mathematical meaning (like ‘Left wing’, ‘Metallic part’, ‘Dirichlet boundary condition’, . . . ).

To remedy these problems, the geometry module introduces the notion of “physical” entities (see [Chapter 3 \[Geometry module\], page 39](#)). The purpose of physical entities is to assemble elementary entities into larger, possibly overlapping groups, and to control the orientation of the elements in these groups. If physical entities are defined, the output mesh only contains those elements that belong to physical entities. The introduction of such physical entities in large models usually greatly facilitates the manipulation of the model (e.g., using ‘Tools->Visibility’ in the GUI) and the interfacing with external solvers.

### 4.2 Mesh commands

The mesh module commands mostly permit to modify the characteristic lengths and specify structured grid parameters. The actual mesh “actions” (i.e., “mesh the lines”, “mesh the surfaces” and “mesh the volumes”) cannot be specified in the input ASCII text input files. They have to be given either in the GUI or on the command line (see [Chapter 8 \[Running Gmsh\], page 137](#), and [Section 8.3 \[Command-line options\], page 138](#)).

### 4.2.1 Characteristic lengths

The ‘size’ of a mesh element is defined as the length of the segment for a line segment, the radius of the circumscribed circle for a triangle and the radius of the circumscribed sphere for a tetrahedron. There are three main ways to specify the size of the mesh elements for a given geometry:

1. You can specify characteristic lengths at the points of the geometrical model (with the `Point` command: see [Section 3.1.1 \[Points\], page 39](#)). The actual size of the mesh elements will be computed by linearly interpolating these characteristic lengths on the initial mesh (see [Section 1.2 \[Mesh\], page 3](#)). This might sometimes lead to over-refinement in some areas, so that you may have to add “dummy” geometrical entities in the model in order to get the desired element sizes.

This method works with all the algorithms implemented in the mesh module. The final element sizes are of course constrained by the structured algorithms for which the element sizes are explicitly specified (e.g., transfinite and extruded grids: see [Section 4.2.2 \[Structured grids\], page 51](#)).

2. You can use geometrical “attractors”, an elaborate version of the method described in the preceding item: see the definition of the `Attractor` command below.

Attractors only work with the 2D anisotropic algorithm (see the `Mesh.Algorithm` option in [Section 4.3 \[Mesh options\], page 53](#)).

3. You can give Gmsh an explicit background mesh in the form of a scalar post-processing view (see [Section 6.1 \[Post-processing commands\], page 83](#), and [Chapter 9 \[File formats\], page 145](#)) in which the nodal values are the target element sizes. This method is very general but it requires a first (usually rough) mesh and a way to compute the target sizes on this mesh (usually through an error estimation procedure, in an iterative process of mesh adaptation). Note that the target element sizes can be constrained by the characteristic lengths defined in the geometrical model if the `Mesh.ConstrainedBackgroundMesh` option is set. To load a background mesh, you can use the `-bgm` command-line option (see [Section 8.3 \[Command-line options\], page 138](#)), select ‘Apply as background mesh’ in the post-processing view option menu, or use the `Background Mesh` command in a script (see [Section 6.1 \[Post-processing commands\], page 83](#)).

Background meshes are supported by all algorithms except the algorithms based on Netgen.

Here are the mesh commands that are related to the specification of characteristic lengths:

**Attractor Point | Line { expression-list } = { expression, expression, expression };**

Specifies a characteristic length attractor. The *expression-list* should contain the identification numbers of the elementary points or lines to serve as attractors; the two first *expressions* prescribe refinement factors in a coordinate system local to the entities, and the last *expression* a decay factor. This feature is still experimental, and only works with the 2D anisotropic algorithm (see `Mesh.Algorithm` in [Section 4.3 \[Mesh options\], page 53](#)). An example of the use of attractors is given in [Section 7.7 \[t7.geo\], page 131](#).

Please note that attractors are an *experimental* feature (to be considered *at most* alpha-quality...). Use at your own risk.

**Characteristic Length { *expression-list* } = *expression*;**

Modifies the characteristic length of the points whose identification numbers are listed in *expression-list*. The new value is given by *expression*.

### 4.2.2 Structured grids

**Extrude { *expression-list* } { *extrude-list layers* }**

Extrudes both the geometry and the mesh using a translation (see [Section 3.1.5 \[Extrusions\], page 42](#)). The *layers* option determines how the mesh is extruded and has the following syntax:

*layers*:

Layers { { *expression-list* } , < { *expression-list* } , >  
{ *expression-list* } } | Recombine; ...

The first *expression-list* defines how many elements should be created in each extruded layer. The (optional) second *expression-list* assigns a region number to each layer, which, if non-zero, overrides the elementary entity number of the extruded entity. This is useful when there is more than one layer, as the elements in each layer can then be identified in a unique way. If the region number is set to zero, or if the *expression-list* is omitted, the elements are associated with the automatically created elementary geometrical entity (line, surface or volume) created during the extrusion. The last *expression-list* gives the normalized height of each layer (the list should contain a sequence of *n* numbers  $0 < h1 < h2 < \dots < hn \leq 1$ ). See [Section 7.3 \[t3.geo\], page 117](#), for an example.

For line extrusions, the **Recombine** option will recombine triangles into quadrangles when possible. For surface extrusions, the **Recombine** option will recombine tetrahedra into prisms, hexahedra or pyramids.

**Extrude { { *expression-list* } , { *expression-list* } , *expression* } { *extrude-list layers* }**

Extrudes both the geometry and the mesh using a rotation (see [Section 3.1.5 \[Extrusions\], page 42](#)). The *layers* option is defined as above.

**Extrude { { *expression-list* } , { *expression-list* } , { *expression-list* } , *expression* } { *extrude-list layers* }**

Extrudes both the geometry and the mesh using a combined translation and rotation (see [Section 3.1.5 \[Extrusions\], page 42](#)). The *layers* option is defined as above.

**Transfinite Line { *expression-list* } = *expression* < Using Progression | Bump  
*expression* >;**

Selects the lines in *expression-list* to be meshed with the 1D transfinite algorithm. The *expression* on the right hand side gives the number of nodes that will be created on the line (this overrides any characteristic length prescription—see [Section 4.2.1 \[Characteristic lengths\], page 50](#)). The optional argument ‘Using Progression *expression*’ instructs the transfinite algorithm to distribute the nodes following a geometric progression (Progression 2 meaning for example that each line element in the series will be twice as long as the preceding

one). The optional argument ‘Using Bump expression’ instructs the transfinite algorithm to distribute the nodes with a refinement at both ends of the line.  
 (A deprecated synonym for Progression is Power.)

**Transfinite Surface** { *expression* } = { *expression-list* } < Left | Right | Alternate >  
 ;

Selects the surface *expression* to be meshed with the 2D transfinite algorithm (the surface can only have three or four sides). The *expression-list* should contain the identification numbers of the points on the boundary of the surface. The ordering of these point numbers defines the ordering and orientation of the mesh elements, and should thus follow the node ordering for triangles or quadrangles given in [Section 9.3 \[Gmsh node ordering\], page 155](#). The optional argument specifies the way the triangles are oriented when the mesh is not recombined.

**Transfinite Volume** { *expression* } = { *expression-list* } ;

Selects the volume *expression* to be meshed with the 3D transfinite algorithm (the volume can only have six or eight faces). The *expression-list* should contain the identification numbers of the points on the boundary of the volume. The ordering of these point numbers defines the ordering and orientation of the mesh elements, and should thus follow the node ordering for prisms or hexahedra given in [Section 9.3 \[Gmsh node ordering\], page 155](#).

**Elliptic Surface** { *expression* } = { *expression-list* } ;

Selects the surface *expression* to be meshed with the 2D elliptic algorithm (the surface can only have four sides). The *expression-list* should contain the identification numbers of the points on the boundary of the surface. The ordering of these point numbers defines the ordering and orientation of the mesh elements, and should thus follow the node ordering for triangles or quadrangles given in [Section 9.3 \[Gmsh node ordering\], page 155](#).

### 4.2.3 Miscellaneous

Here is a list of all other mesh commands currently available:

**Color** *color-expression* { Point | Line | Surface | Volume { *expression-list* } ; ... }

Sets the mesh color of the entities in *expression-list* to *color-expression*.

**Hide** { Point | Line | Surface | Volume { *expression-list* } ; ... }

Hides the mesh of the entities in *expression-list*, if `General.VisibilityMode` is set to 0 or 2.

**Hide** *char-expression*;

Hides the mesh of the entity *char-expression*, if `General.VisibilityMode` is set to 0 or 2 (*char-expression* can for example be “\*”).

**Recombine Surface** { *expression-list* } < = *expression* >;

Recombines the triangular meshes of the surfaces listed in *expression-list* into mixed triangular/quadrangular meshes. The optional *expression* on the right hand side specifies the maximum recombination angle allowed (a large *expression* leading to more triangle recombinations).

**Save** *char-expression*;

Saves the mesh in a file named *char-expression*, using the current `Mesh.Format` (see [Section 4.3 \[Mesh options\], page 53](#)). If the path in *char-expression* is not absolute, *char-expression* is appended to the path of the current file.

**Show** { `Point` | `Line` | `Surface` | `Volume` { *expression-list* } ; ... }

Shows the mesh of the entities in *expression-list*, if `General.VisibilityMode` is set to 0 or 2.

**Show** *char-expression*;

Shows the mesh of the entity *char-expression*, if `General.VisibilityMode` is set to 0 or 2 (*char-expression* can for example be "`*`").

## 4.3 Mesh options

Mesh options control the behavior of mesh commands, as well as the way meshes are displayed in the graphical user interface. For the signification of the ‘Saved in:’ field in the following list, see [Section 2.7 \[General options\], page 18](#).

**Mesh.TriangleOptions**

Options for Jonathan Shewchuk’s Triangle isotropic algorithm

Default value: "praqzBPY"

Saved in: `General.OptionsFileName`

**Mesh.Algorithm**

2D mesh algorithm (1=isotropic, 2=anisotropic, 3=triangle)

Default value: 1

Saved in: `General.OptionsFileName`

**Mesh.Algorithm3D**

3D mesh algorithm (1=isotropic, 4=netgen, 5=tetgen)

Default value: 1

Saved in: `General.OptionsFileName`

**Mesh.AllowDegeneratedExtrude**

Allow the generation of degenerated hexahedra or prisms during extrusion

Default value: 0

Saved in: -

**Mesh.AngleSmoothNormals**

Threshold angle below which normals are not smoothed

Default value: 30

Saved in: `General.OptionsFileName`

**Mesh.BetaSmoothMetric**

Maximum ratio of two consecutive edge lengths

Default value: 0.9

Saved in: `General.OptionsFileName`

**Mesh.CharacteristicLengthFactor**  
Factor applied to all characteristic lengths (and background meshes)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.ColorCarousel**  
Mesh coloring (0=by element type, 1=by elementary entity, 2=by physical entity, 3=by partition)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.ConstrainedBackgroundMesh**  
Should the background mesh be constrained by the characteristic lengths associated with the geometry?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.CpuTime**  
CPU time (in seconds) for the generation of the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.CutPlane**  
Enable mesh cut plane  
Default value: 0  
Saved in: -

**Mesh.CutPlaneAsSurface**  
Draw the intersection volume layer as a surface  
Default value: 0  
Saved in: -

**Mesh.CutPlaneOnlyVolume**  
Cut only the volume elements  
Default value: 0  
Saved in: -

**Mesh.CutPlaneA**  
First cut plane equation coefficient ('A' in 'AX+BY+CZ+D=0')  
Default value: 1  
Saved in: -

**Mesh.CutPlaneB**  
Second cut plane equation coefficient ('B' in 'AX+BY+CZ+D=0')  
Default value: 0  
Saved in: -

**Mesh.CutPlaneC**  
Third cut plane equation coefficient ('C' in 'AX+BY+CZ+D=0')  
Default value: 0  
Saved in: -

**Mesh.CutPlaneD**

Fourth cut plane equation coefficient ('D' in 'AX+BY+CZ+D=0')  
Default value: 0  
Saved in: -

**Mesh.DihedralAngleTol**

Dihedral angle tolerance for edge creation in the remesher  
Default value: 22  
Saved in: `General.OptionsFileName`

**Mesh.Dual**

Display the dual mesh obtained by barycentric subdivision  
Default value: 0  
Saved in: `General.OptionsFileName`

**Mesh.EdgeProlongationThreshold**

Edge prolongation threshold in the remesher  
Default value: 1  
Saved in: `General.OptionsFileName`

**Mesh.ElementOrder**

Element order (1=linear elements, 2=quadratic elements)  
Default value: 1  
Saved in: `General.OptionsFileName`

**Mesh.Explode**

Explode elements (between 0=point and 1=non-transformed)  
Default value: 1  
Saved in: `General.OptionsFileName`

**Mesh.Format**

Mesh output format (1=msh, 2=unv, 3=gref, 19=vrml)  
Default value: 1  
Saved in: `General.OptionsFileName`

**Mesh.InitialOnly**

Only construct the n-dimensional initial mesh (no refinement)  
Default value: 0  
Saved in: `General.OptionsFileName`

**Mesh.Interactive**

Show the construction of 2D anisotropic mesh in real time  
Default value: 0  
Saved in: `General.OptionsFileName`

**Mesh.LabelType**

Type of element label (0=element number, 1=elementary entity number,  
2=physical entity number, 3=partition number, 4=coordinates)  
Default value: 0  
Saved in: `General.OptionsFileName`

**Mesh.Light**

Enable lighting for the mesh  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.LightLines**

Enable lighting for mesh lines (element edges)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.LightTwoSide**

Light both sides of mesh elements (leads to slower rendering)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.Lines**

Display mesh lines (1D elements)?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.LineNumbers**

Display mesh line numbers?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.LineType**

Display mesh lines as solid color segments (0) or 3D cylinders (1)  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.LineWidth**

Display width of mesh lines (in pixels)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.MinimumCirclePoints**

Minimum number of points used to mesh a circle  
Default value: 7  
Saved in: General.OptionsFileName

**Mesh.MinimumElementSizeFact**

Minimum element size factor in the Remesher  
Default value: 500  
Saved in: General.OptionsFileName

**Mesh.MshFileVersion**

Version of the ‘msh’ file format to use  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.NbElemsPerRadiusOfCurv**

Number of elements per radius of curvature in the remesher  
Default value: 5  
Saved in: `General.OptionsFileName`

**Mesh.NbHexahedra**

Number of hexahedra in the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.NbNodes**

Number of nodes in the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.NbPrisms**

Number of prisms in the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.NbPyramids**

Number of pyramids in the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.NbQuadrangles**

Number of quadrangles in the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.NbTetrahedra**

Number of tetrahedra in the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.NbTriangles**

Number of triangles in the current mesh (read-only)  
Default value: 0  
Saved in: -

**Mesh.Normals**

Display size of normal vectors (in pixels)  
Default value: 0  
Saved in: `General.OptionsFileName`

**Mesh.Optimize**

Optimize the mesh using Netgen to improve the quality of tetrahedral elements  
Default value: 0  
Saved in: `General.OptionsFileName`

**Mesh.Points**  
Display mesh vertices (nodes)?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.PointsPerElement**  
Display mesh nodes per element (slower, but permits to visualize only a subset of the nodes)  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.PointInsertion**  
Point insertion method for isotropic 2D algorithm (1=center of circumscribed circle, 2=center of gravity)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.PointNumbers**  
Display mesh node numbers?  
Default value: 0  
Saved in: General.OptionsFileName

**MeshPointSize**  
Display size of mesh vertices (in pixels)  
Default value: 4  
Saved in: General.OptionsFileName

**Mesh.PointType**  
Display mesh vertices as solid color dots (0) or 3D spheres (1)  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.Quality**  
Target quality for tetrahedral elements (currently only used by Tetgen)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.QualityInf**  
Only display elements whose quality measure is greater than QualityInf  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.QualitySup**  
Only display elements whose quality measure is smaller than QualitySup  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.QualityType**  
Type of quality measure (0=gamma^vol/sum\_face/max\_edge,  
1=eta^vol^(2/3)/sum\_edge^2, 2=rho^min\_edge/max\_edge)  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.RadiusInf**

Only display elements whose longest edge is greater than RadiusInf  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.RadiusSup**

Only display elements whose longest edge is smaller than RadiusSup  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.RandomFactor**

Random factor used in 2D and 3D meshing algorithm (test other values when the algorithm fails)  
Default value: 0.0001  
Saved in: General.OptionsFileName

**Mesh.RecombineAlgo**

Recombine algorithm (1=mixed triangles-quadrangles, 2=all quadrangles)  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.RenumberNodes**

Renumber nodes to remove holes in the numbering sequence  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.SaveAll**

Ignore Physical definitions and save all elements  
Default value: 0  
Saved in: -

**Mesh.ScalingFactor**

Global scaling factor applied to the saved mesh  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.Smoothing**

Number of smoothing steps applied to the final mesh  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.Partitioning**

Number of partitions applied to the final mesh  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.SMOOTHNormals**

Smooth the mesh normals?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.SpeedMax**  
Disable dubious point insertion tests  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.StlDistanceTol**  
Distance tolerance between two distinct vertices in STL meshes  
Default value: 5e-07  
Saved in: General.OptionsFileName

**Mesh.SurfaceEdges**  
Display edges of surface mesh?  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.SurfaceFaces**  
Display faces of surface mesh?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.SurfaceNumbers**  
Display surface mesh element numbers?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.Tangents**  
Display size of tangent vectors (in pixels)  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.TargetElementSizeFact**  
Target element size factor in the Remesher  
Default value: 20  
Saved in: General.OptionsFileName

**Mesh.VertexArrays**  
Use OpenGL vertex arrays to draw triangular meshes?  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.VolumeEdges**  
Display edges of volume mesh?  
Default value: 1  
Saved in: General.OptionsFileName

**Mesh.VolumeFaces**  
Display faces of volume mesh?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.VolumeNumbers**

Display volume mesh element numbers?  
Default value: 0  
Saved in: General.OptionsFileName

**Mesh.LabelsFrequency**

Labels display frequency?  
Default value: 100  
Saved in: General.OptionsFileName

**Mesh.Color.Points**

Mesh node color  
Default value: {0,255,0}  
Saved in: General.OptionsFileName

**Mesh.Color.PointsSup**

Second order mesh node color  
Default value: {255,0,255}  
Saved in: General.OptionsFileName

**Mesh.Color.Lines**

Mesh line color  
Default value: {0,255,0}  
Saved in: General.OptionsFileName

**Mesh.Color.Triangles**

Mesh triangle color (if Mesh.ColorCarousel=0)  
Default value: {160,150,255}  
Saved in: General.OptionsFileName

**Mesh.Color.Quadrangles**

Mesh quadrangle color (if Mesh.ColorCarousel=0)  
Default value: {130,120,225}  
Saved in: General.OptionsFileName

**Mesh.Color.Tetrahedra**

Mesh tetrahedron color (if Mesh.ColorCarousel=0)  
Default value: {160,150,255}  
Saved in: General.OptionsFileName

**Mesh.Color.Hexahedra**

Mesh hexahedron color (if Mesh.ColorCarousel=0)  
Default value: {130,120,225}  
Saved in: General.OptionsFileName

**Mesh.Color.Prisms**

Mesh prism color (if Mesh.ColorCarousel=0)  
Default value: {232,210,23}  
Saved in: General.OptionsFileName

**Mesh.Color.Pyramids**

Mesh pyramid color (if Mesh.ColorCarousel=0)  
Default value: {217,113,38}  
Saved in: General.OptionsFileName

**Mesh.Color.Tangents**

Tangent mesh vector color  
Default value: {255,255,0}  
Saved in: General.OptionsFileName

**Mesh.Color.Normals**

Normal mesh vector color  
Default value: {255,0,0}  
Saved in: General.OptionsFileName

**Mesh.Color.Zero**

Color 0 in color carousel  
Default value: {9,3,103}  
Saved in: General.OptionsFileName

**Mesh.Color.One**

Color 1 in color carousel  
Default value: {35,0,111}  
Saved in: General.OptionsFileName

**Mesh.Color.Two**

Color 2 in color carousel  
Default value: {60,0,114}  
Saved in: General.OptionsFileName

**Mesh.Color.Three**

Color 3 in color carousel  
Default value: {83,0,114}  
Saved in: General.OptionsFileName

**Mesh.Color.Four**

Color 4 in color carousel  
Default value: {105,1,109}  
Saved in: General.OptionsFileName

**Mesh.Color.Five**

Color 5 in color carousel  
Default value: {126,10,102}  
Saved in: General.OptionsFileName

**Mesh.Color.Six**

Color 6 in color carousel  
Default value: {145,21,93}  
Saved in: General.OptionsFileName

**Mesh.Color.Seven**  
Color 7 in color carousel  
Default value: {163,34,82}  
Saved in: General.OptionsFileName

**Mesh.Color.Eight**  
Color 8 in color carousel  
Default value: {179,50,69}  
Saved in: General.OptionsFileName

**Mesh.Color.Nine**  
Color 9 in color carousel  
Default value: {193,67,57}  
Saved in: General.OptionsFileName

**Mesh.Color.Ten**  
Color 10 in color carousel  
Default value: {207,85,44}  
Saved in: General.OptionsFileName

**Mesh.Color.Eleven**  
Color 11 in color carousel  
Default value: {219,104,32}  
Saved in: General.OptionsFileName

**Mesh.Color.Twelve**  
Color 12 in color carousel  
Default value: {229,124,22}  
Saved in: General.OptionsFileName

**Mesh.Color.Thirtheen**  
Color 13 in color carousel  
Default value: {238,143,13}  
Saved in: General.OptionsFileName

**Mesh.Color.Fourteen**  
Color 14 in color carousel  
Default value: {246,162,8}  
Saved in: General.OptionsFileName

**Mesh.Color.Fifteen**  
Color 15 in color carousel  
Default value: {252,181,5}  
Saved in: General.OptionsFileName

**Mesh.Color.Sixteen**  
Color 16 in color carousel  
Default value: {255,198,6}  
Saved in: General.OptionsFileName

```
Mesh.Color.Seventeen
    Color 17 in color carousel
    Default value: {255,214,11}
    Saved in: General.OptionsFileName

Mesh.Color.Eighteen
    Color 18 in color carousel
    Default value: {255,228,22}
    Saved in: General.OptionsFileName

Mesh.Color.Nineteen
    Color 19 in color carousel
    Default value: {255,240,38}
    Saved in: General.OptionsFileName
```

## 5 Solver module

Five external solvers can be interfaced simultaneously with Gmsh.

If you just want to start a solver from the solver module, with no further interactions between the solver and Gmsh, just edit the options relative to one of the five available solvers (e.g., `Solver.Name0`, `Solver.Executable0`, ...; see [Section 5.1 \[Solver options\], page 65](#)), and set the corresponding “client-server” option to zero (e.g., `Solver.ClientServer0 = 0`). This doesn’t require any modification to be made to the solver.

If you want the solver to interact with Gmsh (for error messages, option definitions, post-processing, etc.), you need to link your solver with the ‘`GmshClient.c`’ file and add the appropriate function calls inside your program. You can then proceed as in the previous case, but this time you should set the client-server option to 1 (e.g., `Solver.ClientServer0 = 1`), so that Gmsh and the solver can communicate through a Unix socket. See [Section 5.2 \[Solver example\], page 79](#), for an example of how to interface a C++ solver. Bindings for solvers written in other languages (C, Perl and Python) are available in the source distribution.

### 5.1 Solver options

#### `Solver.SocketName`

Name of socket (TCP/IP if it contains the ‘:’ character, UNIX otherwise)  
 Default value: “`.gmshsock`”  
 Saved in: `General.OptionsFileName`

#### `Solver.Name0`

Name of solver 0  
 Default value: “`GetDP`”  
 Saved in: `General.OptionsFileName`

#### `Solver.Help0`

Help string for solver 0  
 Default value: “A General environment for the treatment of Discrete Problems. Copyright (C) 1997-2006 Patrick Dular and Christophe Geuzaine. Visit <http://www.geuz.org/getdp/> for more info”  
 Saved in: `General.OptionsFileName`

#### `Solver.Executable0`

System command to launch solver 0 (should not contain the ‘&’ character)  
 Default value: “`getdp`”  
 Saved in: `General.OptionsFileName`

#### `Solver.Extension0`

Default file name extension for solver 0  
 Default value: “`.pro`”  
 Saved in: `General.OptionsFileName`

#### `Solver.MeshName0`

Default mesh file name for solver 0  
 Default value: “`”`  
 Saved in: `General.OptionsFileName`

```
Solver.MeshCommand0
    Command used to specify the mesh file for solver 0
    Default value: "-msh %s"
    Saved in: General.OptionsFileName

Solver.SocketCommand0
    Command to specify the socket to solver 0
    Default value: "-socket %s"
    Saved in: General.OptionsFileName

Solver.NameCommand0
    Command to specify the problem name to solver 0
    Default value: "%s"
    Saved in: General.OptionsFileName

Solver.OptionCommand0
    Command to get options from solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstOption0
    Label of first option for solver 0
    Default value: "Resolution"
    Saved in: General.OptionsFileName

Solver.SecondOption0
    Label of second option for solver 0
    Default value: "PostOperation"
    Saved in: General.OptionsFileName

Solver.ThirdOption0
    Label of third option for solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthOption0
    Label of fourth option for solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthOption0
    Label of fifth option for solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButton0
    Label of first button for solver 0
    Default value: "Pre"
    Saved in: General.OptionsFileName
```

```
Solver.FirstButtonCommand0
    Command associated with the first button for solver 0
    Default value: "-pre %s"
    Saved in: General.OptionsFileName

Solver.SecondButton0
    Label of second button for solver 0
    Default value: "Cal"
    Saved in: General.OptionsFileName

Solver.SecondButtonCommand0
    Command associated with the second button for solver 0
    Default value: "-cal"
    Saved in: General.OptionsFileName

Solver.ThirdButton0
    Label of third button for solver 0
    Default value: "Pos"
    Saved in: General.OptionsFileName

Solver.ThirdButtonCommand0
    Command associated with the third button for solver 0
    Default value: "-pos %s"
    Saved in: General.OptionsFileName

Solver.FourthButton0
    Label of fourth button for solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButtonCommand0
    Command associated with the fourth button for solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButton0
    Label of fifth button for solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButtonCommand0
    Command associated with the fifth button for solver 0
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Name1
    Name of solver 1
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.Help1
    Help string for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Executable1
    System command to launch solver 1 (should not contain the '&' character)
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Extension1
    Default file name extension for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshName1
    Default mesh file name for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshCommand1
    Command used to specify the mesh file for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SocketCommand1
    Command to specify the socket to solver 1
    Default value: "-socket %s"
    Saved in: General.OptionsFileName

Solver.NameCommand1
    Command to specify the problem name to solver 1
    Default value: "%s"
    Saved in: General.OptionsFileName

Solver.OptionCommand1
    Command to get options from solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstOption1
    Label of first option for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondOption1
    Label of second option for solver 1
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.ThirdOption1
    Label of third option for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthOption1
    Label of fourth option for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthOption1
    Label of fifth option for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButton1
    Label of first button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButtonCommand1
    Command associated with the first button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondButton1
    Label of second button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondButtonCommand1
    Command associated with the second button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdButton1
    Label of third button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdButtonCommand1
    Command associated with the third button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButton1
    Label of fourth button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.FourthButtonCommand1
    Command associated with the fourth button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButton1
    Label of fifth button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButtonCommand1
    Command associated with the fifth button for solver 1
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Name2
    Name of solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Help2
    Help string for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Executable2
    System command to launch solver 2 (should not contain the '&' character)
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Extension2
    Default file name extension for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshName2
    Default mesh file name for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshCommand2
    Command used to specify the mesh file for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SocketCommand2
    Command to specify the socket to solver 2
    Default value: "-socket %s"
    Saved in: General.OptionsFileName
```

```
Solver.NameCommand2
    Command to specify the problem name to solver 2
    Default value: "%s"
    Saved in: General.OptionsFileName

Solver.OptionCommand2
    Command to get options from solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstOption2
    Label of first option for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondOption2
    Label of second option for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdOption2
    Label of third option for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthOption2
    Label of fourth option for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthOption2
    Label of fifth option for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButton2
    Label of first button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButtonCommand2
    Command associated with the first button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondButton2
    Label of second button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.SecondButtonCommand2
    Command associated with the second button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdButton2
    Label of third button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdButtonCommand2
    Command associated with the third button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButton2
    Label of fourth button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButtonCommand2
    Command associated with the fourth button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButton2
    Label of fifth button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButtonCommand2
    Command associated with the fifth button for solver 2
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Name3
    Name of solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Help3
    Help string for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Executable3
    System command to launch solver 3 (should not contain the '&' character)
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.Extension3
    Default file name extension for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshName3
    Default mesh file name for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshCommand3
    Command used to specify the mesh file for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SocketCommand3
    Command to specify the socket to solver 3
    Default value: "-socket %s"
    Saved in: General.OptionsFileName

Solver.NameCommand3
    Command to specify the problem name to solver 3
    Default value: "%s"
    Saved in: General.OptionsFileName

Solver.OptionCommand3
    Command to get options from solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstOption3
    Label of first option for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondOption3
    Label of second option for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdOption3
    Label of third option for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthOption3
    Label of fourth option for solver 3
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.FifthOption3
    Label of fifth option for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButton3
    Label of first button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButtonCommand3
    Command associated with the first button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondButton3
    Label of second button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondButtonCommand3
    Command associated with the second button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdButton3
    Label of third button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdButtonCommand3
    Command associated with the third button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButton3
    Label of fourth button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButtonCommand3
    Command associated with the fourth button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButton3
    Label of fifth button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.FifthButtonCommand3
    Command associated with the fifth button for solver 3
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Name4
    Name of solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Help4
    Help string for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Executable4
    System command to launch solver 4 (should not contain the '&' character)
    Default value: ""
    Saved in: General.OptionsFileName

Solver.Extension4
    Default file name extension for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshName4
    Default mesh file name for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.MeshCommand4
    Command used to specify the mesh file for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SocketCommand4
    Command to specify the socket to solver 4
    Default value: "-socket %s"
    Saved in: General.OptionsFileName

Solver.NameCommand4
    Command to specify the problem name to solver 4
    Default value: "%s"
    Saved in: General.OptionsFileName

Solver.OptionCommand4
    Command to get options from solver 4
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.FirstOption4
    Label of first option for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondOption4
    Label of second option for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdOption4
    Label of third option for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthOption4
    Label of fourth option for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthOption4
    Label of fifth option for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButton4
    Label of first button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FirstButtonCommand4
    Command associated with the first button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondButton4
    Label of second button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.SecondButtonCommand4
    Command associated with the second button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.ThirdButton4
    Label of third button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName
```

```
Solver.ThirdButtonCommand4
    Command associated with the third button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButton4
    Label of fourth button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FourthButtonCommand4
    Command associated with the fourth button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButton4
    Label of fifth button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.FifthButtonCommand4
    Command associated with the fifth button for solver 4
    Default value: ""
    Saved in: General.OptionsFileName

Solver.AlwaysListen
    Always listen to incoming connection requests?
    Default value: 0
    Saved in: General.OptionsFileName

Solver.MaximumDelay
    Maximum delay (in seconds) allowed for solver response
    Default value: 4
    Saved in: General.OptionsFileName

Solver.Plugins
    Enable default solver plugins?
    Default value: 0
    Saved in: General.OptionsFileName

Solver.ClientServer0
    Connect solver 0 to the Gmsh server
    Default value: 1
    Saved in: General.OptionsFileName

Solver.MergeViews0
    Automatically merge any post-processing view created by solver 0
    Default value: 1
    Saved in: General.OptionsFileName
```

```
Solver.PopupMessages0
    Automatically display messages produced by solver 0
    Default value: 1
    Saved in: General.OptionsFileName

Solver.ClientServer1
    Connect solver 1 to the Gmsh server
    Default value: 0
    Saved in: General.OptionsFileName

Solver.MergeViews1
    Automatically merge any post-processing view created by solver 1
    Default value: 1
    Saved in: General.OptionsFileName

Solver.PopupMessages1
    Automatically display messages produced by solver 1
    Default value: 1
    Saved in: General.OptionsFileName

Solver.ClientServer2
    Connect solver 2 to the Gmsh server
    Default value: 0
    Saved in: General.OptionsFileName

Solver.MergeViews2
    Automatically merge any post-processing view created by solver 2
    Default value: 1
    Saved in: General.OptionsFileName

Solver.PopupMessages2
    Automatically display messages produced by solver 2
    Default value: 1
    Saved in: General.OptionsFileName

Solver.ClientServer3
    Connect solver 3 to the Gmsh server
    Default value: 0
    Saved in: General.OptionsFileName

Solver.MergeViews3
    Automatically merge any post-processing view created by solver 3
    Default value: 1
    Saved in: General.OptionsFileName

Solver.PopupMessages3
    Automatically display messages produced by solver 3
    Default value: 1
    Saved in: General.OptionsFileName
```

```

Solver.ClientServer4
    Connect solver 4 to the Gmsh server
    Default value: 0
    Saved in: General.OptionsFileName

Solver.MergeViews4
    Automatically merge any post-processing view created by solver 4
    Default value: 1
    Saved in: General.OptionsFileName

Solver.PopupMessages4
    Automatically display messages produced by solver 4
    Default value: 1
    Saved in: General.OptionsFileName

```

## 5.2 Solver example

Here is a small example of how to interface a C++ solver with Gmsh. The following listing reproduces the ‘utils/solvers/cpp/solver.cpp’ file from the Gmsh source distribution (C, Perl and Python examples are also available).

```

// $Id: solver.cpp,v 1.9 2006/02/25 14:36:53 geuzaine Exp $
//
// Copyright (C) 1997-2005 C. Geuzaine, J.-F. Remacle
//
// Permission is hereby granted, free of charge, to any person
// obtaining a copy of this software and associated documentation
// files (the "Software"), to deal in the Software without
// restriction, including without limitation the rights to use, copy,
// modify, merge, publish, distribute, and/or sell copies of the
// Software, and to permit persons to whom the Software is furnished
// to do so, provided that the above copyright notice(s) and this
// permission notice appear in all copies of the Software and that
// both the above copyright notice(s) and this permission notice
// appear in supporting documentation.
//
// THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND,
// EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF
// MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND
// NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE
// COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR
// ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY
// DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS,
// WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS
// ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE
// OF THIS SOFTWARE.
//

```

```
// Please report all bugs and problems to <gmsh@geuz.org>.

// This file contains a dummy client solver for Gmsh. It does not
// solve anything, but shows how to program your own solver to interact
// with the Gmsh solver module.
//
// To compile this solver, type something like:
//
// g++ solver.cpp -o solver.exe
//
// To run it, merge the contents of the file solver.opt into your
// default Gmsh option file, or launch Gmsh with the command:
//
// gmsh -option solver.opt
//
// You will then see a new button labeled "My C++ solver" in Gmsh's
// solver menu.

#include <math.h>
#include "GmshClient.h"

typedef enum { send_options, run_code } action;

int main(int argc, char *argv[])
{
    action what_to_do = run_code;
    char *name = NULL, *option = NULL, *socket = NULL;

    // parse command line

    int i = 0;
    while(i < argc) {
        if(argv[i][0] == '-') {
            if(!strcmp(argv[i] + 1, "socket")) {
                i++;
                if(argv[i]) socket = argv[i++];
            }
            else if(!strcmp(argv[i] + 1, "options")) {
                i++;
                what_to_do = send_options;
            }
            else if(!strcmp(argv[i] + 1, "run")) {
                i++;
                what_to_do = run_code;
                if(argv[i]) option = argv[i++];
            }
        }
    }
}
```

```

    else
        name = argv[i++];
}

if(!socket) {
    printf("No socket specified: running non-interactively...\\n");
    exit(1);
}

// connect to Gmsh

GmshClient client;
if(client.Connect(socket) < 0){
    printf("Unable to connect to Gmsh\\n");
    exit(1);
}

client.Start();

if(what_to_do == send_options) {
    // send the available options for this computation
    client.Option(1, "FormulationH");
    client.Option(1, "ConvTest");
    client.Option(1, "Blablabli");
}
else if(what_to_do == run_code){
    // do the computation and merge some views
    for(int i = 0; i < 10; i++){
        client.Info("Computing curve...\\n");
        // fake computation for 500ms:
#ifndef WIN32 || defined(__CYGWIN__)
        usleep(500 * 1000);
#else
        Sleep(500);
#endif
        client.Info("Done computing curve");
        FILE *file = fopen("solver.pos", "w");
        if(!file)
            client.Error("Unable to open output file");
        else {
            fprintf(file, "View.Type = 2;\\n");
            fprintf(file, "View.Axes = 3;\\n");
            fprintf(file, "Delete View[0];\\n");
            fprintf(file, "View \"%s\"{\\n", option);
            for(int j = 0; j < 100; j++)
                fprintf(file, "SP(%d,0,0){%g};\\n", j,sin(j*i*M_PI/10.));
            fprintf(file, "};\\n");
        }
    }
}

```

```
    fclose(file);
    client.MergeFile("solver.pos");
}
}
client.Info("Done!");
}

client.Stop();
client.Disconnect();
}
```

To define the above solver as the second external solver in Gmsh, you then need to define the following options (either merge them in your Gmsh option file, or use the `-option` command-line option—see [Section 8.3 \[Command-line options\]](#), page 138):

```
Solver.Name1 = "My C++ Solver";
Solver.Executable1 = "solver.exe";
Solver.OptionCommand1 = "-options";
Solver.FirstOption1 = "My options";
Solver.FirstButton1 = "Run !";
Solver.FirstButtonCommand1 = "-run %s";
Solver.ClientServer1 = 1;
Solver.MergeViews1 = 1;
Solver.PopupMessages1 = 1;
```

## 6 Post-processing module

Gmsh’s post-processing module can handle multiple scalar, vector or tensor data sets along with the geometry and the mesh. The data sets should be given in one of Gmsh’s post-processing file formats described in [Chapter 9 \[File formats\], page 145](#). Once loaded into Gmsh, scalar fields can be displayed as iso-value lines and surfaces or color maps, whereas vector fields can be represented either by three-dimensional arrows or by displacement maps. (Tensor fields are currently displayed as Von-Mises effective stresses. To display other (combinations of) components, use `Plugin(Extract)`: see [Section 6.2 \[Post-processing plugins\], page 85](#).)

In Gmsh’s jargon, each data set is called a “view”, and can arbitrarily mix all types of elements and fields. Each view is given a name, and can be manipulated either individually (each view has its own button in the GUI and can be referred to by its index in a script) or globally (see the `PostProcessing.Link` option in [Section 6.3 \[Post-processing options\], page 96](#)).

By default, Gmsh treats all post-processing views as three-dimensional plots, i.e., draws the scalar, vector and tensor primitives (points, lines, triangles, tetrahedra, etc.) in 3D space. But Gmsh can also represent each post-processing view containing *scalar points* as two-dimensional (“X-Y”) plots, either space- or time-oriented:

- in a ‘2D space’ plot, the scalar points are taken in the same order as they are defined in the post-processing view: the abscissa of the 2D graph is the curvilinear abscissa of the curve defined by the point series, and only one curve is drawn using the values associated with the points. If several time steps are available, each time step generates a new curve;
- in a ‘2D time’ plot, one curve is drawn for each scalar point in the view and the abscissa is the time step.

Although visualization is usually mostly an interactive task, Gmsh exposes all the post-processing commands and options to the user in its scripting language to permit a complete automation of the post-processing process (see e.g., [Section 7.8 \[t8.geo\], page 132](#), and [Section 7.9 \[t9.geo\], page 135](#)).

The two following sections summarize all available post-processing commands and options. Most options apply to both 2D and 3D plots (colormaps, point/line sizes, interval types, time step selection, etc.), but some are peculiar to 3D (lightning, element selection, etc.) or 2D plots (abscissa labels, etc.). Note that 2D plots can be positioned explicitly inside the graphical window, or be automatically positioned in order to avoid overlaps.

Sample post-processing files in human-readable “parsed” format (see [Section 9.2.1 \[Parsed post-processing file format\], page 149](#)) are available in the ‘tutorial’ directory of Gmsh’s distribution (‘.pos’ files).

### 6.1 Post-processing commands

`Alias View[expression];`

Creates an alias of the *expression*-th post-processing view.

Note that `Alias` creates a logical duplicate of the view without actually duplicating the data in memory. This is very useful when you want multiple

simultaneous renderings of the same large dataset (usually with different display options), but you cannot afford to store all copies in memory. If what you really want is multiple physical copies of the data, just merge the file containing the post-processing view multiple times.

**AliasWithOptions View[*expression*];**

Creates an alias of the *expression*-th post-processing view and copies all the options of the *expression*-th view to the new aliased view.

**Combine ElementsByViewName;**

Combines all the post-processing views having the same name into new views. The combination is done “spatially”, i.e., simply by appending the elements at the end of the new views.

**Combine ElementsFromAllViews | Combine Views;**

Combines all the post-processing views into a single new view. The combination is done “spatially”, i.e., simply by appending the elements at the end of the new view.

**Combine ElementsFromVisibleViews;**

Combines all the visible post-processing views into a single new view. The combination is done “spatially”, i.e., simply by appending the elements at the end of the new view.

**Combine TimeStepsByViewName | Combine TimeSteps;**

Combines the data from all the post-processing views having the same name into new multi-time-step views. The combination is done “temporally”, i.e., as if the data in each view corresponds to a different time instant. The combination will fail if the meshes in all the views are not identical.

**Combine TimeStepsFromAllViews;**

Combines the data from all the post-processing views into a new multi-time-step view. The combination is done “temporally”, i.e., as if the data in each view corresponds to a different time instant. The combination will fail if the meshes in all the views are not identical.

**Combine TimeStepsFromVisibleViews;**

Combines the data from all the visible post-processing views into a new multi-time-step view. The combination is done “temporally”, i.e., as if the data in each view corresponds to a different time instant. The combination will fail if the meshes in all the views are not identical.

**Delete View[*expression*];**

Deletes (removes) the *expression*-th post-processing view. Note that post-processing view numbers start at 0.

**Delete Empty Views;**

Deletes (removes) all the empty post-processing views.

**Background Mesh View[*expression*];**

Applies the *expression*-th post-processing view as the current background mesh. Note that post-processing view numbers start at 0.

**Plugin (string) . Run;**

Executes the plugin *string*. The list of default plugins is given in [Section 6.2 \[Post-processing plugins\], page 85](#).

**Plugin (string) . string = expression | char-expression;**

Sets an option for a given plugin. See [Section 6.2 \[Post-processing plugins\], page 85](#), for a list of default plugins and [Section 7.9 \[t9.geo\], page 135](#), for some examples.

**Save View[expression] char-expression;**

Saves the the *expression*-th post-processing view in a file named *char-expression*. If the path in *char-expression* is not absolute, *char-expression* is appended to the path of the current file.

**View "string" { string ( expression-list ) { expression-list } ; ... };**

Creates a new post-processing view, named "*string*". This is the easiest way to create a post-processing view, but also the least efficient (the view is read through Gmsh's script parser, which can become a bit slow if the view is very large—e.g., with one million elements). Nevertheless, this “parsed” post-processing format (explained in detail in [Section 9.2.1 \[Parsed post-processing file format\], page 149](#)) is very powerful, since all the values are *expressions*. Two other formats, better suited for very large data sets, are described in [Section 9.2.2 \[ASCII post-processing file format\], page 151](#), and [Section 9.2.3 \[Binary post-processing file format\], page 154](#).

## 6.2 Post-processing plugins

Post-processing plugins permit to extend the functionality of Gmsh's post-processing module. The difference between regular post-processing options (see [Section 6.3 \[Post-processing options\], page 96](#)) and post-processing plugins is that regular post-processing options only change the way the data is displayed, while post-processing plugins either create new post-processing views, or modify the data stored in a view (in a destructive, non-reversible way).

Plugins are available in the graphical user interface by right-clicking on a view button (or by clicking on the black arrow next to the view button) and then selecting the ‘Plugin’ submenu.

Here is the list of the plugins that are shipped by default with Gmsh:

**Plugin(Annotate)**

Plugin(Annotate) adds the text string ‘Text’, in font ‘Font’ and size ‘FontSize’, in the view ‘iView’. If ‘3D’ is equal to 1, the plugin inserts the string in model coordinates at the position (‘X’,‘Y’,‘Z’). If ‘3D’ is equal to 0, the plugin inserts the string in screen coordinates at the position (‘X’,‘Y’). The string is aligned according to ‘Align’. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Annotate) is executed in-place.

String options:

**Text**      Default value: "My Text"

**Font**      Default value: "Helvetica"

**Align** Default value: "Left"

Numeric options:

**X** Default value: 50

**Y** Default value: 30

**Z** Default value: 0

**3D** Default value: 0

**FontSize** Default value: 14

**iView** Default value: -1

#### **Plugin(Curl)**

Plugin(Curl) computes the curl of the field in the view 'iView'. If 'iView' < 0, the plugin is run on the current view.

Plugin(Curl) creates one new view.

Numeric options:

**iView** Default value: -1

#### **Plugin(CutGrid)**

Plugin(CutGrid) cuts the view 'iView' with a rectangular grid defined by the 3 points ('X0','Y0','Z0') (origin), ('X1','Y1','Z1') (axis of U) and ('X2','Y2','Z2') (axis of V). The number of points along U and V is set with the options 'nPointsU' and 'nPointsV'. If 'ConnectPoints' is zero, the plugin creates points; otherwise, the plugin generates quadrangles, lines or points depending on the values of 'nPointsU' and 'nPointsV'. If 'iView' < 0, the plugin is run on the current view.

Plugin(CutGrid) creates one new view.

Numeric options:

**X0** Default value: 0

**Y0** Default value: 0

**Z0** Default value: 0

**X1** Default value: 1

**Y1** Default value: 0

**Z1** Default value: 0

**X2** Default value: 0

**Y2** Default value: 1

**Z2** Default value: 0

**nPointsU** Default value: 20

**nPointsV** Default value: 20

**ConnectPoints**

Default value: 1

**iView** Default value: -1

#### Plugin(CutMap)

Plugin(CutMap) extracts the isosurface of value ‘A’ from the view ‘iView’ and draws the ‘dTimeStep’-th value of the view ‘dView’ on the isosurface. If ‘iView’ < 0, the plugin is run on the current view. If ‘dTimeStep’ < 0, the plugin uses, for each time step in ‘iView’, the corresponding time step in ‘dView’. If ‘dView’ < 0, the plugin uses ‘iView’ as the value source. If ‘ExtractVolume’ is nonzero, the plugin extracts the isovolume with values greater (if ‘ExtractVolume’ > 0) or smaller (if ‘ExtractVolume’ < 0) than the isosurface ‘A’.

Plugin(CutMap) creates as many views as there are time steps in ‘iView’.

Numeric options:

**A** Default value: 1

**dTimeStep**

Default value: -1

**dView** Default value: -1

**ExtractVolume**

Default value: 0

**RecurLevel**

Default value: 4

**TargetError**

Default value: 0

**iView** Default value: -1

#### Plugin(CutParametric)

Plugin(CutParametric) cuts the view ‘iView’ with the parametric function (‘X’(u), ‘Y’(u), ‘Z’(u)), using ‘nPointsU’ values of the parameter u in [‘MinU’, ‘MaxU’]. If ‘ConnectPoints’ is set, the plugin creates line elements; otherwise, the plugin generates points. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(CutParametric) creates one new view.

String options:

**X** Default value: "0 + 1 \* Cos(u)"

**Y** Default value: "0 + 1 \* Sin(u)"

**Z** Default value: "0"

Numeric options:

**MinU** Default value: 0

**MaxU** Default value: 6.28319

**nPointsU** Default value: 360

**ConnectPoints**

Default value: 0

```

iView      Default value: -1

Plugin(CutPlane)
  Plugin(CutPlane) cuts the view ‘iView’ with the plane ‘A’*X + ‘B’*Y + ‘C’*Z
  + ‘D’ = 0. If ‘ExtractVolume’ is nonzero, the plugin extracts the elements on
  one side of the plane (depending on the sign of ‘ExtractVolume’). If ‘iView’ <
  0, the plugin is run on the current view.
  Plugin(CutPlane) creates one new view.
  Numeric options:
    A      Default value: 1
    B      Default value: 0
    C      Default value: 0
    D      Default value: -0.01
  ExtractVolume
    Default value: 0
  RecurLevel
    Default value: 4
  TargetError
    Default value: 0
  iView      Default value: -1

Plugin(CutSphere)
  Plugin(CutSphere) cuts the view ‘iView’ with the sphere  $(X - X_c)^2 + (Y - Y_c)^2 + (Z - Z_c)^2 = R^2$ . If ‘ExtractVolume’ is nonzero, the plugin extracts
  the elements inside (if ‘ExtractVolume’ < 0) or outside (if ‘ExtractVolume’ > 0)
  the sphere. If ‘iView’ < 0, the plugin is run on the current view.
  Plugin(CutSphere) creates one new view.
  Numeric options:
    Xc     Default value: 0
    Yc     Default value: 0
    Zc     Default value: 0
    R      Default value: 0.25
  ExtractVolume
    Default value: 0
  RecurLevel
    Default value: 4
  iView      Default value: -1

Plugin(DecomposeInSimplex)
  Plugin(DecomposeInSimplex) decomposes all non-simplicial elements (quad-
  rangles, prisms, hexahedra, pyramids) in the view ‘iView’ into simplices (tri-
  angles, tetrahedra). If ‘iView’ < 0, the plugin is run on the current view.

```

**Plugin(DecomposeInSimplex)** is executed in-place.

Numeric options:

**iView** Default value: -1

#### **Plugin(Divergence)**

Plugin(Divergence) computes the divergence of the field in the view ‘iView’. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Divergence) creates one new view.

Numeric options:

**iView** Default value: -1

#### **Plugin(Eigenvalues)**

Plugin(Eigenvalues) computes the three real eigenvalues of each tensor in the view ‘iView’. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Eigenvalues) creates three new scalar views.

Numeric options:

**iView** Default value: -1

#### **Plugin(Eigenvectors)**

Plugin(Eigenvectors) computes the three (right) eigenvectors of each tensor in the view ‘iView’ and sorts them according to the value of the associated eigenvalues. If ‘ScaleByEigenvalues’ is set, each eigenvector is scaled by its associated eigenvalue. The plugin gives an error if the eigenvectors are complex. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Eigenvectors) creates three new vector views.

Numeric options:

**ScaleByEigenvalues**

Default value: 1

**iView** Default value: -1

#### **Plugin(Evaluate)**

Plugin(Evaluate) sets the ‘Component’-th component of the ‘TimeStep’-th time step in the view ‘iView’ to the expression ‘Expression’. ‘Expression’ can contain:

- the usual mathematical functions (Log, Sqrt Sin, Cos, Fabs, ...) and operators (+, -, \*, /, ^);
- the symbols x, y and z, to retrieve the coordinates of the current node;
- the symbols Time and TimeStep, to retrieve the current time and time step values;
- the symbol v, to retrieve the ‘Component’-th component of the field in ‘iView’ at the ‘TimeStep’-th time step;
- the symbols v0, v1, v2, ..., v8, to retrieve each component of the field in ‘iView’ at the ‘TimeStep’-th time step;
- the symbol w, to retrieve the ‘Component’-th component of the field in ‘ExternalView’ at the ‘ExternalTimeStep’-th time step. If ‘ExternalView’ and ‘iView’

are based on different spatial grids, or if their data types are different, ‘ExternalView’ is interpolated onto ‘iView’;

- the symbols w0, w1, w2, ..., w8, to retrieve each component of the field in ‘ExternalView’ at the ‘ExternalTimeStep’-th time step.

If ‘TimeStep’ < 0, the plugin automatically loops over all the time steps in ‘iView’ and evaluates ‘Expression’ for each one. If ‘ExternalTimeStep’ < 0, the plugin uses ‘TimeStep’ instead. If ‘Component’ < 0, the plugin automatically loops over all the components in the view and evaluates ‘Expression’ for each one. If ‘iView’ < 0, the plugin is run on the current view. If ‘ExternalView’ < 0, the plugin uses ‘iView’ instead.

Plugin(Evaluate) is executed in-place.

String options:

**Expression**

Default value: "v0\*Sin(x)"

Numeric options:

**Component**

Default value: -1

**TimeStep** Default value: -1

**ExternalView**

Default value: -1

**ExternalTimeStep**

Default value: -1

**iView** Default value: -1

**Plugin(Extract)**

Plugin(Extract) extracts a combination of components from the ‘TimeStep’th time step in the view ‘iView’. If only ‘Expression0’ is given (and ‘Expression1’, ..., ‘Expression8’ are all empty), the plugin creates a scalar view. If ‘Expression0’, ‘Expression1’ and/or ‘Expression2’ are given (and ‘Expression3’, ..., ‘Expression8’ are all empty) the plugin creates a vector view. Otherwise the plugin creates a tensor view. In addition to the usual mathematical functions (Exp, Log, Sqrt, Sin, Cos, Fabs, etc.) and operators (+, -, \*, /, ^), all expressions can contain the symbols v0, v1, v2, ..., vn, which represent the n components of the field, and the symbols x, y and z, which represent the three spatial coordinates. If ‘TimeStep’ < 0, the plugin extracts data from all the time steps in the view. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Extract) creates one new view.

String options:

**Expression0**

Default value: "Sqrt(v0^2+v1^2+v2^2)"

**Expression1**

Default value: ""

```
Expression2
    Default value: ""

Expression3
    Default value: ""

Expression4
    Default value: ""

Expression5
    Default value: ""

Expression6
    Default value: ""

Expression7
    Default value: ""

Expression8
    Default value: ""

Numeric options:
TimeStep    Default value: -1
iView       Default value: -1

Plugin(ExtractEdges)
    Plugin(ExtractEdges) extracts the geometry edges from the surface view
    'iView', using 'Angle' as the dihedral angle tolerance. If 'iView' < 0, then
    plugin is run on the current view.
    Plugin(ExtractEdges) creates one new view.

    Numeric options:
Angle        Default value: 22
iView        Default value: -1

Plugin(ExtractElements)
    Plugin(ExtractElements) extracts the elements from the view 'iView' whose
    'TimeStep'-th values (averaged by element) are comprised between 'MinVal'
    and 'MaxVal'. If 'iView' < 0, the plugin is run on the current view.
    Plugin(ExtractElements) creates one new view.

    Numeric options:
MinVal      Default value: 0
MaxVal      Default value: 1
TimeStep    Default value: 0
iView       Default value: -1

Plugin(Gradient)
    Plugin(Gradient) computes the gradient of the field in the view 'iView'. If
    'iView' < 0, the plugin is run on the current view.
```

Plugin(Gradient) creates one new view.

Numeric options:

**iView** Default value: -1

#### Plugin(HarmonicToTime)

Plugin(HarmonicToTime) takes the values in the time steps ‘RealPart’ and ‘ImaginaryPart’ of the view ‘iView’, and creates a new view containing ( $iView$ [‘RealPart’] \* cos( $p$ ) -  $iView$ [‘ImaginaryPart’] \* sin( $p$ )), with  $p = 2\pi k / nSteps$ ,  $k = 0, \dots, nSteps - 1$ . If ‘iView’ < 0, the plugin is run on the current view.

Plugin(HarmonicToTime) creates one new view.

Numeric options:

**RealPart** Default value: 0

**ImaginaryPart**

Default value: 1

**nSteps** Default value: 20

**iView** Default value: -1

#### Plugin(Integrate)

Plugin(Integrate) integrates scalar fields over all the elements in the view ‘iView’, as well as the circulation/flux of vector fields over line/surface elements. If ‘iView’ < 0, the plugin is run on the current view. If ‘ComputeLevelsetPositive’ is set, the plugin computes the positive area (volume) of the map.

Plugin(Integrate) creates one new view.

Numeric options:

**ComputeLevelsetPositive**

Default value: 0

**iView** Default value: -1

#### Plugin(Lambda2)

Plugin(Lambda2) computes the eigenvalues Lambda(1,2,3) of the tensor ( $S_{ik} S_{kj} + Om_{ik} Om_{kj}$ ), where  $S_{ij} = 0.5 (ui,j + uj,i)$  and  $Om_{ij} = 0.5 (ui,j - uj,i)$  are respectively the symmetric and antisymmetric parts of the velocity gradient tensor. Vortices are well represented by regions where Lambda(2) is negative. If ‘iView’ contains tensor elements, the plugin directly uses the tensors as the values of the velocity gradient tensor; if ‘iView’ contains vector elements, the plugin uses them as the velocities from which to derive the velocity gradient tensor. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Lambda2) creates one new view.

Numeric options:

**Eigenvalue**

Default value: 2

**iView** Default value: -1

#### **Plugin(ModulusPhase)**

Plugin(ModulusPhase) interprets the time steps ‘realPart’ and ‘imaginaryPart’ in the view ‘iView’ as the real and imaginary parts of a complex field and replaces them with their corresponding modulus and phase. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(ModulusPhase) is executed in-place.

Numeric options:

**RealPart** Default value: 0

**ImaginaryPart**

Default value: 1

**iView** Default value: -1

#### **Plugin(Probe)**

Plugin(Probe) gets the value of the view ‘iView’ at the point (‘X’,‘Y’,‘Z’). If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Probe) creates one new view.

Numeric options:

**X** Default value: 0

**Y** Default value: 0

**Z** Default value: 0

**iView** Default value: -1

#### **Plugin(Remove)**

Plugin(Remove) removes the marked items from the view ‘iView’. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Remove) is executed in-place.

Numeric options:

**Text2D** Default value: 1

**Text3D** Default value: 1

**Points** Default value: 0

**Lines** Default value: 0

**Triangles**  
Default value: 0

**Quadrangles**  
Default value: 0

**Tetrahedra**  
Default value: 0

**Hexahedra**  
Default value: 0

**Prisms** Default value: 0  
**Pyramids** Default value: 0  
**Scalar** Default value: 1  
**Vector** Default value: 1  
**Tensor** Default value: 1  
**iView** Default value: -1

**Plugin(Skin)**

Plugin(Skin) extracts the skin (the boundary) of the view ‘iView’. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Skin) creates one new view.

Numeric options:

**iView** Default value: -1

**Plugin(Smooth)**

Plugin(Smooth) averages the values at the nodes of the scalar view ‘iView’. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Smooth) is executed in-place.

Numeric options:

**iView** Default value: -1

**Plugin(StreamLines)**

Plugin(StreamLines) computes stream lines from a vector view ‘iView’ and optionally interpolates the scalar view ‘dView’ on the resulting stream lines. It takes as input a grid defined by the 3 points (‘X0’,‘Y0’,‘Z0’) (origin), (‘X1’,‘Y1’,‘Z1’) (axis of U) and (‘X2’,‘Y2’,‘Z2’) (axis of V). The number of points that are going to be transported along U and V is set with the options ‘nPointsU’ and ‘nPointsV’. Then, we solve the equation  $DX(t)/dt = V(x,y,z)$  with  $X(t=0)$  chosen as the grid and  $V(x,y,z)$  interpolated on the vector view. The timestep and the maximum number of iterations are set with the options ‘MaxIter’ and ‘DT’. The time stepping scheme is a RK44. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(StreamLines) creates one new view. This view contains multi-step vector points if ‘dView’ < 0, or single-step scalar lines if ‘dView’ >= 0.

Numeric options:

**X0** Default value: 0  
**Y0** Default value: 0  
**Z0** Default value: 0  
**X1** Default value: 1  
**Y1** Default value: 0  
**Z1** Default value: 0

**X2** Default value: 0  
**Y2** Default value: 1  
**Z2** Default value: 0  
**nPointsU** Default value: 10  
**nPointsV** Default value: 1  
**MaxIter** Default value: 100  
**DT** Default value: 0.1  
**dView** Default value: -1  
**iView** Default value: -1

**Plugin(Transform)**

Plugin(Transform) transforms the homogeneous node coordinates (x,y,z,1) of the elements in the view ‘iView’ by the matrix [‘A11’ ‘A12’ ‘A13’ ‘T1’] [‘A21’ ‘A22’ ‘A23’ ‘T2’] [‘A31’ ‘A32’ ‘A33’ ‘T3’]. If ‘SwapOrientation’ is set, the orientation of the elements is reversed. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Transform) is executed in-place.

Numeric options:

**A11** Default value: 1  
**A12** Default value: 0  
**A13** Default value: 0  
**A21** Default value: 0  
**A22** Default value: 1  
**A23** Default value: 0  
**A31** Default value: 0  
**A32** Default value: 0  
**A33** Default value: 1  
**T1** Default value: 0  
**T2** Default value: 0  
**T3** Default value: 0  
**SwapOrientation**  
Default value: 0  
**iView** Default value: -1

**Plugin(Triangulate)**

Plugin(Triangulate) triangulates the points in the view ‘iView’, assuming that all the points belong to a surface that can be projected one-to-one onto a plane. If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Triangulate) creates one new view.

Numeric options:

**iView** Default value: -1

#### Plugin(Warp)

Plugin(Warp) transforms the elements in the view ‘iView’ by adding to their node coordinates the vector field stored in the ‘TimeStep’-th time step of the view ‘dView’, scaled by ‘Factor’. If ‘dView’ < 0, the vector field is taken as the field of surface normals multiplied by the ‘TimeStep’ value in ‘iView’. (The smoothing of the surface normals is controlled by the ‘SmoothingAngle’ parameter.) If ‘iView’ < 0, the plugin is run on the current view.

Plugin(Warp) is executed in-place.

Numeric options:

**Factor** Default value: 1

**TimeStep** Default value: 0

**SmoothingAngle**  
Default value: 180

**dView** Default value: -1

**iView** Default value: -1

## 6.3 Post-processing options

General post-processing option names have the form ‘PostProcessing.*string*’. Options peculiar to post-processing views take two forms:

1. options that should apply to all views can be set through ‘View.*string*’, *before any view is loaded*;
2. options that should apply only to the *n*-th view take the form ‘View[n].*string*’ (*n* = 0, 1, 2, . . .), *after the n-th view is loaded*.

See [Section 7.8 \[t8.geo\]](#), page 132, and [Section 7.9 \[t9.geo\]](#), page 135, for some examples.

#### PostProcessing.AnimationDelay

Delay (in seconds) between frames in automatic animation mode

Default value: 0.25

Saved in: General.OptionsFileName

#### PostProcessing.AnimationCycle

Cycle through views instead of time steps in automatic animation mode

Default value: 0

Saved in: General.OptionsFileName

#### PostProcessing.CombineRemoveOriginal

Remove original views after a Combine operation

Default value: 1

Saved in: General.OptionsFileName

#### PostProcessing.Format

Default file format for post-processing views (0=ASCII view, 1=binary view, 2=parsed view, 3=STL triangulation, 4=text, 5=mesh)

Default value: 0  
Saved in: General.OptionsFileName

**PostProcessing.HorizontalScales**  
Display value scales horizontally  
Default value: 1  
Saved in: General.OptionsFileName

**PostProcessing.Link**  
Link post-processing views (0=none, 1/2=changes in visible/all, 3/4=everything in visible/all)  
Default value: 0  
Saved in: General.OptionsFileName

**PostProcessing.NbViews**  
Current number of views merged (read-only)  
Default value: 0  
Saved in: -

**PostProcessing.Plugins**  
Enable default post-processing plugins?  
Default value: 1  
Saved in: General.OptionsFileName

**PostProcessing.Smoothing**  
Apply (non-reversible) smoothing to post-processing view when merged  
Default value: 0  
Saved in: General.OptionsFileName

**PostProcessing.VertexArrays**  
Use OpenGL vertex arrays to draw triangles in post-processing views?  
Default value: 1  
Saved in: General.OptionsFileName

**View.AxesFormatX**  
Number format for X-axis (in standard C form)  
Default value: "%.3g"  
Saved in: General.OptionsFileName

**View.AxesFormatY**  
Number format for Y-axis (in standard C form)  
Default value: "%.3g"  
Saved in: General.OptionsFileName

**View.AxesFormatZ**  
Number format for Z-axis (in standard C form)  
Default value: "%.3g"  
Saved in: General.OptionsFileName

**View.AxesLabelX**  
X-axis label  
Default value: ""  
Saved in: General.OptionsFileName

**View.AxesLabelY**  
Y-axis label  
Default value: ""  
Saved in: General.OptionsFileName

**View.AxesLabelZ**  
Z-axis label  
Default value: ""  
Saved in: General.OptionsFileName

**View.FileName**  
Default post-processing view file name  
Default value: ""  
Saved in: -

**View.Format**  
Number format (in standard C form)  
Default value: "%.3g"  
Saved in: General.OptionsFileName

**View.GeneralizedRaiseX**  
Generalized elevation of the view along X-axis (in model coordinates)  
Default value: "v0"  
Saved in: General.OptionsFileName

**View.GeneralizedRaiseY**  
Generalized elevation of the view along Y-axis (in model coordinates)  
Default value: "v1"  
Saved in: General.OptionsFileName

**View.GeneralizedRaiseZ**  
Generalized elevation of the view along Z-axis (in model coordinates)  
Default value: "v2"  
Saved in: General.OptionsFileName

**View.Name**  
Default post-processing view name  
Default value: ""  
Saved in: -

**View.Stipple0**  
First stippling pattern  
Default value: "1\*0x1F1F"  
Saved in: General.OptionsFileName

**View.Stipple1**  
Second stippling pattern  
Default value: "1\*0x3333"  
Saved in: General.OptionsFileName

**View.Stipple2**  
Third stippling pattern  
Default value: "1\*0x087F"  
Saved in: General.OptionsFileName

**View.Stipple3**  
Fourth stippling pattern  
Default value: "1\*0xCCCF"  
Saved in: General.OptionsFileName

**View.Stipple4**  
Fifth stippling pattern  
Default value: "2\*0x1111"  
Saved in: General.OptionsFileName

**View.Stipple5**  
Sixth stippling pattern  
Default value: "2\*0x0FOF"  
Saved in: General.OptionsFileName

**View.Stipple6**  
Seventh stippling pattern  
Default value: "1\*0xCFFF"  
Saved in: General.OptionsFileName

**View.Stipple7**  
Eighth stippling pattern  
Default value: "2\*0x0202"  
Saved in: General.OptionsFileName

**View.Stipple8**  
Ninth stippling pattern  
Default value: "2\*0x087F"  
Saved in: General.OptionsFileName

**View.Stipple9**  
Tenth stippling pattern  
Default value: "1\*0xFFFF"  
Saved in: General.OptionsFileName

**View.AngleSmoothNormals**  
Threshold angle below which normals are not smoothed  
Default value: 30  
Saved in: General.OptionsFileName

**View.ArrowHeadRadius**  
Relative radius of arrow head  
Default value: 0.12  
Saved in: General.OptionsFileName

**View.ArrowSize**  
Display size of arrows (in pixels)  
Default value: 60  
Saved in: General.OptionsFileName

**View.ArrowSizeProportional**  
Scale the arrows according to the norm of the vector  
Default value: 1  
Saved in: General.OptionsFileName

**View.ArrowStemLength**  
Relative length of arrow stem  
Default value: 0.56  
Saved in: General.OptionsFileName

**View.ArrowStemRadius**  
Relative radius of arrow stem  
Default value: 0.02  
Saved in: General.OptionsFileName

**View.AutoPosition**  
Position the scale or 2D plot automatically  
Default value: 1  
Saved in: General.OptionsFileName

**View.Axes**  
Axes (0=none, 1=simple axes, 2=box, 3=full grid, 4=open grid, 5=ruler)  
Default value: 0  
Saved in: General.OptionsFileName

**View.AxesAutoPosition**  
Position the axes automatically  
Default value: 1  
Saved in: General.OptionsFileName

**View.AxesMaxX**  
Maximum X-axis coordinate  
Default value: 1  
Saved in: General.OptionsFileName

**View.AxesMaxY**  
Maximum Y-axis coordinate  
Default value: 1  
Saved in: General.OptionsFileName

**View.AxesMaxZ**  
Maximum Z-axis coordinate  
Default value: 1  
Saved in: General.OptionsFileName

**View.AxesMinX**  
Minimum X-axis coordinate  
Default value: 0  
Saved in: General.OptionsFileName

**View.AxesMinY**  
Minimum Y-axis coordinate  
Default value: 0  
Saved in: General.OptionsFileName

**View.AxesMinZ**  
Minimum Z-axis coordinate  
Default value: 0  
Saved in: General.OptionsFileName

**View.AxesTicsX**  
Number of tics on the X-axis  
Default value: 5  
Saved in: General.OptionsFileName

**View.AxesTicsY**  
Number of tics on the Y-axis  
Default value: 5  
Saved in: General.OptionsFileName

**View.AxesTicsZ**  
Number of tics on the Z-axis  
Default value: 5  
Saved in: General.OptionsFileName

**View.Boundary**  
Draw the ‘N minus b’-dimensional boundary of the element (N=element dimension, b=option value)  
Default value: 0  
Saved in: General.OptionsFileName

**View.ColormapAlpha**  
Colormap alpha channel value (used only if != 1)  
Default value: 1  
Saved in: General.OptionsFileName

**View.ColormapAlphaPower**  
Colormap alpha channel power  
Default value: 0  
Saved in: General.OptionsFileName

**View.ColormapBeta**  
Colormap beta parameter (gamma = 1-beta)  
Default value: 0  
Saved in: General.OptionsFileName

**View.ColormapBias**  
Colormap bias  
Default value: 0  
Saved in: General.OptionsFileName

**View.ColormapCurvature**  
Colormap curvature or slope coefficient  
Default value: 0  
Saved in: General.OptionsFileName

**View.ColormapInvert**  
Invert the color values, i.e., replace x with (255-x) in the colormap?  
Default value: 0  
Saved in: General.OptionsFileName

**View.ColormapNumber**  
Default colormap number  
Default value: 2  
Saved in: General.OptionsFileName

**View.ColormapRotation**  
Incremental colormap rotation  
Default value: 0  
Saved in: General.OptionsFileName

**View.ColormapSwap**  
Swap the min/max values in the colormap?  
Default value: 0  
Saved in: General.OptionsFileName

**View.CustomMax**  
User-defined maximum value to be displayed  
Default value: 0  
Saved in: -

**View.CustomMin**  
User-defined minimum value to be displayed  
Default value: 0  
Saved in: -

**View.DisplacementFactor**  
Displacement amplification  
Default value: 1  
Saved in: General.OptionsFileName

**View.DrawHexahedra**  
Display post-processing hexahedra?  
Default value: 1  
Saved in: General.OptionsFileName

```
View.DrawLines
    Display post-processing lines?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawPoints
    Display post-processing points?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawPrisms
    Display post-processing prisms?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawPyramids
    Display post-processing pyramids?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawQuadrangles
    Display post-processing quadrangles?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawScalars
    Display scalar values?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawStrings
    Display post-processing annotation strings?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawTensors
    Display tensor values?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawTetrahedra
    Display post-processing tetrahedra?
    Default value: 1
    Saved in: General.OptionsFileName

View.DrawTriangles
    Display post-processing triangles?
    Default value: 1
    Saved in: General.OptionsFileName
```

**View.DrawVectors**  
Display vector values?  
Default value: 1  
Saved in: General.OptionsFileName

**View.Explode**  
Explode elements (between 0=point and 1=non-transformed)  
Default value: 1  
Saved in: General.OptionsFileName

**View.ExternalView**  
Index of the view used to color vector fields (-1=self)  
Default value: -1  
Saved in: General.OptionsFileName

**View.FakeTransparency**  
Use fake transparency (cheaper than the real thing, but incorrect)  
Default value: 0  
Saved in: General.OptionsFileName

**View.GeneralizedRaiseFactor**  
Generalized raise amplification factor  
Default value: 1  
Saved in: General.OptionsFileName

**View.GeneralizedRaiseView**  
Index of the view used for generalized raise (-1=self)  
Default value: -1  
Saved in: General.OptionsFileName

**View.GlyphLocation**  
Glyph (arrow, number, etc.) location (1=center of gravity, 2=node)  
Default value: 1  
Saved in: General.OptionsFileName

**View.Grid**  
Grid mode (this option is deprecated: use View.Axes instead)  
Default value: 0  
Saved in: -

**View.Height**  
Height (in pixels) of the scale or 2D plot  
Default value: 200  
Saved in: General.OptionsFileName

**View.IntervalsType**  
Type of interval display (1=iso, 2=continuous, 3=discrete, 4=numeric)  
Default value: 2  
Saved in: General.OptionsFileName

**View.Light**

Enable lighting for the view  
Default value: 1  
Saved in: General.OptionsFileName

**View.LightLines**

Light element edges  
Default value: 0  
Saved in: General.OptionsFileName

**View.LightTwoSide**

Light both sides of view elements (leads to slower rendering)  
Default value: 1  
Saved in: General.OptionsFileName

**View.LineType**

Display lines as solid color segments (0) or 3D cylinders (1)  
Default value: 0  
Saved in: General.OptionsFileName

**View.LineWidth**

Display width of lines (in pixels)  
Default value: 1  
Saved in: General.OptionsFileName

**View.Max** Maximum value in the view (read-only)  
Default value: 0  
Saved in: -**View.MaxX**

Maximum view coordinate along the X-axis (read-only)  
Default value: 0  
Saved in: -

**View.MaxY**

Maximum view coordinate along the Y-axis (read-only)  
Default value: 0  
Saved in: -

**View.MaxZ**

Maximum view coordinate along the Z-axis (read-only)  
Default value: 0  
Saved in: -

**View.Min** Minimum value in the view (read-only)  
Default value: 0  
Saved in: -**View.MinX**

Minimum view coordinate along the X-axis (read-only)  
Default value: 0  
Saved in: -

**View.MinY**

Minimum view coordinate along the Y-axis (read-only)  
Default value: 0  
Saved in: -

**View.MinZ**

Minimum view coordinate along the Z-axis (read-only)  
Default value: 0  
Saved in: -

**View.NbIso**

Number of intervals  
Default value: 15  
Saved in: `General.OptionsFileName`

**View.NbTimeStep**

Number of time steps in the view (do not change this!)  
Default value: 1  
Saved in: -

**ViewNormals**

Display size of normal vectors (in pixels)  
Default value: 0  
Saved in: `General.OptionsFileName`

**View.OffsetX**

Translation of the view along X-axis (in model coordinates)  
Default value: 0  
Saved in: -

**View.OffsetY**

Translation of the view along Y-axis (in model coordinates)  
Default value: 0  
Saved in: -

**View.OffsetZ**

Translation of the view along Z-axis (in model coordinates)  
Default value: 0  
Saved in: -

**View.PointSize**

Display size of points (in pixels)  
Default value: 3  
Saved in: `General.OptionsFileName`

**View.PointType**

Display points as solid color dots (0) or 3D spheres (1)  
Default value: 0  
Saved in: `General.OptionsFileName`

**View.PositionX**

Horizontal position (in pixels) of the upper left corner of the scale or 2D plot  
Default value: 100  
Saved in: General.OptionsFileName

**View.PositionY**

Vertical position (in pixels) of the upper left corner of the scale or 2D plot  
Default value: 50  
Saved in: General.OptionsFileName

**View.RaiseX**

Elevation of the view along X-axis (in model coordinates)  
Default value: 0  
Saved in: -

**View.RaiseY**

Elevation of the view along Y-axis (in model coordinates)  
Default value: 0  
Saved in: -

**View.RaiseZ**

Elevation of the view along Z-axis (in model coordinates)  
Default value: 0  
Saved in: -

**View.RangeType**

Value scale range type (1=default, 2=custom, 3=per time step)  
Default value: 1  
Saved in: General.OptionsFileName

**View.SaturateValues**

Saturate the view values to custom min and max (1=true, 0=false)  
Default value: 0  
Saved in: General.OptionsFileName

**View.ScaleType**

Value scale type (1=linear, 2=logarithmic, 3=double logarithmic)  
Default value: 1  
Saved in: General.OptionsFileName

**View>ShowElement**

Show element boundaries?  
Default value: 0  
Saved in: General.OptionsFileName

**View>ShowScale**

Show value scale?  
Default value: 1  
Saved in: General.OptionsFileName

**View>ShowTime**

Time display mode (0=hidden, 1=value if multiple, 2=value always, 3=step if multiple, 4=step always)

Default value: 3  
Saved in: General.OptionsFileName

**View.SmoothNormals**  
Smooth the normals?  
Default value: 0  
Saved in: General.OptionsFileName

**View.Stipple**  
Stipple curves in 2D plots?  
Default value: 0  
Saved in: General.OptionsFileName

**View.Tangents**  
Display size of tangent vectors (in pixels)  
Default value: 0  
Saved in: General.OptionsFileName

**View.TensorType**  
Tensor Visualization Type  
Default value: 0  
Saved in: General.OptionsFileName

**View.TimeStep**  
Current time step displayed  
Default value: 0  
Saved in: -

**View.Transform11**  
Element (1,1) of the 3x3 coordinate transformation matrix  
Default value: 1  
Saved in: -

**View.Transform12**  
Element (1,2) of the 3x3 coordinate transformation matrix  
Default value: 0  
Saved in: -

**View.Transform13**  
Element (1,3) of the 3x3 coordinate transformation matrix  
Default value: 0  
Saved in: -

**View.Transform21**  
Element (2,1) of the 3x3 coordinate transformation matrix  
Default value: 0  
Saved in: -

**View.Transform22**  
Element (2,2) of the 3x3 coordinate transformation matrix  
Default value: 1  
Saved in: -

**View.Transform23**  
Element (2,3) of the 3x3 coordinate transformation matrix  
Default value: 0  
Saved in: -

**View.Transform31**  
Element (3,1) of the 3x3 coordinate transformation matrix  
Default value: 0  
Saved in: -

**View.Transform32**  
Element (3,2) of the 3x3 coordinate transformation matrix  
Default value: 0  
Saved in: -

**View.Transform33**  
Element (3,3) of the 3x3 coordinate transformation matrix  
Default value: 1  
Saved in: -

**View.Type**  
Type of plot (1=3D, 2=2D space, 3=2D time)  
Default value: 1  
Saved in: -

**View.UseGeneralizedRaise**  
Use generalized raise?  
Default value: 0  
Saved in: General.OptionsFileName

**View.VectorType**  
Vector display type (1=segment, 2=arrow, 3=pyramid, 4=3D arrow, 5=displacement)  
Default value: 4  
Saved in: General.OptionsFileName

**View.Visible**  
Is the view visible?  
Default value: 1  
Saved in: -

**View.Width**  
Width (in pixels) of the scale or 2D plot  
Default value: 300  
Saved in: General.OptionsFileName

**View.Color.Points**  
Point color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Lines**  
Line color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Triangles**  
Triangle color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Quadrangles**  
Quadrangle color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Tetrahedra**  
Tetrahedron color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Hexahedra**  
Hexahedron color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Prisms**  
Prism color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Pyramids**  
Pyramid color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Tangents**  
Tangent vector color  
Default value: {255,255,0}  
Saved in: General.OptionsFileName

**View.Color.Normals**  
Normal vector color  
Default value: {255,0,0}  
Saved in: General.OptionsFileName

**View.Color.Text2D**  
2D text color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Text3D**  
3D text color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.Color.Axes**  
Axes color  
Default value: {255,255,255}  
Saved in: General.OptionsFileName

**View.ColorTable**  
Color table used to draw the view  
Saved in: General.OptionsFileName



## 7 Tutorial

The nine following examples introduce new features gradually, starting with ‘t1.geo’. The files corresponding to these examples are available in the ‘tutorial’ directory of the Gmsh distribution.

This tutorial does not explain the mesh and post-processing file formats: see Chapter 9 [File formats], page 145, for this.

To learn how to run Gmsh on your computer, see Chapter 8 [Running Gmsh], page 137. In addition, interactive tutorials that explain how to use the graphical user interface are available on Gmsh’s webpage:

- **The first interactive tutorial** shows how to create a simple 2D geometry and how to generate a mesh;
- **The second** shows several methods to visualize data sets on deformed grids;
- **The third** shows how to use post-processing plugins.

### 7.1 ‘t1.geo’

```
*****  
*  
* Gmsh tutorial 1  
*  
* Variables, elementary entities (points, lines, surfaces), physical  
* entities (points, lines, surfaces), background mesh  
*  
*****  
  
// The simplest construction of Gmsh's scripting language is the  
// 'affection'. The following command defines a new variable 'lc':  
  
lc = 0.009;  
  
// This variable can then for example be used in the definition of  
// Gmsh's simplest 'elementary entity', a 'Point'. A Point is defined  
// by a list of four numbers: its three coordinates (X, Y and Z), and  
// a characteristic length which sets the target element size at the  
// point:  
  
Point(1) = {0, 0, 0, 9.e-1 * lc};  
  
// The actual distribution of the mesh element sizes is then obtained  
// by interpolation of these characteristic lengths throughout the  
// geometry. There are also other possibilities to specify  
// characteristic lengths: attractors (see 't7.geo') and background  
// meshes (see 'bgmesh.pos').
```

```

// As can be seen in the previous definition, more complex expressions
// can be constructed from variables and floating point
// constants. Here, the product of the variable 'lc' by the constant
// 9.e-1 is given as the fourth argument of the list defining the
// point.

// We can then define some additional points as well as our first
// curve. Curves are Gmsh's second type of elementary entities, and,
// amongst curves, straight lines are the simplest. A straight line is
// defined by a list of point numbers. In the commands below, for
// example, the line 1 starts at point 1 and ends at point 2:

Point(2) = { .1, 0, 0, lc} ;
Point(3) = { .1, .3, 0, lc} ;
Point(4) = { 0, .3, 0, lc} ;

Line(1) = {1,2} ;
Line(2) = {3,2} ;
Line(3) = {3,4} ;
Line(4) = {4,1} ;

// The third elementary entity is the surface. In order to define a
// simple rectangular surface from the four lines defined above, a
// line loop has first to be defined. A line loop is a list of
// connected lines, a sign being associated with each line (depending
// on the orientation of the line):

Line Loop(5) = {4,1,-2,3} ;

// We can then define the surface as a list of line loops (only one
// here, since there are no holes--see 't4.geo'):

Plane Surface(6) = {5} ;

// At this level, Gmsh knows everything to display the rectangular
// surface 6 and to mesh it. An optional step is needed if we want to
// associate specific region numbers to the various elements in the
// mesh (e.g. to the line segments discretizing lines 1 to 4 or to the
// triangles discretizing surface 6). This is achieved by the
// definition of 'physical entities'. Physical entities will group
// elements belonging to several elementary entities by giving them a
// common number (a region number), and specifying their orientation.

// We can for example group the points 1 and 2 into the physical
// entity 1:

Physical Point(1) = {1,2} ;

```

```

// Consequently, two punctual elements will be saved in the output
// files, both with the region number 1. The mechanism is identical
// for line or surface elements:

Physical Line(10) = {1,2,4} ;

MySurface = 100;
Physical Surface(MySurface) = {6} ;

// All the line elements created during the meshing of lines 1, 2 and
// 4 will be saved in the output file with the region number 10; and
// all the triangular elements resulting from the discretization of
// surface 6 will be given the region number 100.

// Note that, if no physical entities are defined, all the elements in
// the mesh will be directly saved with their default orientation and
// with a region number equal to the number of the elementary entity
// they discretize.

```

## 7.2 ‘t2.geo’

```

/*****************
*
* Gmsh tutorial 2
*
* Includes, geometrical transformations, extruded geometries,
* elementary entities (volumes), physical entities (volumes)
*
*************************/

```

// We first include the previous tutorial file, in order to use it as  
// a basis for this one:

```

Include "t1.geo";

// We can then add new points and lines in the same way as we did in
// ‘t1.geo’:

Point(5) = {0, .4, 0, lc};
Line(5) = {4, 5};

// But Gmsh also provides tools to transform (translate, rotate, etc.)
// elementary entities or copies of elementary entities. For example,
// the point 3 can be moved by 0.05 units to the left with:

```

```

Translate {-0.05, 0, 0} { Point{3}; }

// The resulting point can also be duplicated and translated by 0.1
// along the y axis:

tmp[] = Translate {0, 0.1, 0} { Duplicata{ Point{3}; } } ;

// In this case, we assigned the result of the Translate command to a
// list, so that we can retrieve the number of the newly created point
// and use it to create new lines and a new surface:

Line(7) = {3,tmp[0]};
Line(8) = {tmp[0],5};
Line Loop(10) = {5,-8,-7,3};
Plane Surface(11) = {10};

// Of course, these transformation commands not only apply to points,
// but also to lines and surfaces. We can for example translate a copy
// of surface 6 by 0.12 units along the z axis and define some
// additional lines and surfaces with:

h = 0.12;
Translate {0, 0, h} { Duplicata{ Surface{6}; } }

Line(106) = {1,8};
Line(107) = {2,12};
Line(108) = {3,16};
Line(109) = {4,7};

Line Loop(110) = {1,107,-103,-106}; Plane Surface(111) = {110};
Line Loop(112) = {2,107,104,-108}; Plane Surface(113) = {112};
Line Loop(114) = {3,109,-105,-108}; Plane Surface(115) = {114};
Line Loop(116) = {4,106,-102,-109}; Plane Surface(117) = {116};

// Volumes are the fourth type of elementary entities in Gmsh. In the
// same way one defines line loops to build surfaces, one has to
// define surface loops (i.e. 'shells') to build volumes. The
// following volume does not have holes and thus consists of a single
// surface loop:

Surface Loop(118) = {117,-6,111,-113,101,115};
Volume(119) = {118};

// Another way to define a volume is by extruding a surface. The
// following command extrudes the surface 11 along the z axis and
// automatically creates a new volume:

```

```

Extrude {0, 0, h} { Surface{11}; }

// All these geometrical transformations automatically generate new
// elementary entities. The following command permits to manually
// specify a characteristic length for some of the new points:

Characteristic Length {tmp[0], 2, 12, 3, 16, 6, 22} = lc * 4;

// Note that, if the transformation tools are handy to create complex
// geometries, it is also sometimes useful to generate the 'flat'
// geometry, with an explicit list of all elementary entities. This
// can be achieved by selecting the 'File->Save as->Gmsh unrolled
// geometry' menu or by typing
//
// > gmsh t2.geo -0
//
// on the command line.

// To save all the tetrahedra discretizing the volumes 119 and 120
// with a common region number, we finally define a physical
// volume:

Physical Volume (1) = {119,120};

```

### 7.3 ‘t3.geo’

```

*****
*
* Gmsh tutorial 3
*
* Extruded meshes, options
*
*****
// Again, we start by including the first tutorial:

Include "t1.geo";

// As in ‘t2.geo’, we plan to perform an extrusion along the z axis.
// But here, instead of only extruding the geometry, we also want to
// extrude the 2D mesh. This is done with the same ‘Extrude’ command,
// but by specifying element ‘Layers’ (2 layers in this case, the
// first one with 8 subdivisions and the second one with 2
// subdivisions, both with a height of h/2):

h = 0.1;

```

```

Extrude {0,0,h} {
    Surface{6}; Layers{ {8,2}, {0.5,1} };
}

// The extrusion can also be performed with a rotation instead of a
// translation, and the resulting mesh can be recombined into prisms
// (we use only one layer here, with 7 subdivisions). All rotations
// are specified by an axis direction ({0,1,0}), an axis point
// ({-0.1,0,0.1}) and a rotation angle (-Pi/2):

Extrude { {0,1,0} , {-0.1,0,0.1} , -Pi/2 } {
    Surface{122}; Layers { 7, 1 }; Recombine;
}

// Note that a translation ({-2*h,0,0}) and a rotation ({1,0,0},
// {0,0.15,0.25}, Pi/2) can also be combined:

out[] = Extrude { {-2*h,0,0}, {1,0,0} , {0,0.15,0.25} , Pi/2 } {
    Surface{news-1}; Layers{ 10, 1 }; Recombine;
};

// In this last extrusion command we retrieved the volume
// number programatically by saving the output of the command
// into an array. This array will contain the "top" of the extruded
// surface (in out[0]) as well as the newly created volume (in
// out[1]). 

// We can then define a new physical volume to save all
// the tetrahedra with a common region number (101):

Physical Volume(101) = {1, 2, out[1]};

// Let us now change some options... Since all interactive options are
// accessible in Gmsh's scripting language, we can for example define
// a global characteristic length factor, redefine some background
// colors, disable the display of the axes, and select an initial
// viewpoint in XYZ mode (disabling the interactive trackball-like
// rotation mode) directly in the input file:

Mesh.CharacteristicLengthFactor = 4;
General.Color.Background = {120,120,120};
General.Color.Foreground = {255,255,255};
General.Color.Text = White;
Geometry.Color.Points = Orange;
General.Axes = 0;
General.Trackball = 0;

```

```

General.RotationCenterGravity = 0;
General.RotationCenterX = 0;
General.RotationCenterY = 0;
General.RotationCenterZ = 0;
General.RotationX = 10;
General.RotationY = 70;
General.TranslationX = -0.2;

// Note that all colors can be defined literally or numerically, i.e.
// 'General.Color.Background = Red' is equivalent to
// 'General.Color.Background = {255,0,0}'; and also note that, as with
// user-defined variables, the options can be used either as right or
// left hand sides, so that the following command will set the surface
// color to the same color as the points:

Geometry.Color.Surfaces = Geometry.Color.Points;

// You can click on the '?' button in the status bar of the graphic
// window to see the current values of all options. To save all the
// options in a file, you can use the 'File->Save as->Gmsh options'
// menu. To save the current options as the default options for all
// future Gmsh sessions, you should use the 'Tools->Options->Save'
// button.

```

## 7.4 ‘t4.geo’

```

/****************************************************************************
*
*   Gmsh tutorial 4
*
*   Built-in functions, holes, strings, mesh color
*
****************************************************************************

// As usual, we start by defining some variables, some points and some
// lines:

cm = 1e-02;

e1 = 4.5*cm; e2 = 6*cm / 2; e3 = 5*cm / 2;

h1 = 5*cm; h2 = 10*cm; h3 = 5*cm; h4 = 2*cm; h5 = 4.5*cm;

R1 = 1*cm; R2 = 1.5*cm; r = 1*cm;

ccos = ( -h5*R1 + e2 * Hypot(h5,Hypot(e2,R1)) ) / (h5^2 + e2^2);

```

```

ssin = Sqrt(1-ccos^2);

Lc1 = 0.01;
Lc2 = 0.003;

Point(1) = { -e1-e2, 0.0 , 0.0 , Lc1};
Point(2) = { -e1-e2, h1 , 0.0 , Lc1};
Point(3) = { -e3-r , h1 , 0.0 , Lc2};
Point(4) = { -e3-r , h1+r , 0.0 , Lc2};
Point(5) = { -e3 , h1+r , 0.0 , Lc2};
Point(6) = { -e3 , h1+h2, 0.0 , Lc1};
Point(7) = { e3 , h1+h2, 0.0 , Lc1};
Point(8) = { e3 , h1+r , 0.0 , Lc2};
Point(9) = { e3+r , h1+r , 0.0 , Lc2};
Point(10)= { e3+r , h1 , 0.0 , Lc2};
Point(11)= { e1+e2, h1 , 0.0 , Lc1};
Point(12)= { e1+e2, 0.0 , 0.0 , Lc1};
Point(13)= { e2 , 0.0 , 0.0 , Lc1};

Point(14)= { R1 / ssin , h5+R1*ccos, 0.0 , Lc2};
Point(15)= { 0.0 , h5 , 0.0 , Lc2};
Point(16)= { -R1 / ssin , h5+R1*ccos, 0.0 , Lc2};
Point(17)= { -e2 , 0.0 , 0.0 , Lc1};

Point(18)= { -R2 , h1+h3 , 0.0 , Lc2};
Point(19)= { -R2 , h1+h3+h4, 0.0 , Lc2};
Point(20)= { 0.0 , h1+h3+h4, 0.0 , Lc2};
Point(21)= { R2 , h1+h3+h4, 0.0 , Lc2};
Point(22)= { R2 , h1+h3 , 0.0 , Lc2};
Point(23)= { 0.0 , h1+h3 , 0.0 , Lc2};

Point(24)= { 0 , h1+h3+h4+R2, 0.0 , Lc2};
Point(25)= { 0 , h1+h3-R2, 0.0 , Lc2};

Line(1) = {1 ,17};
Line(2) = {17,16};

// Since not all curves are straight lines, Gmsh provides many other
// curve primitives: splines, B-splines, circle arcs, ellipse arcs,
// etc. Here we define a new circle arc, starting at point 14 and
// ending at point 16, with the circle's center being the point 15:

Circle(3) = {14,15,16};

// Note that, in Gmsh, circle arcs should always be strictly smaller
// than Pi. We can then define additional lines and circles, as well
// as a new surface:

```

```
Line(4)  = {14,13};
Line(5)  = {13,12};
Line(6)  = {12,11};
Line(7)  = {11,10};
Circle(8) = { 8, 9,10};
Line(9)  = { 8, 7};
Line(10) = { 7, 6};
Line(11) = { 6, 5};
Circle(12) = { 3, 4, 5};
Line(13) = { 3, 2};
Line(14) = { 2, 1};
Line(15) = {18,19};
Circle(16) = {21,20,24};
Circle(17) = {24,20,19};
Circle(18) = {18,23,25};
Circle(19) = {25,23,22};
Line(20) = {21,22};

Line Loop(21) = {17,-15,18,19,-20,16};
Plane Surface(22) = {21};

// But we still need to define the exterior surface. Since it has a
// hole, its definition now requires two lines loops:

Line Loop(23) = {11,-12,13,14,1,2,-3,4,5,6,7,-8,9,10};
Plane Surface(24) = {23,21};

// Finally, we can add some comments by embedding a post-processing
// view containing some strings, and change the color of some mesh
// entities:

View "comments" {
    // 10 pixels from the left and 15 pixels from the top of the graphic
    // window:
    T2(10,15,0){StrCat("File created on ", Today)};

    // 10 pixels from the left and 10 pixels from the bottom of the
    // graphic window:
    T2(10,-10,0>{"Copyright (C) My Company"});

    // in the model, at (X,Y,Z) = (0.0,0.11,0.0):
    T3(0,0.11,0,0>{"Hole"});
};

Color Grey70{ Surface{ 22 };}
Color Purple{ Surface{ 24 };
```

```
Color Red{ Line{ 1:14 }; }
Color Yellow{ Line{ 15:20 }; }
```

## 7.5 ‘t5.geo’

```
*****
*
* Gmsh tutorial 5
*
* Characteristic lengths, arrays of variables, functions, loops
*
*****
```

// Again, we start by defining some characteristic lengths:

```
lcar1 = .1;
lcar2 = .0005;
lcar3 = .055;

// If we wanted to change these lengths globally (without changing the
// above definitions), we could give a global scaling factor for all
// characteristic lengths on the command line with the ‘-clscale’
// option (or with ‘Mesh.CharacteristicLengthFactor’ in an option
// file). For example, with:
//
// > gmsh t5 -clscale 1
//
// this input file produces a mesh of approximately 2,500 nodes and
// 13,000 tetrahedra (in 4 seconds on a 1.2GHz PC). With
//
// > gmsh t5 -clscale 0.2
//
// (i.e. with all characteristic lengths divided by 5), the mesh
// counts approximately 260,000 nodes and 1.6 million tetrahedra (and
// the computation takes 16 minutes on the same machine).

// Let us proceed by defining some elementary entities describing a
// truncated cube:
```

```
Point(1) = {0.5,0.5,0.5,lcar2}; Point(2) = {0.5,0.5,0,lcar1};
Point(3) = {0,0.5,0.5,lcar1}; Point(4) = {0,0,0.5,lcar1};
Point(5) = {0.5,0,0.5,lcar1}; Point(6) = {0.5,0,0,lcar1};
Point(7) = {0,0.5,0,lcar1}; Point(8) = {0,1,0,lcar1};
Point(9) = {1,1,0,lcar1}; Point(10) = {0,0,1,lcar1};
Point(11) = {0,1,1,lcar1}; Point(12) = {1,1,1,lcar1};
Point(13) = {1,0,1,lcar1}; Point(14) = {1,0,0,lcar1};
```

```

Line(1) = {8,9};    Line(2) = {9,12};   Line(3) = {12,11};
Line(4) = {11,8};    Line(5) = {9,14};   Line(6) = {14,13};
Line(7) = {13,12};    Line(8) = {11,10};   Line(9) = {10,13};
Line(10) = {10,4};   Line(11) = {4,5};    Line(12) = {5,6};
Line(13) = {6,2};    Line(14) = {2,1};    Line(15) = {1,3};
Line(16) = {3,7};    Line(17) = {7,2};    Line(18) = {3,4};
Line(19) = {5,1};    Line(20) = {7,8};    Line(21) = {6,14};

Line Loop(22) = {-11,-19,-15,-18};   Plane Surface(23) = {22};
Line Loop(24) = {16,17,14,15};        Plane Surface(25) = {24};
Line Loop(26) = {-17,20,1,5,-21,13};  Plane Surface(27) = {26};
Line Loop(28) = {-4,-1,-2,-3};       Plane Surface(29) = {28};
Line Loop(30) = {-7,2,-5,-6};        Plane Surface(31) = {30};
Line Loop(32) = {6,-9,10,11,12,21};  Plane Surface(33) = {32};
Line Loop(34) = {7,3,8,9};           Plane Surface(35) = {34};
Line Loop(36) = {-10,18,-16,-20,4,-8}; Plane Surface(37) = {36};
Line Loop(38) = {-14,-13,-12,19};    Plane Surface(39) = {38};

// Instead of using included files, let us now use a user-defined
// function in order to carve some holes in the cube:

```

#### Function CheeseHole

```

// In the following commands we use the reserved variable name
// 'newp', which automatically selects a new point number. This
// number is chosen as the highest current point number, plus
// one. (Note that, analogously to 'newp', the variables 'newc',
// 'news', 'newv' and 'newreg' select the highest number amongst
// currently defined curves, surfaces, volumes and 'any entities
// other than points', respectively.)

```

```

p1 = newp; Point(p1) = {x, y, z, lcar3} ;
p2 = newp; Point(p2) = {x+r,y, z, lcar3} ;
p3 = newp; Point(p3) = {x, y+r,z, lcar3} ;
p4 = newp; Point(p4) = {x, y, z+r,lcar3} ;
p5 = newp; Point(p5) = {x-r,y, z, lcar3} ;
p6 = newp; Point(p6) = {x, y-r,z, lcar3} ;
p7 = newp; Point(p7) = {x, y, z-r,lcar3} ;

c1 = newreg; Circle(c1) = {p2,p1,p7};
c2 = newreg; Circle(c2) = {p7,p1,p5};
c3 = newreg; Circle(c3) = {p5,p1,p4};
c4 = newreg; Circle(c4) = {p4,p1,p2};
c5 = newreg; Circle(c5) = {p2,p1,p3};
c6 = newreg; Circle(c6) = {p3,p1,p5};
c7 = newreg; Circle(c7) = {p5,p1,p6};

```

```

c8 = newreg; Circle(c8) = {p6,p1,p2};
c9 = newreg; Circle(c9) = {p7,p1,p3};
c10 = newreg; Circle(c10) = {p3,p1,p4};
c11 = newreg; Circle(c11) = {p4,p1,p6};
c12 = newreg; Circle(c12) = {p6,p1,p7};

// We need non-plane surfaces to define the spherical cheese
// holes. Here we use ruled surfaces, which can have 3 or 4
// sides:

l1 = newreg; Line Loop(l1) = {c5,c10,c4}; Ruled Surface(newreg) = {l1};
l2 = newreg; Line Loop(l2) = {c9,-c5,c1}; Ruled Surface(newreg) = {l2};
l3 = newreg; Line Loop(l3) = {c12,-c8,-c1}; Ruled Surface(newreg) = {l3};
l4 = newreg; Line Loop(l4) = {c8,-c4,c11}; Ruled Surface(newreg) = {l4};
l5 = newreg; Line Loop(l5) = {-c10,c6,c3}; Ruled Surface(newreg) = {l5};
l6 = newreg; Line Loop(l6) = {-c11,-c3,c7}; Ruled Surface(newreg) = {l6};
l7 = newreg; Line Loop(l7) = {-c2,-c7,-c12}; Ruled Surface(newreg) = {l7};
l8 = newreg; Line Loop(l8) = {-c6,-c9,c2}; Ruled Surface(newreg) = {l8};

// Please note that all surface meshes are generated by projecting a
// 2D planar mesh onto the surface, and that this method gives nice
// results only if the surface's curvature is small enough. If not,
// you will have to cut the surface in pieces.

// We then use an array of variables to store the surface loops
// identification numbers for later reference (we will need these to
// define the final volume):

theloops[t] = newreg ;

Surface Loop(theloops[t]) = {l8+1,l5+1,l1+1,l2+1,l3+1,l7+1,l6+1,l4+1};

thehole = newreg ;
Volume(thehole) = theloops[t] ;

Return

// We can use a 'For' loop to generate five holes in the cube:

x = 0 ; y = 0.75 ; z = 0 ; r = 0.09 ;

For t In {1:5}

    x += 0.166 ;
    z += 0.166 ;

    Call CheeseHole ;

```

```

// We define a physical volume for each hole:

Physical Volume (t) = thehole ;

// We also print some variables on the terminal (note that, since
// all variables are treated internally as floating point numbers,
// the format string should only contain valid floating point format
// specifiers):

Printf("Hole %g (center = {%g,%g,%g}, radius = %g) has number %g!",
      t, x, y, z, r, thehole) ;

EndFor

// We can then define the surface loop for the exterior surface of the
// cube:

theloops[0] = newreg ;

Surface Loop(theloops[0]) = {35,31,29,37,33,23,39,25,27} ;

// The volume of the cube, without the 5 cheese holes, is now defined
// by 6 surface loops (the exterior surface and the five interior
// loops). To reference an array of variables, its identifier is
// followed by '[]':

Volume(186) = {theloops[]} ;

// We finally define a physical volume for the elements discretizing
// the cube, without the holes (whose elements were already tagged
// with numbers 1 to 5 in the 'For' loop):

Physical Volume (10) = 186 ;

```

## 7.6 ‘t6.geo’

```

*****
*
*   Gmsh tutorial 6
*
*   Transfinite meshes
*
*****
// We start by defining a more complex geometry, using the same

```

```

// commands as in the previous examples:

r_int   = 0.05 ;
r_ext   = 0.051 ;
r_far   = 0.125 ;
r_inf   = 0.4 ;
phi1    = 30. * (Pi/180.) ;
angl   = 45. * (Pi/180.) ;

nbpt_phi   = 5 ; nbpt_int   = 20 ;
nbpt_arc1  = 10 ; nbpt_arc2  = 10 ;
nbpt_shell = 10 ; nbpt_far   = 25 ; nbpt_inf  = 15 ;

lc0 = 0.1 ; lc1 = 0.1 ; lc2 = 0.3 ;

Point(1) = {0,      0, 0, lc0} ;
Point(2) = {r_int, 0, 0, lc0} ;
Point(3) = {r_ext, 0, 0, lc1} ;
Point(4) = {r_far, 0, 0, lc2} ;
Point(5) = {r_inf, 0, 0, lc2} ;
Point(6) = {0,      r_int, lc0} ;
Point(7) = {0,      r_ext, lc1} ;
Point(8) = {0,      r_far, lc2} ;
Point(9) = {0,      r_inf, lc2} ;

Point(10) = {r_int*Cos(phi1), r_int*Sin(phi1), 0, lc0} ;
Point(11) = {r_ext*Cos(phi1), r_ext*Sin(phi1), 0, lc1} ;
Point(12) = {r_far*Cos(phi1), r_far*Sin(phi1), 0, lc2} ;
Point(13) = {r_inf*Cos(phi1), r_inf*Sin(phi1), 0, lc2} ;

Point(14) = {r_int/2, 0, 0, lc2} ;
Point(15) = {r_int/2*Cos(phi1), r_int/2*Sin(phi1), 0, lc2} ;
Point(16) = {r_int/2, 0, r_int/2, lc2} ;
Point(17) = {r_int/2*Cos(phi1), r_int/2*Sin(phi1), r_int/2, lc2} ;
Point(18) = {0,      r_int/2, lc2} ;
Point(19) = {r_int*Cos(angl), 0, r_int*Sin(angl), lc2} ;
Point(20) = {r_int*Cos(angl)*Cos(phi1), r_int*Cos(angl)*Sin(phi1),
             r_int*Sin(angl), lc2} ;
Point(21) = {r_ext*Cos(angl), 0, r_ext*Sin(angl), lc2} ;
Point(22) = {r_ext*Cos(angl)*Cos(phi1), r_ext*Cos(angl)*Sin(phi1),
             r_ext*Sin(angl), lc2} ;
Point(23) = {r_far*Cos(angl), 0, r_far*Sin(angl), lc2} ;
Point(24) = {r_far*Cos(angl)*Cos(phi1), r_far*Cos(angl)*Sin(phi1),
             r_far*Sin(angl), lc2} ;
Point(25) = {r_inf, 0, r_inf, lc2} ;
Point(26) = {r_inf*Cos(phi1), r_inf*Sin(phi1), r_inf, lc2} ;

```

```
Circle(1) = {2,1,19}; Circle(2) = {19,1,6}; Circle(3) = {3,1,21};
Circle(4) = {21,1,7}; Circle(5) = {4,1,23}; Circle(6) = {23,1,8};
Line(7) = {5,25}; Line(8) = {25,9};
Circle(9) = {10,1,20}; Circle(10)= {20,1,6}; Circle(11) = {11,1,22};
Circle(12)= {22,1,7}; Circle(13)= {12,1,24}; Circle(14) = {24,1,8};
Line(15) = {13,26}; Line(16) = {26,9};
Circle(17)= {19,1,20}; Circle(18)= {21,1,22}; Circle(19) = {23,1,24};
Circle(20)= {25,1,26}; Circle(21)= {2,1,10}; Circle(22) = {3,1,11};
Circle(23)= {4,1,12}; Circle(24)= {5,1,13};

Line(25) = {1,14}; Line(26) = {14,2}; Line(27) = {2,3};
Line(28) = {3,4}; Line(29) = {4,5}; Line(30) = {1,15};
Line(31) = {15,10}; Line(32) = {10,11}; Line(33) = {11,12};
Line(34) = {12,13}; Line(35) = {14,15}; Line(36) = {14,16};
Line(37) = {15,17}; Line(38) = {16,17}; Line(39) = {18,16};
Line(40) = {18,17}; Line(41) = {1,18}; Line(42) = {18,6};
Line(43) = {6,7}; Line(44) = {16,19}; Line(45) = {19,21};
Line(46) = {21,23}; Line(47) = {23,25}; Line(48) = {17,20};
Line(49) = {20,22}; Line(50) = {22,24}; Line(51) = {24,26};
Line(52) = {7,8}; Line(53) = {8,9};

Line Loop(54) = {39,-36,-25,41}; Ruled Surface(55) = {54};
Line Loop(56) = {44,-1,-26,36}; Ruled Surface(57) = {56};
Line Loop(58) = {3,-45,-1,27}; Ruled Surface(59) = {58};
Line Loop(60) = {5,-46,-3,28}; Ruled Surface(61) = {60};
Line Loop(62) = {7,-47,-5,29}; Ruled Surface(63) = {62};
Line Loop(64) = {-2,-44,-39,42}; Ruled Surface(65) = {64};
Line Loop(66) = {-4,-45,2,43}; Ruled Surface(67) = {66};
Line Loop(68) = {-6,-46,4,52}; Ruled Surface(69) = {68};
Line Loop(70) = {-8,-47,6,53}; Ruled Surface(71) = {70};
Line Loop(72) = {-40,-41,30,37}; Ruled Surface(73) = {72};
Line Loop(74) = {48,-9,-31,37}; Ruled Surface(75) = {74};
Line Loop(76) = {49,-11,-32,9}; Ruled Surface(77) = {76};
Line Loop(78) = {-50,-11,33,13}; Ruled Surface(79) = {78};
Line Loop(80) = {-51,-13,34,15}; Ruled Surface(81) = {80};
Line Loop(82) = {10,-42,40,48}; Ruled Surface(83) = {82};
Line Loop(84) = {12,-43,-10,49}; Ruled Surface(85) = {84};
Line Loop(86) = {14,-52,-12,50}; Ruled Surface(87) = {86};
Line Loop(88) = {16,-53,-14,51}; Ruled Surface(89) = {88};
Line Loop(90) = {-30,25,35}; Ruled Surface(91) = {90};
Line Loop(92) = {-40,39,38}; Ruled Surface(93) = {92};
Line Loop(94) = {37,-38,-36,35}; Ruled Surface(95) = {94};
Line Loop(96) = {-48,-38,44,17}; Ruled Surface(97) = {96};
Line Loop(98) = {18,-49,-17,45}; Ruled Surface(99) = {98};
Line Loop(100) = {19,-50,-18,46}; Ruled Surface(101) = {100};
Line Loop(102) = {20,-51,-19,47}; Ruled Surface(103) = {102};
Line Loop(104) = {-2,17,10}; Ruled Surface(105) = {104};
```

```

Line Loop(106) = {-9,-21,1,17}; Ruled Surface(107) = {106};
Line Loop(108) = {-4,18,12}; Ruled Surface(109) = {108};
Line Loop(110) = {-11,-22,3,18}; Ruled Surface(111) = {110};
Line Loop(112) = {-13,-23,5,19}; Ruled Surface(113) = {112};
Line Loop(114) = {-6,19,14}; Ruled Surface(115) = {114};
Line Loop(116) = {-15,-24,7,20}; Ruled Surface(117) = {116};
Line Loop(118) = {-8,20,16}; Ruled Surface(119) = {118};
Line Loop(120) = {-31,-35,26,21}; Ruled Surface(121) = {120};
Line Loop(122) = {32,-22,-27,21}; Ruled Surface(123) = {122};
Line Loop(124) = {33,-23,-28,22}; Ruled Surface(125) = {124};
Line Loop(126) = {34,-24,-29,23}; Ruled Surface(127) = {126};

Surface Loop(128) = {93,-73,-55,95,-91};
Volume(129) = {128}; // int
Surface Loop(130) = {107,-75,-97,95,57,121};
Volume(131) = {130}; // int b
Surface Loop(132) = {105,-65,-97,-83,-93};
Volume(133) = {132}; // int h
Surface Loop(134) = {99,-111,77,123,59,107};
Volume(135) = {134}; // shell b
Surface Loop(136) = {99,-109,67,105,85};
Volume(137) = {136}; // shell h
Surface Loop(138) = {113,79,-101,-111,-125,-61};
Volume(139) = {138}; // ext b
Surface Loop(140) = {115,-69,-101,-87,-109};
Volume(141) = {140}; // ext h
Surface Loop(142) = {103,-117,-81,113,127,63};
Volume(143) = {142}; // inf b
Surface Loop(144) = {89,-119,71,103,115};
Volume(145) = {144}; // inf h

// Once the geometry is defined, we then add transfinite mesh commands
// in order to explicitly define a structured mesh.

// 1. Transfinite line commands specify the number of points on the
// curves and their distribution ('Progression 2' means that each line
// element in the series will be twice as long as the preceding one):

Transfinite Line{35,21,22,23,24,38,17,18,19,20} = nbpt_phi ;
Transfinite Line{31,26,48,44,42} = nbpt_int Using Progression 0.88;
Transfinite Line{41,37,36,9,11,1,3,13,5,15,7} = nbpt_arc1 ;
Transfinite Line{30,25,40,39,10,2,12,4,14,6,16,8} = nbpt_arc2 ;
Transfinite Line{32,27,49,45,43} = nbpt_shell ;
Transfinite Line{33,28,46,50,52} = nbpt_far Using Progression 1.2 ;
Transfinite Line{34,29,51,47,53} = nbpt_inf Using Progression 1.05;

// 2. Transfinite surfaces are defined by an ordered list of the

```

```
// points on their boundary (the ordering of these points defines the
// ordering of the mesh elements). Note that a transfinite surface can
// only have 3 or 4 sides:

Transfinite Surface{55} = {1,14,16,18};
Transfinite Surface{57} = {14,2,19,16};
Transfinite Surface{59} = {2,3,21,19};
Transfinite Surface{61} = {3,4,23,21};
Transfinite Surface{63} = {4,5,25,23};
Transfinite Surface{73} = {1,15,17,18};
Transfinite Surface{75} = {15,10,20,17};
Transfinite Surface{77} = {10,11,22,20};
Transfinite Surface{79} = {11,12,24,22};
Transfinite Surface{81} = {12,13,26,24};
Transfinite Surface{65} = {18,16,19,6};
Transfinite Surface{67} = {6,19,21,7};
Transfinite Surface{69} = {7,21,23,8};
Transfinite Surface{71} = {8,23,25,9};
Transfinite Surface{83} = {17,18,6,20};
Transfinite Surface{85} = {20,6,7,22};
Transfinite Surface{87} = {22,7,8,24};
Transfinite Surface{89} = {24,8,9,26};
Transfinite Surface{91} = {1,14,15};
Transfinite Surface{95} = {15,14,16,17};
Transfinite Surface{93} = {18,16,17};
Transfinite Surface{121} = {15,14,2,10};
Transfinite Surface{97} = {17,16,19,20};
Transfinite Surface{123} = {10,2,3,11};
Transfinite Surface{99} = {20,19,21,22};
Transfinite Surface{107} = {10,2,19,20};
Transfinite Surface{105} = {6,20,19};
Transfinite Surface{109} = {7,22,21};
Transfinite Surface{111} = {11,3,21,22};
Transfinite Surface{101} = {22,21,23,24};
Transfinite Surface{125} = {11,3,4,12};
Transfinite Surface{115} = {8,24,23};
Transfinite Surface{113} = {24,12,4,23};
Transfinite Surface{127} = {12,13,5,4};
Transfinite Surface{103} = {24,23,25,26};
Transfinite Surface{119} = {9,26,25};
Transfinite Surface{117} = {13,5,25,26};

// 3. Transfinite volumes are also defined by an ordered list of the
// points on their boundary (the ordering defines the ordering of the
// mesh elements). A transfinite volume can only have 6 or 8 faces:

Transfinite Volume{129} = {1,14,15,18,16,17};
```

```

Transfinite Volume{131} = {17,16,14,15,20,19,2,10};
Transfinite Volume{133} = {18,17,16,6,20,19};
Transfinite Volume{135} = {10,2,19,20,11,3,21,22};
Transfinite Volume{137} = {6,20,19,7,22,21};
Transfinite Volume{139} = {11,3,4,12,22,21,23,24};
Transfinite Volume{141} = {7,22,21,8,24,23};
Transfinite Volume{143} = {12,4,5,13,24,23,25,26};
Transfinite Volume{145} = {8,24,23,9,26,25};

// As with Extruded meshes, the 'Recombine' command tells Gmsh to
// recombine the simplices into quadrangles, prisms or hexahedra when
// possible:

Recombine Surface {55:127};

// We finish by defing some physical entities:

VolInt          = 1000 ;
SurfIntPhi0     = 1001 ; SurfIntPhi1      = 1002 ;
SurfIntZ0       = 1003 ;

VolShell         = 2000 ;
SurfShellInt    = 2001 ; SurfShellExt     = 2002 ;
SurfShellPhi0   = 2003 ; SurfShellPhi1    = 2004 ;
SurfShellZ0     = 2005 ;
LineShellIntPhi0 = 2006 ;
LineShellIntPhi1 = 2007 ; LineShellIntZ0   = 2008 ;
PointShellInt   = 2009 ;

VolExt           = 3000 ;
VolInf           = 3001 ;
SurfInf          = 3002 ;
SurfExtInfPhi0  = 3003 ; SurfExtInfPhi1   = 3004 ;
SurfExtInfZ0    = 3005 ;
SurfInfRight    = 3006 ;
SurfInfTop      = 3007 ;

Physical Volume (VolInt)      = {129,131,133} ;
Physical Surface (SurfIntPhi0) = {55,57,65} ;
Physical Surface (SurfIntPhi1) = {73,75,83} ;
Physical Surface (SurfIntZ0)   = {91,121} ;

Physical Volume (VolShell)    = {135,137} ;
Physical Surface (SurfShellInt) = {105,107} ;
Physical Surface (SurfShellExt) = {109,111} ;
Physical Surface (SurfShellPhi0) = {59,67} ;
Physical Surface (SurfShellPhi1) = {77,85} ;

```

```

Physical Surface (SurfShellZ0)      = {123} ;
Physical Line   (LineShellIntPhi0) = {1,2} ;
Physical Line   (LineShellIntPhi1) = {9,10} ;
Physical Line   (LineShellIntZ0)   = 21 ;
//Physical Point (PointShellInt)   = 6 ;

Physical Volume (VolExt)          = {139,141} ;
Physical Volume (VolInf)          = {143,145} ;
Physical Surface (SurfExtInfPhi0) = {61,63,69,71} ;
Physical Surface (SurfExtInfPhi1) = {79,87,81,89} ;
Physical Surface (SurfExtInfZ0)   = {125,127} ;
Physical Surface (SurfInfRight)   = {117} ;
Physical Surface (SurfInfTop)     = {119} ;

```

## 7.7 ‘t7.geo’

```

/************************************************
*
* Gmsh tutorial 7
*
* Anisotropic meshes, attractors
*
************************************************/
// The anisotropic 2D mesh generator can be selected with:
Mesh.Algorithm = 2 ;
// One can force a 4 step Laplacian smoothing of the mesh with:
Mesh.Smoothing = 4 ;
lc = .1;
Point(1) = {0.0,0.0,0,lc};
Point(2) = {1.2,-0.2,0,lc};
Point(3) = {1,1,0,lc};
Point(4) = {0,1,0,lc};

Line(1) = {3,2};
Line(2) = {2,1};
Line(3) = {1,4};
Line(4) = {4,3};

Line Loop(5) = {1,2,3,4};
Plane Surface(6) = {5};

```

```

Point(5) = {0.1,0.2,0,lc};
Point(11) = {0.4,0.7,-1,lc};
Point(12) = {0.5,0.5,0,lc};
Point(22) = {0.9,0.9,1,lc};

Line(5) = {11,22};

Spline(7) = {4,5,12,2};

// Isotropic and anisotropic attractors can be defined on points and
// lines (this is still experimental and known to be unstable: use at
// your own risk!):

Attractor Point{1} = {0.01, 0.01, 2};

Attractor Line{5} = {0.3, 0.01, 2};

Attractor Line{7} = {0.1, 0.02, 8};

```

## 7.8 ‘t8.geo’

```

/****************************************************************************
*
*   Gmsh tutorial 8
*
*   Post-processing, scripting, animations, options
*
****************************************************************************/

// We first include ‘t1.geo’ as well as some post-processing views:

Include "t1.geo" ;
Include "view1.pos" ;
Include "view1.pos" ;
Include "view4.pos" ;

// We then set some general options:

General.Trackball = 0 ;
General.RotationX = 0 ;
General.RotationY = 0 ;
General.RotationZ = 0 ;
General.Color.Background = White ;
General.Color.Foreground = Black ;

```

```
General.Color.Text = Black ;
General.Orthographic = 0 ;
General.Axes = 0 ;
General.SmallAxes = 0 ;

// We also set some options for each post-processing view:

v0 = PostProcessing.NbViews-4;
v1 = v0+1;
v2 = v0+2;
v3 = v0+3;

View[v0].IntervalsType = 2 ;
View[v0].OffsetZ = 0.05 ;
View[v0].RaiseZ = 0 ;
View[v0].Light = 1 ;
View[v0].ShowScale = 0;
View[v0].SmoothNormals = 1;

View[v1].IntervalsType = 1 ;
View[v1].ColorTable = { Green, Blue } ;
View[v1].NbIso = 10 ;
View[v1].ShowScale = 0;

View[v2].Name = "Test..." ;
View[v2].Axes = 1;
View[v2].Color.Axes = Black;
View[v2].IntervalsType = 2 ;
View[v2].Type = 2;
View[v2].IntervalsType = 2 ;
View[v2].AutoPosition = 0;
View[v2].PositionX = 85;
View[v2].PositionY = 50;
View[v2].Width = 200;
View[v2].Height = 130;

View[v3].Visible = 0;

// We then loop from 1 to 255 with a step of 1. (To use a different
// step, just add a third argument in the list. For example, 'For num
// In {0.5:1.5:0.1}' would increment num from 0.5 to 1.5 with a step
// of 0.1.)

t = 0 ;

//For num In {1:1}
```

```

For num In {1:255}

    View[v0].TimeStep = t ;
    View[v1].TimeStep = t ;
    View[v2].TimeStep = t ;
    View[v3].TimeStep = t ;

    t = (View[v0].TimeStep < View[v0].NbTimeStep-1) ? t+1 : 0 ;

    View[v0].RaiseZ += 0.01/View[v0].Max * t ;

    If (num == 3)
        // We want to create 320x240 frames when num == 3:
        General.GraphicsWidth = 320 ;
        General.GraphicsHeight = 240 ;
    EndIf

    // It is possible to nest loops:
    For num2 In {1:50}

        General.RotationX += 10 ;
        General.RotationY = General.RotationX / 3 ;
        General.RotationZ += 0.1 ;

        Sleep 0.01; // sleep for 0.01 second
        Draw; // draw the scene

        If (num == 3)
            // The 'Print' command saves the graphical window; the 'Sprintf'
            // function permits to create the file names on the fly:
            Print Sprintf("t8-%02g.gif", num2);
            Print Sprintf("t8-%02g.jpg", num2);
        EndIf

    EndFor

    If(num == 3)
        // Here we could make a system call to generate a movie. For example,
        // with whirlgif:
        //
        // System "whirlgif -minimize -loop -o t8.gif t8-*.*";
        //
        // with mpeg_encode:
        //
        // System "mpeg_encode t8.par";

```

```

// with mencoder:
//
// System "mencoder 'mf://*.jpg' -mf fps=5 -o t8.mpg -ovc lavc
//           -lavcopts vcodec=mpeg1video:vhq";
// System "mencoder 'mf://*.jpg' -mf fps=5 -o t8.mpg -ovc lavc
//           -lavcopts vcodec=mpeg4:vhq";

// with ffmpeg:
//
// System "ffmpeg -hq -r 5 -b 800 -vcodec mpeg1video
//           -i t8-%02d.jpg t8.mpg"
// System "ffmpeg -hq -r 5 -b 800 -i t8-%02d.jpg t8.asf"
EndIf

EndFor

```

## 7.9 ‘t9.geo’

```

*****/*
*
* Gmsh tutorial 9
*
* Post-processing plugins (levelsets, sections, annotations)
*
*****/

// Plugins can be added to Gmsh in order to extend its
// capabilities. For example, post-processing plugins can modify a
// view, or create a new view based on previously loaded
// views. Several default plugins are statically linked with Gmsh,
// e.g. CutMap, CutPlane, CutSphere, Skin, Transform or Smooth.
// Plugins can be controlled in the same way as other options: either
// from the graphical interface (right click on the view button, then
// 'Plugins'), or from the command file.

// Let us for example include a three-dimensional scalar view:

Include "view3.pos" ;

// We then set some options for the 'CutMap' plugin (which extracts an
// isovalue surface from a 3D scalar view), and run it:

Plugin(CutMap).A = 0.67 ; // iso-value level
Plugin(CutMap).iView = 0 ; // source view is View[0]
Plugin(CutMap).Run ;

```

```
// We also set some options for the 'CutPlane' plugin (which computes
// a section of a 3D view), and then run it:

Plugin(CutPlane).A = 0 ;
Plugin(CutPlane).B = 0.2 ;
Plugin(CutPlane).C = 1 ;
Plugin(CutPlane).D = 0 ;
Plugin(CutPlane).Run ;

// Add a title

Plugin(Annotate).Text = "A nice title" ;
// By convention, a value greater than 99999 represents the center (we
// could also use 'General.GraphicsWidth/2', but that would only center
// the string for the current window size):
Plugin(Annotate).X = 1.e5;
Plugin(Annotate).Y = 50 ;
Plugin(Annotate).Font = "Times-BoldItalic" ;
Plugin(Annotate).FontSize = 28 ;
Plugin(Annotate).Align = "Center" ;
Plugin(Annotate).Run ;

Plugin(Annotate).Text = "(and a small subtitle)" ;
Plugin(Annotate).Y = 70 ;
Plugin(Annotate).Font = "Times-Roman" ;
Plugin(Annotate).FontSize = 12 ;
Plugin(Annotate).Run ;

// We finish by setting some options and redrawing the scene:

General.BackgroundGradient = 1;

View[0].Light = 1;
View[0].IntervalsType = 1;
View[0].NbIso = 6;
View[0].SmoothNormals = 1;

View[1].IntervalsType = 2;

View[2].IntervalsType = 2;

Draw;
```

## 8 Running Gmsh

### 8.1 Interactive mode

Gmsh's first operating mode is the 'interactive graphical mode'. To launch Gmsh in interactive mode, just click or double-click on the Gmsh icon (Windows and Mac), or type

```
> gmsh
```

at your shell prompt in a terminal (Unix). This will open two windows: the graphic window (with a status bar at the bottom) and the menu window (with a menu bar and some context-dependent buttons).

To open the first tutorial file (see [Chapter 7 \[Tutorial\], page 113](#)), select the 'File->Open' menu, and choose 't1.geo' in the input field. When using a terminal, you can also specify the file name directly on the command line, i.e.:

```
> gmsh t1.geo
```

To perform the mesh generation, go to the mesh module (by selecting 'Mesh' in the module menu) and choose the required dimension in the context-dependent buttons ('1D' will mesh all the lines; '2D' will mesh all the surfaces—as well as all the lines if '1D' was not called before; '3D' will mesh all the volumes—and all the surfaces if '2D' was not called before). To save the resulting mesh in the current mesh format, choose 'Save' in the context-dependent buttons, or select the appropriate format with the 'File->Save As' menu. The default mesh file name is based on the name of the first input file on the command line (or 'untitled' if there wasn't any input file given), with an appended extension depending on the mesh format<sup>1</sup>.

To create a new geometry or to modify an existing geometry, select 'Geometry' in the module menu, and follow the context-dependent buttons. For example, to create a spline, select 'Elementary', 'Add', 'New' and 'Spline'. You will then be asked to select a list of points, and to type *e* to finish the selection (or *q* to abort it). Once the interactive command is completed, a text string is automatically added at the end of the current project file. You can edit this project file by hand at any time by pressing the 'Edit' button in the 'Geometry' menu and then reloading the project by pressing 'Reload'. For example, it is often faster to define variables and points directly in the project file, and then use the graphical user interface to define the lines, the surfaces and the volumes interactively.

Several files can be loaded simultaneously in Gmsh. The first one defines the project, while the others are appended ('merged') to this project. You can merge such files with the 'File->Merge' menu, or by directly specifying the names of the files on the command line. For example, to merge the post-processing views contained in the files 'view1.pos' and 'view2.pos' together with the geometry of the first tutorial 't1.geo', you can type the following command:

```
> gmsh t1.geo view1.pos view2.pos
```

In the Post-Processing module (select 'Post-Processing' in the module menu), two view buttons will appear, respectively labeled 'a scalar map' and 'a vector map'. A mouse click

---

<sup>1</sup> Nearly all the interactive commands have shortcuts: see [Section 8.5 \[Keyboard shortcuts\], page 141](#), or select 'Help->Keyboard Shortcuts' in the menu.

on the name will toggle the visibility of the selected view, while a click on the arrow button on the right will provide access to the view's options. If you want the modifications made to one view to affect also all the other views, select the 'Apply next changes to all views' or 'Force same options for all views' option in the 'Tools->Options->Post-processing' menu. Note that all the options specified interactively can also be directly specified in the ASCII input files. All available options, with their current values, can be saved into a file by selecting 'File->Save As->Gmsh options', or simply viewed by pressing the '?' button in the status bar. To save the current options as your default preferences for all future Gmsh sessions, use the 'Tools->Options->Save' button.

## 8.2 Non-interactive mode

Gmsh's second operating mode is the non-interactive (or 'batch') mode. In this mode, there is no graphical user interface, and all operations are performed without any user interaction<sup>2</sup>. For example, to mesh the first tutorial in non-interactive mode, just type:

```
> gmsh t1.geo -2
```

To mesh the same example, but with the background mesh available in the file 'bgmesh.pos', type:

```
> gmsh t1.geo -2 -bgm bgmesh.pos
```

For the list of all command-line options, see [Section 8.3 \[Command-line options\]](#), page 138.

## 8.3 Command-line options

Geometry options:

**-0** Parse input files, output unrolled geometry, and exit

Mesh options:

**-1, -2, -3** Perform batch 1D, 2D and 3D mesh generation

**-saveall** Save all elements (discard physical group definitions)

**-o file** Specify mesh output file name

**-format string** Set output mesh format (msh, unv, gref, stl, p3d)

**-algo string** Select mesh algorithm (iso, tri, aniso, netgen)

**-smooth int** Set number of mesh smoothing steps

**-optimize** Optimize quality of tetrahedral elements

---

<sup>2</sup> If you compile Gmsh without the graphical user interface, i.e., with `./configure --disable-gui`, this is the only mode you have access to.

```
-order int
    Set the order of the generated elements (1, 2)
-scale float
    Set global scaling factor
-meshscale float
    Set mesh scaling factor
-clscale float
    Set characteristic length scaling factor
-rand float
    Set random perturbation factor
-bgm file Load background mesh from file
-constrain
    Constrain background mesh with characteristic lengths
-histogram
    Print mesh quality histogram
-extrude
    Use old extrusion mesh generator
-recombine
    Recombine meshes from old extrusion mesh generator
-interactive
    Display 2D mesh construction interactively
```

Post-processing options:

```
-noview
    Hide all views on startup
-link int
    Select link mode between views (0, 1, 2, 3, 4)
-smoothview
    Smooth views
-combine
    Combine views having identical names into multi-time-step views
```

Display options:

```
-nodb
    Disable double buffering
-fontsize int
    Specify the font size for the GUI
-scheme string
    Specify FLTK GUI scheme
-display string
    Specify display
```

Other options:

```

-a, -g, -m, -s, -p
    Start in automatic, geometry, mesh, solver or post-processing mode

-pid      Print pid on stdout

-listen   Always listen to incoming connection requests.

-v int    Set verbosity level

-nopopup  Don't popup dialog windows in scripts

-string "string"
    Parse option string at startup

-option file
    Parse option file at startup

-convert file file
    Perform batch conversion of views and meshes into latest file formats

-version  Show version number

-info     Show detailed version information

-help     Show this message

```

## 8.4 Mouse actions

In the following, for a 2 button mouse, *Middle button* = *Shift+Left button*. For a 1 button mouse, *Middle button* = *Shift+Left button* and *Right button* = *Alt+Left button*.

*Move the mouse:*

- Highlight the elementary geometrical entity currently under the mouse pointer and display its properties in the status bar
- Resize a lasso zoom or a lasso selection started with *Ctrl+Left button*

*Left button:*

- Rotate
- Select an entity
- Accept a lasso zoom or a lasso selection started with *Ctrl+Left button*

*Ctrl+Left button:* Start a lasso zoom or a lasso selection

*Middle button:*

- Zoom
- Unselect an entity
- Cancel a lasso zoom or a lasso selection

*Ctrl+Middle button:* Orthogonalize display

*Right button:*

- Pan
- Cancel a lasso zoom or a lasso selection
- Pop-up menu on post-processing view button

*Ctrl+Right button:* Reset to default viewpoint

## 8.5 Keyboard shortcuts

(On Mac Ctrl is replaced by Cmd (the ‘Apple key’) in the shortcuts below.)

*Left arrow* Go to previous time step

*Right arrow*

Go to next time step

*Up arrow* Make previous view visible

*Down arrow*

Make next view visible

< Go back to previous context

> Go forward to next context

0 Reload project file

1 or F1 Mesh lines

2 or F2 Mesh surfaces

3 or F3 Mesh volumes

*Escape* Cancel lasso zoom/selection, toggle mouse selection ON/OFF

*g* Go to geometry module

*m* Go to mesh module

*p* Go to post-processing module

*s* Go to solver module

*Shift+a* Bring all windows to front

*Shift+g* Show geometry options

*Shift+m* Show mesh options

*Shift+o* Show general options

*Shift+p* Show post-processing options

*Shift+s* Show solver options

*Shift+w* Show post-processing view options

*Ctrl+i* Show statistics window

*Ctrl+l* Show message console

*Ctrl+n* Create new project file

*Ctrl+o* Open project file

*Ctrl+q* Quit

*Ctrl+r* Rename project file

*Ctrl+s* Save file

*Shift+Ctrl+c*

Show clipping plane window

*Shift+Ctrl+m*

Show manipulator window

*Shift+Ctrl+n*

Show option window

*Shift+Ctrl+o*

Merge file(s)

*Shift+Ctrl+s*

Save mesh in default format

*Shift+Ctrl+v*

Show visibility window

*Alt+a* Loop through axes modes

*Alt+b* Hide/show bounding boxes

*Alt+c* Loop through predefined color schemes

*Alt+d* Change surface mesh display mode (solid/wireframe)

*Alt+f* Change redraw mode (fast/full)

*Alt+g* Loop through grid modes for visible post-processing views

*Alt+h* Hide/show all post-processing views

*Alt+i* Hide/show all post-processing view scales

*Alt+l* Hide/show geometry lines

*Alt+m* Toggle visibility of all mesh entities

*Alt+n* Hide/show all post-processing view annotations

*Alt+o* Change projection mode (orthographic/perspective)

*Alt+p* Hide/show geometry points

*Alt+s* Hide/show geometry surfaces

*Alt+t* Loop through interval modes for visible post-processing views

*Alt+v* Hide/show geometry volumes

*Alt+w* Enable/disable all lighting

*Alt+x* Set X view

*Alt+y* Set Y view

*Alt+z* Set Z view

*Alt+Shift+a*  
Hide/show small axes

*Alt+Shift+l*  
Hide/show surface mesh edges

*Alt+Shift+o*  
Adjust projection parameters

*Alt+Shift+p*  
Hide/show mesh points

*Alt+Shift+s*  
Hide/show mesh surfaces

*Alt+Shift+v*  
Hide/show mesh volumes

*Alt+Shift+x*  
Set -X view

*Alt+Shift+y*  
Set -Y view

*Alt+Shift+z*  
Set -Z view

144

Gmsh 1.65

## 9 File formats

This chapter describes Gmsh's native mesh and post-processing file formats. (These formats have version numbers that are independent of Gmsh's main version number.)

All non-parsed file formats have sections enclosed between `$Key` and `$EndKey` tags.

### 9.1 Gmsh mesh file formats

Please note that the list of nodes and elements in Gmsh's mesh files do not have to be dense or ordered (i.e., the node and element numbers do not have to be given in a consecutive or even an ordered way). A sample C++ program to transform the formats so that all lists are dense and ordered is available in the source distribution ('`utils/misc/mshsort.cpp`'). This program is also a good example on how to read and write files in the '`.msh`' format.

#### 9.1.1 Version 1.0

The '`.msh`' file format, version 1.0, is Gmsh's old native mesh file format, now superseded by the format described in [Section 9.1.2 \[Version 2.0\], page 147](#).

In the '`.msh`' file format, version 1.0, the file is divided in two sections, defining the nodes (`$NOD-$ENDNOD`) and the elements (`$ELM-$ENDELM`) in the mesh:

```
$NOD
number-of-nodes
node-number x-coord y-coord z-coord
...
$ENDNOD
$ELM
number-of-elements
elm-number elm-type reg-phys reg-elem number-of-nodes node-number-list
...
$ENDELM
```

where

*number-of-nodes*

is the number of nodes in the mesh.

*node-number*

is the number (index) of the *n*-th node in the mesh. Note that the *node-numbers* do not have to be given in a consecutive (or even an ordered) way.

*x-coord* *y-coord* *z-coord*

are the floating point values giving the X, Y and Z coordinates of the *n*-th node.

*number-of-elements*

is the number of elements in the mesh.

*elm-number*

is the number (index) of the *n*-th element in the mesh. Note that the *elm-numbers* do not have to be given in a consecutive (or even an ordered) way.

*elm-type* defines the geometrical type of the  $n$ -th element:

- 1 Line (2 nodes).
- 2 Triangle (3 nodes).
- 3 Quadrangle (4 nodes).
- 4 Tetrahedron (4 nodes).
- 5 Hexahedron (8 nodes).
- 6 Prism (6 nodes).
- 7 Pyramid (5 nodes).
- 8 Second order line (3 nodes: 2 associated with the vertices and 1 with the edge).
- 9 Second order triangle (6 nodes: 3 associated with the vertices and 3 with the edges).
- 10 Second order quadrangle (9 nodes: 4 associated with the vertices, 4 with the edges and 1 with the face).
- 11 Second order tetrahedron (10 nodes: 4 associated with the vertices and 6 with the edges).
- 12 Second order hexahedron (27 nodes: 8 associated with the vertices, 12 with the edges, 6 with the faces and 1 with the volume).
- 13 Second order prism (18 nodes: 6 associated with the vertices, 9 with the edges and 3 with the quadrangular faces).
- 14 Second order pyramid (14 nodes: 5 associated with the vertices, 8 with the edges and 1 with the quadrangular face).
- 15 Point (1 node).

See below for the ordering of the nodes.

*reg-phys* is the number of the physical entity to which the element belongs.

*reg-elem* is the number of the elementary entity to which the element belongs.

*number-of-nodes*

is the number of nodes for the  $n$ -th element. This is redundant, but kept for backward compatibility.

*node-number-list*

is the list of the *number-of-nodes* node numbers of the  $n$ -th element. The ordering of the nodes is given in [Section 9.3 \[Gmsh node ordering\]](#), page 155; for second order elements, the first order nodes are given first, followed by the nodes associated with the edges, followed by the nodes associated with the quadrangular faces (if any), followed by the nodes associated with the volume (if any). The ordering of these additional nodes follows the ordering of the edges and quadrangular faces given in [Section 9.3 \[Gmsh node ordering\]](#), page 155.

### 9.1.2 Version 2.0

Version 2.0 of the ‘.msh’ file format is Gmsh’s new native mesh file format. It is very similar to the old one (see [Section 9.1.1 \[Version 1.0\], page 145](#)), but is more general: it contains information about itself and allows to associate an arbitrary number of integer tags with each element.

The ‘.msh’ file format, version 2.0, is divided in three sections, defining the file format (\$MeshFormat-\$EndMeshFormat), the nodes (\$Nodes-\$EndNodes) and the elements (\$Elements-\$EndElements) in the mesh:

```
$MeshFormat
2.0 file-type data-size
$EndMeshFormat
$Nodes
number-of-nodes
node-number x-coord y-coord z-coord
...
$EndNodes
$Elements
number-of-elements
elm-number elm-type number-of-tags < tag > ... node-number-list
...
$EndElements
```

where

*file-type* is an integer equal to 0 in the ASCII file format.

*data-size* is an integer equal to the size of the floating point numbers used in the file (usually, *data-size* = sizeof(double)).

*number-of-nodes*

is the number of nodes in the mesh.

*node-number*

is the number (index) of the *n*-th node in the mesh. Note that the *node-numbers* do not have to be given in a consecutive (or even an ordered) way.

*x-coord* *y-coord* *z-coord*

are the floating point values giving the X, Y and Z coordinates of the *n*-th node.

*number-of-elements*

is the number of elements in the mesh.

*elm-number*

is the number (index) of the *n*-th element in the mesh. Note that the *elm-numbers* do not have to be given in a consecutive (or even an ordered) way.

*elm-type* defines the geometrical type of the *n*-th element:

1 Line (2 nodes).

2 Triangle (3 nodes).

- 3        Quadrangle (4 nodes).
- 4        Tetrahedron (4 nodes).
- 5        Hexahedron (8 nodes).
- 6        Prism (6 nodes).
- 7        Pyramid (5 nodes).
- 8        Second order line (3 nodes: 2 associated with the vertices and 1 with the edge).
- 9        Second order triangle (6 nodes: 3 associated with the vertices and 3 with the edges).
- 10      Second order quadrangle (9 nodes: 4 associated with the vertices, 4 with the edges and 1 with the face).
- 11      Second order tetrahedron (10 nodes: 4 associated with the vertices and 6 with the edges).
- 12      Second order hexahedron (27 nodes: 8 associated with the vertices, 12 with the edges, 6 with the faces and 1 with the volume).
- 13      Second order prism (18 nodes: 6 associated with the vertices, 9 with the edges and 3 with the quadrangular faces).
- 14      Second order pyramid (14 nodes: 5 associated with the vertices, 8 with the edges and 1 with the quadrangular face).
- 15      Point (1 node).

See below for the ordering of the nodes.

#### *number-of-tags*

gives the number of tags for the  $n$ -th element. By default, Gmsh generates meshes with two tags and reads files with an arbitrary number of tags: see below.

#### *tag*

is an integer tag associated with the  $n$ -th element. By default, the first tag is the number of the physical entity to which the element belongs; the second is the number of the elementary geometrical entity to which the element belongs; the third is the number of a mesh partition to which the element belongs.

#### *node-number-list*

is the list of the node numbers of the  $n$ -th element. The ordering of the nodes is given in [Section 9.3 \[Gmsh node ordering\], page 155](#); for second order elements, the first order nodes are given first, followed by the nodes associated with the edges, followed by the nodes associated with the quadrangular faces (if any), followed by the nodes associated with the volume (if any). The ordering of these additional nodes follows the ordering of the edges and quadrangular faces given in [Section 9.3 \[Gmsh node ordering\], page 155](#).

## 9.2 Gmsh post-processing file formats

Gmsh can read and write data sets in three different file formats: the “parsed”, “ASCII” and “binary” file formats. The parsed format is the oldest and most flexible, but also the slowest to read/write. The ASCII and binary formats are less flexible but allow for faster read/write operations, which is useful for (very) large data sets.

Gmsh can convert any format to any other, either in a script (cf. `Save View` and `PostProcessing.Format` in [Section 6.1 \[Post-processing commands\], page 83](#), and [Section 6.3 \[Post-processing options\], page 96](#), respectively) or in the graphical user interface (using the ‘View->Save As’ menu).

### 9.2.1 Parsed post-processing file format

Gmsh’s oldest post-processing format (“parsed”) is read by Gmsh’s script parser (see also [Section 6.1 \[Post-processing commands\], page 83](#)). You can thus, for example, embed parsed post-processing views directly into your geometrical descriptions (see, e.g., [Section 7.4 \[t4.geo\], page 119](#)).

The parsed format is very powerful, since all the values are *expressions*, and it can be easily generated “on-the-fly”, as there is no header containing *a priori* information on the size of the data set. Its syntax is also very permissive, which makes it ideal for testing purposes. Its main disadvantage resides in the overhead introduced by the parser, which makes loading a view in parsed format slower than loading a view in ASCII or binary format. This is only a disadvantage for very large data sets, though.

A post-processing view in parsed format is defined as follows (there can be one or more views in the same file):

```
View "string" {
    < TIME { expression-list } ; >
    type ( list-of-coords ) { list-of-values } ;
    ...
};
```

where the 47 object *types* that can be displayed are:

	<i>type</i>	<i>#list-of-coords</i>	<i>#list-of-values</i>
<hr/>			
Scalar point	SP	3	1 * nb-time-steps
Vector point	VP	3	3 * nb-time-steps
Tensor point	TP	3	9 * nb-time-steps
Scalar line	SL	6	2 * nb-time-steps
Vector line	VL	6	6 * nb-time-steps
Tensor line	TL	6	18 * nb-time-steps
Scalar triangle	ST	9	3 * nb-time-steps
Vector triangle	VT	9	9 * nb-time-steps
Tensor triangle	TT	9	27 * nb-time-steps
Scalar quadrangle	SQ	12	4 * nb-time-steps
Vector quadrangle	VQ	12	12 * nb-time-steps
Tensor quadrangle	TQ	12	36 * nb-time-steps

Scalar tetrahedron	SS	12	4 * nb-time-steps
Vector tetrahedron	VS	12	12 * nb-time-steps
Tensor tetrahedron	TS	12	36 * nb-time-steps
Scalar hexahedron	SH	24	8 * nb-time-steps
Vector hexahedron	VH	24	24 * nb-time-steps
Tensor hexahedron	TH	24	72 * nb-time-steps
Scalar prism	SI	18	6 * nb-time-steps
Vector prism	VI	18	18 * nb-time-steps
Tensor prism	TI	18	54 * nb-time-steps
Scalar pyramid	SY	15	5 * nb-time-steps
Vector pyramid	VY	15	15 * nb-time-steps
Tensor pyramid	TY	15	45 * nb-time-steps
Second order scalar line	SL2	9	3 * nb-time-steps
Second order vector line	VL2	9	9 * nb-time-steps
Second order tensor line	TL2	9	27 * nb-time-steps
Second order scalar triangle	ST2	18	6 * nb-time-steps
Second order vector triangle	VT2	18	18 * nb-time-steps
Second order tensor triangle	TT2	18	54 * nb-time-steps
Second order scalar quadrangle	SQ2	27	9 * nb-time-steps
Second order vector quadrangle	VQ2	27	27 * nb-time-steps
Second order tensor quadrangle	TQ2	27	81 * nb-time-steps
Second order scalar tetrahedron	SS2	30	10 * nb-time-steps
Second order vector tetrahedron	VS2	30	30 * nb-time-steps
Second order tensor tetrahedron	TS2	30	90 * nb-time-steps
Second order scalar hexahedron	SH2	81	27 * nb-time-steps
Second order vector hexahedron	VH2	81	81 * nb-time-steps
Second order tensor hexahedron	TH2	81	243 * nb-time-steps
Second order scalar prism	SI2	54	18 * nb-time-steps
Second order vector prism	VI2	54	54 * nb-time-steps
Second order tensor prism	TI2	54	162 * nb-time-steps
Second order scalar pyramid	SY2	42	14 * nb-time-steps
Second order vector pyramid	VY2	42	42 * nb-time-steps
Second order tensor pyramid	TY2	42	126 * nb-time-steps
2D text	T2	3	arbitrary
3D text	T3	4	arbitrary

The coordinates are given ‘by node’<sup>1</sup>, i.e.,

- ( $coord_1$ ,  $coord_2$ ,  $coord_3$ ) for a point,
- ( $coord_1-node_1$ ,  $coord_2-node_1$ ,  $coord_3-node_1$ ,  
 $coord_1-node_2$ ,  $coord_2-node_2$ ,  $coord_3-node_2$ ) for a line,
- ( $coord_1-node_1$ ,  $coord_2-node_1$ ,  $coord_3-node_1$ ,  
 $coord_1-node_2$ ,  $coord_2-node_2$ ,  $coord_3-node_2$ ,  
 $coord_1-node_3$ ,  $coord_2-node_3$ ,  $coord_3-node_3$ ) for a triangle,
- etc.

---

<sup>1</sup> Beware that this is different from the ordering of the node coordinates in the ASCII and binary post-processing file formats.

The ordering of the nodes is given in [Section 9.3 \[Gmsh node ordering\], page 155](#). For second order elements, the first order nodes are given first, followed by the nodes associated with the edges, followed by the nodes associated with the quadrangular faces (if any), followed by the nodes associated with the volume (if any). The ordering of these additional nodes follows the ordering of the edges and quadrangular faces given in [Section 9.3 \[Gmsh node ordering\], page 155](#).

The values are given by time step, by node and by component, i.e.:

```
comp1-node1-time1, comp2-node1-time1, comp3-node1-time1,
comp1-node2-time1, comp2-node2-time1, comp3-node2-time1,
comp1-node3-time1, comp2-node3-time1, comp3-node3-time1,
comp1-node1-time2, comp2-node1-time2, comp3-node1-time2,
comp1-node2-time2, comp2-node2-time2, comp3-node2-time2,
comp1-node3-time2, comp2-node3-time2, comp3-node3-time2,
...

```

For the 2D text objects, the two first *expressions* in *list-of-coords* give the X-Y position of the string in screen coordinates, measured from the top-left corner of the window. If the first (respectively second) *expression* is negative, the position is measured from the right (respectively bottom) edge of the window. If the value of the first (respectively second) *expression* is larger than 99999, the string is centered horizontally (respectively vertically). If the third *expression* is equal to zero, the text is aligned bottom-left and displayed using the default font and size. Otherwise, the third *expression* is converted into an integer whose eight lower bits give the font size, whose eight next bits select the font (the index corresponds to the position in the font menu in the GUI), and whose eight next bits define the text alignment (0=bottom-left, 1=bottom-center, 2=bottom-right, 3=top-left, 4=top-center, 5=top-right, 6=center-left, 7=center-center, 8=center-right).

For the 3D text objects, the three first *expressions* in *list-of-coords* give the XYZ position of the string in model (real world) coordinates. The fourth *expression* has the same meaning as the third *expression* in 2D text objects.

For both 2D and 3D text objects, the *list-of-values* can contain an arbitrary number of *char-expressions*.

The optional TIME list can contain a list of expressions giving the value of the time (or any other variable) for which an evolution was saved.

## 9.2.2 ASCII post-processing file format

The ASCII post-processing file is divided in several sections: one format section, enclosed between \$PostFormat-\$EndPostFormat tags, and one or more post-processing views, enclosed between \$View-\$EndView tags:

```
$PostFormat
 1.4 file-type data-size
$EndPostFormat
$view
view-name nb-time-steps
nb-scalar-points nb-vector-points nb-tensor-points
nb-scalar-lines nb-vector-lines nb-tensor-lines
```

```

nb-scalar-triangles nb-vector-triangles nb-tensor-triangles
nb-scalar-quadrangles nb-vector-quadrangles nb-tensor-quadrangles
nb-scalar-tetrahedra nb-vector-tetrahedra nb-tensor-tetrahedra
nb-scalar-hexahedra nb-vector-hexahedra nb-tensor-hexahedra
nb-scalar-prisms nb-vector-prisms nb-tensor-prisms
nb-scalar-pyramids nb-vector-pyramids nb-tensor-pyramids
nb-scalar-lines2 nb-vector-lines2 nb-tensor-lines2
nb-scalar-triangles2 nb-vector-triangles2 nb-tensor-triangles2
nb-scalar-quadrangles2 nb-vector-quadrangles2 nb-tensor-quadrangles2
nb-scalar-tetrahedra2 nb-vector-tetrahedra2 nb-tensor-tetrahedra2
nb-scalar-hexahedra2 nb-vector-hexahedra2 nb-tensor-hexahedra2
nb-scalar-prisms2 nb-vector-prisms2 nb-tensor-prisms2
nb-scalar-pyramids2 nb-vector-pyramids2 nb-tensor-pyramids2
nb-text2d nb-text2d-chars nb-text3d nb-text3d-chars
time-step-values
< scalar-point-value > ... < vector-point-value > ...
    < tensor-point-value > ...
< scalar-line-value > ... < vector-line-value > ...
    < tensor-line-value > ...
< scalar-triangle-value > ... < vector-triangle-value > ...
    < tensor-triangle-value > ...
< scalar-quadrangle-value > ... < vector-quadrangle-value > ...
    < tensor-quadrangle-value > ...
< scalar-tetrahedron-value > ... < vector-tetrahedron-value > ...
    < tensor-tetrahedron-value > ...
< scalar-hexahedron-value > ... < vector-hexahedron-value > ...
    < tensor-hexahedron-value > ...
< scalar-prism-value > ... < vector-prism-value > ...
    < tensor-prism-value > ...
< scalar-pyramid-value > ... < vector-pyramid-value > ...
    < tensor-pyramid-value > ...
< scalar-line2-value > ... < vector-line2-value > ...
    < tensor-line2-value > ...
< scalar-triangle2-value > ... < vector-triangle2-value > ...
    < tensor-triangle2-value > ...
< scalar-quadrangle2-value > ... < vector-quadrangle2-value > ...
    < tensor-quadrangle2-value > ...
< scalar-tetrahedron2-value > ... < vector-tetrahedron2-value > ...
    < tensor-tetrahedron2-value > ...
< scalar-hexahedron2-value > ... < vector-hexahedron2-value > ...
    < tensor-hexahedron2-value > ...
< scalar-prism2-value > ... < vector-prism2-value > ...
    < tensor-prism2-value > ...
< scalar-pyramid2-value > ... < vector-pyramid2-value > ...
    < tensor-pyramid2-value > ...
< text2d > ... < text2d-chars > ...
< text3d > ... < text3d-chars > ...

```

`$EndView`

where

- file-type* is an integer equal to 0 in the ASCII file format.
- data-size* is an integer equal to the size of the floating point numbers used in the file (usually, *data-size* = `sizeof(double)`).
- view-name* is a string containing the name of the view (max. 256 characters).
- nb-time-steps* is an integer giving the number of time steps in the view.
- nb-scalar-points*
- nb-vector-points*
- ... are integers giving the number of scalar points, vector points, ..., in the view.
- nb-text2d*
- nb-text3d* are integers giving the number of 2D and 3D text strings in the view.
- nb-text2d-chars*
- nb-text3d-chars* are integers giving the total number of characters in the 2D and 3D strings.
- time-step-values* is a list of *nb-time-steps* double precision numbers giving the value of the time (or any other variable) for which an evolution was saved.

*scalar-point-value*

*vector-point-value*

- ... are lists of double precision numbers giving the node coordinates and the values associated with the nodes of the *nb-scalar-points* scalar points, *nb-vector-points* vector points, ..., for each of the *time-step-values*.

For example, *vector-triangle-value* is defined as:

```
coord1-node1 coord1-node2 coord1-node3
coord2-node1 coord2-node2 coord2-node3
coord3-node1 coord3-node2 coord3-node3
comp1-node1-time1 comp2-node1-time1 comp3-node1-time1
comp1-node2-time1 comp2-node2-time1 comp3-node2-time1
comp1-node3-time1 comp2-node3-time1 comp3-node3-time1
comp1-node1-time2 comp2-node1-time2 comp3-node1-time2
comp1-node2-time2 comp2-node2-time2 comp3-node2-time2
comp1-node3-time2 comp2-node3-time2 comp3-node3-time2
...
```

The ordering of the nodes is given in [Section 9.3 \[Gmsh node ordering\]](#), page 155. For second order elements, the first order nodes are given first, followed by the nodes associated with the edges, followed by the nodes associated with the quadrangular faces (if any), followed by the nodes associated with the volume (if any). The ordering of these additional nodes follows the ordering of the edges and quadrangular faces given in [Section 9.3 \[Gmsh node ordering\]](#), page 155.

*text2d* is a list of 4 double precision numbers:

*coord1 coord2 style index*

where *coord1* and *coord2* give the X-Y position of the 2D string in screen coordinates (measured from the top-left corner of the window) and where *index* gives the starting index of the string in *text2d-chars*. If *coord1* (respectively *coord2*) is negative, the position is measured from the right (respectively bottom) edge of the window. If *coord1* (respectively *coord2*) is larger than 99999, the string is centered horizontally (respectively vertically). If *style* is equal to zero, the text is aligned bottom-left and displayed using the default font and size. Otherwise, *style* is converted into an integer whose eight lower bits give the font size, whose eight next bits select the font (the index corresponds to the position in the font menu in the GUI), and whose eight next bits define the text alignment (0=bottom-left, 1=bottom-center, 2=bottom-right, 3=top-left, 4=top-center, 5=top-right, 6=center-left, 7=center-center, 8=center-right).

*text2d-chars*

is a list of *nb-text2d-chars* characters. Substrings are separated with the null '\0' character.

*text3d* is a list of 5 double precision numbers

*coord1 coord2 coord3 style index*

where *coord1*, *coord2* and *coord3* give the XYZ coordinates of the string in model (real world) coordinates, *index* gives the starting index of the string in *text3d-chars*, and *style* has the same meaning as in *text2d*.

*text3d-chars*

is a list of *nb-text3d-chars* chars. Substrings are separated with the null '\0' character.

### 9.2.3 Binary post-processing file format

The binary post-processing file format is the same as the ASCII file format described in [Section 9.2.2 \[ASCII post-processing file format\]](#), page 151, except that:

1. *file-type* equals 1.
2. all lists of floating point numbers and characters are written in binary format
3. there is an additional integer, of value 1, written before *time-step-values*. This integer is used for detecting if the computer on which the binary file was written and the computer on which the file is read are of the same type (little or big endian).

Here is a pseudo C code to write a post-processing file in binary format:

```
int one = 1;

fprintf(file, "$PostFormat\n");
fprintf(file, "%g %d %d\n", 1.4, 1, sizeof(double));
fprintf(file, "$EndPostFormat\n");
fprintf(file, "$View\n");
fprintf(file, "%s %d "
```

```

"%d %d %d %d %d %d %d %d "
"%d %d %d %d %d %d %d %d "
"%d %d %d %d %d %d %d %d "
"%d %d %d %d %d %d %d %d "
"%d %d %d %d %d %d %d %d "
"%d %d %d %d \n",
view-name, nb-time-steps,
nb-scalar-points, nb-vector-points, nb-tensor-points,
nb-scalar-lines, nb-vector-lines, nb-tensor-lines,
nb-scalar-triangles, nb-vector-triangles, nb-tensor-triangles,
nb-scalar-quadrangles, nb-vector-quadrangles, nb-tensor-quadrangles,
nb-scalar-tetrahedra, nb-vector-tetrahedra, nb-tensor-tetrahedra,
nb-scalar-hexahedra, nb-vector-hexahedra, nb-tensor-hexahedra,
nb-scalar-prisms, nb-vector-prisms, nb-tensor-prisms,
nb-scalar-pyramids, nb-vector-pyramids, nb-tensor-pyramids,
nb-scalar-lines2, nb-vector-lines2, nb-tensor-lines2,
nb-scalar-triangles2, nb-vector-triangles2, nb-tensor-triangles2,
nb-scalar-quadrangles2, nb-vector-quadrangles2, nb-tensor-quadrangles2,
nb-scalar-tetrahedra2, nb-vector-tetrahedra2, nb-tensor-tetrahedra2,
nb-scalar-hexahedra2, nb-vector-hexahedra2, nb-tensor-hexahedra2,
nb-scalar-prisms2, nb-vector-prisms2, nb-tensor-prisms2,
nb-scalar-pyramids2, nb-vector-pyramids2, nb-tensor-pyramids2,
nb-text2d, nb-text2d-chars, nb-text3d, nb-text3d-chars);
fwrite(&one, sizeof(int), 1, file);
fwrite(time-step-values, sizeof(double), nb-time-steps, file);
fwrite(all-scalar-point-values, sizeof(double), ..., file);
...
fprintf(file, "\n$EndView\n");

```

In this pseudo-code, *all-scalar-point-values* is the array of double precision numbers containing all the *scalar-point-value* lists, put one after each other in order to form a long array of doubles. The principle is the same for all other kinds of values.

### 9.3 Gmsh node ordering

For all mesh and post-processing file formats, the reference elements are defined as follows:


```

Point:
    v
    |
    |
    -----
    1
    u
    |
    |

```


Line:

edge 1: nodes 1 2

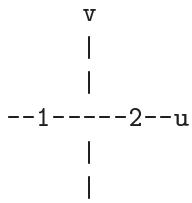


Triangle:

edge 1: nodes 1 2

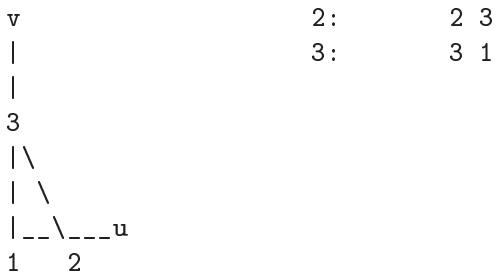


Quadrangle:

edge 1: nodes 1 2      quad. face 1: nodes 1 2 3 4

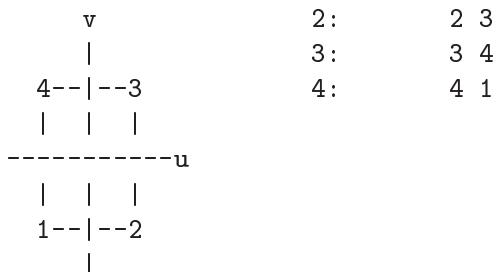

Tetrahedron:

edge 1: nodes 1 2

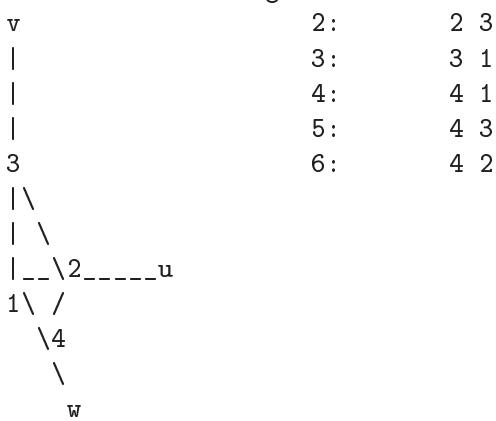

## Hexahedron:

	edge 1: nodes	quad.	face 1: nodes
v	1 2	1 2 3 4	1 2 5 6
	2: 1 4		
	3: 1 5		
	4: 2 3		
4---- ---3	5: 2 6		
\     \	6: 3 4		
8-----7	7: 3 7		
----- ---u	8: 4 8		
1- ---\ -2	9: 5 6		
\  \ \  \	10: 5 8		
5-----\ -6	11: 6 7		
\	12: 7 8		
w			

## Prism:

	edge 1: nodes	quad.	face 1: nodes
v	1 2	1 2 4 5	2: 1 3 4 6
3	2: 1 3		
\	3: 1 4		
	4: 2 3		
1_  2	5: 2 5		
\  6	6: 3 6		
_ _ \_\_u	7: 4 5		
\  \ \	8: 4 6		
4 _\ 5	9: 5 6		
\			
\			
w			

## Pyramid:

	edge 1: nodes	quad.	face 1: nodes
v	1 2	1 2 3 4	2: 1 4
	2		
	3		
	4		
4--- ---3	5		
\   /	6		
\ \ -/- ---u	7		
/ 5\	8		
1/----\ -2			
\			
\			
w			



## 10 Programming notes

Gmsh was originally written in C, and later enhanced with various C++ additions. The resulting code is a hybrid C/C++ beast, hopefully not too badly structured... The scripting language is parsed using Lex and Yacc (actually, Flex and Bison), while the GUI relies on OpenGL for the 3D graphics and FLTK for the widget set. See <http://www.opengl.org>, <http://www.mesa3d.org> and <http://www.fltk.org> for more information.

Gmsh's build system is based on autoconf, and should work on most modern platforms providing standard compliant C and C++ compilers. Practical notes on how to compile Gmsh's source code are included in the distribution. See [Appendix B \[Frequently asked questions\]](#), page 177, for more information.

### 10.1 Coding style

If you plan to contribute code to the Gmsh project, here are some easy rules to make the code easy to read/debug/maintain:

1. please enable full warnings for your compiler (e.g., add `-Wall` to `FLAGS` in the ‘variables’ file);
2. always use the `Msg()` function to print information, errors, ...;
3. indent your files using ‘`utils/misc/indent.sh`’;

### 10.2 Option handling

To add a new option in Gmsh:

1. create the option in the `Context_T` class (`Common/Context.h`) if it's a classical option, or in the `Post_View` class (`Common/View.h`) if it's a post-processing view-dependent option;
2. in `Common/DefaultOptions.h`, give a name (for the parser to be able to access it), a reference to a handling routine (i.e. `opt_XXX`) and a default value for this option;
3. create the handling routine `opt_XXX` in `Common/Options.cpp` (and add the prototype in `Common/Options.h`);
4. optional: create the associated widget in `Fltk/GUI.cpp`;
5. optional: if no special callback is to be associated with the widget, add the handling routine `opt_XXX` to the OK callback for the corresponding option panel (in `Fltk/Callbacks.cpp`).

160

Gmsh 1.65

# 11 Bugs, versions and credits

## 11.1 Bugs

If you think you have found a bug in Gmsh, you can report it by electronic mail to the Gmsh mailing list at [gmsh@geuz.org](mailto:gmsh@geuz.org). Please send as precise a description of the problem as you can, including sample input files that produce the bug. Don't forget to mention both the version of Gmsh and the version of your operation system (see [Section 8.3 \[Command-line options\]](#), page 138 to see how to get this information).

See [Appendix B \[Frequently asked questions\]](#), page 177, and the 'TODO' file in the distribution to see which problems we already know about.

## 11.2 Versions

```
$Id: VERSIONS,v 1.361.2.9 2006/05/14 00:50:58 geuzaine Exp $
```

New in 1.65: new Plugin(ExtractEdges); fixed compilation errors with gcc4.1; replaced Plugin(DisplacementRaise) and Plugin(SphericalRaise) with the more flexible Plugin(Warp); better handling of discrete curves; new Status command in parser; added option to renumber nodes in .msh files (to avoid holes in the numbering sequence); fixed 2 special cases in quad->prism extrusion; fixed saving of 2nd order hexas with negative volume; small bug fixes and cleanups.

New in 1.64: Windows versions do no depend on Cygwin anymore; various bug fixes and cleanups.

New in 1.63: post-processing views can now be exported as meshes; improved background mesh handling (a lot faster, and more accurate); improved support for input images; new Plugin(ExtractElements); small bug fixes and enhancements.

New in 1.62: new option to draw color gradients in the background; enhanced perspective projection mode; new "lasso" selection mode (same as "lasso" zoom, but in selection mode); new "invert selection" button in the visibility browser; new snapping grid when adding points in the GUI; nicer normal smoothing; new extrude syntax (old syntax still available, but deprecated); various small bug fixes and enhancements.

New in 1.61: added support for second order (curved) elements in post-processor; new version (1.4) of post-processing file formats; new stippling options for 2D plots; removed limit on allowed number of files on command line; all "Combine" operations are now available in the parser; changed View.ArrowLocation into View.GlyphLocation; optimized memory usage when loading many (>1000) views; optimized

loading and drawing of line meshes and 2D iso views; optimized handling of meshes with large number of physical entities; optimized vertex array creation for large post-processing views on Windows/Cygwin; removed Discrete Line and Discrete Surface commands (the same functionality can now be obtained by simply loading a mesh in .msh format); fixed coloring by mesh partition; added option to light wireframe meshes and views; new "mesh statistics" export format; new full-quad recombine option; new Plugin(ModulusPhase); hexas and prisms are now always saved with positive volume; improved interactive entity selection; new experimental Tetgen integration; new experimental STL remeshing algorithm; various small bug fixes and improvements.

New in 1.60: added support for discrete curves; new Window menu on Mac OS X; generalized all octree-based plugins (CutGrid, StreamLines, Probe, etc.) to handle all element types (and not only scalar and vector triangles+tetrahedra); generalized Plugin(Evaluate), Plugin(Extract) and Plugin(Annotate); enhanced clipping plane interface; new grid/axes/rulers for 3D post-processing views (renamed the AbscissaName, NbAbscissa and AbscissaFormat options to more general names in the process); better automatic positioning of 2D graphs; new manipulator dialog to specify rotations, translations and scalings "by hand"; various small enhancements and bug fixes.

New in 1.59: added support for discrete (triangulated) surfaces, either in STL format or with the new "Discrete Surface" command; added STL and Text output format for post-processing views and STL output format for surface meshes; all levelset-based plugins can now also compute isovolumes; generalized Plugin(Evaluate) to handle external view data (based on the same or on a different mesh); generalized Plugin(CutGrid); new plugins (Eigenvalues, Gradient, Curl, Divergence); changed default colormap to match Matlab's "Jet" colormap; new transformation matrix option for views (for non-destructive rotations, symmetries, etc.); improved solver interface to keep the GUI responsive during solver calls; new C++ and Python solver examples; simplified Tools->Visibility GUI; transfinite lines with "Progression" now allow negative line numbers to reverse the progression; added ability to retrieve Gmsh's version number in the parser (to help write backward compatible scripts); fixed white space in unv mesh output; fixed various small bugs.

New in 1.58: fixed UNIX socket interface on Windows (broken by the TCP solver patch in 1.57); bumped version number of default post-processing file formats to 1.3 (the only small modification is the handling of the end-of-string character for text2d and text3d objects in the ASCII format); new File->Rename menu; new colormaps+improved colormap handling; new color+min/max options in

views; new GetValue() function to ask for values interactively in scripts; generalized For/EndFor loops in parser; new plugins (Annotate, Remove, Probe); new text attributes in views; renamed some shortcuts; fixed TeX output for large scenes; new option dialogs for various output formats; fixed many small memory leaks in parser; many small enhancements to polish the graphics and the user interface.

New in 1.57: generalized displacement maps to display arbitrary view types; the arrows representing a vector field can now also be colored by the values from other scalar, vector or tensor fields; new adaptive high order visualization mode; new options (Solver.SocketCommand, Solver.NameCommand, View.ArrowSizeProportional, View.Normals, View.Tangents and General.ClipFactor); fixed display of undesired solver plugin popups; enhanced interactive plugin behavior; new plugins (HarmonicToTime, Integrate, Eigenvectors); tetrahedral mesh file reading speedup (50% faster on large meshes); large memory footprint reduction (up to 50%) for the visualization of triangular/tetrahedral meshes; the solver interface now supports TCP/IP connections; new generalized raise mode (allows to use complex expressions to offset post-processing maps); upgraded Netgen kernel to version 4.4; new optional TIME list in parsed views to specify the values of the time steps; several bug fixes in the Elliptic mesh algorithm; various other small bug fixes and enhancements.

New in 1.56: new post-processing option to draw a scalar view raised by a displacement view without using Plugin(DisplacementRaise) (makes drawing arbitrary scalar fields on deformed meshes much easier); better post-processing menu (arbitrary number of views+scrollable+show view number); improved view->combine; new horizontal post-processing scales; new option to draw the mesh nodes per element; views can now also be saved in "parsed" format; fixed various path problems on Windows; small bug fixes.

New in 1.55: added background mesh support for Triangle; meshes can now be displayed using "smoothed" normals (like post-processing views); added GUI for clipping planes; new interactive clipping/cutting plane definition; reorganized the Options GUI; enhanced 3D iso computation; enhanced lighting; many small bug fixes.

New in 1.54: integrated Netgen (3D mesh quality optimization + alternative 3D algorithm); Extrude Surface now always automatically creates a new volume (in the same way Extrude Point or Extrude Line create new lines and surfaces, respectively); fixed UNV output; made the "Layers" region numbering consistent between lines, surfaces and volumes; fixed home directory problem on Win98; new Plugin(CutParametric); the default project file is now created in the home directory if no current directory is defined (e.g., when

double-clicking on the icon on Windows/Mac); fixed the discrepancy between the orientation of geometrical surfaces and the associated surface meshes; added automatic orientation of surfaces in surface loops; generalized Plugin(Triangulate) to handle vector and tensor views; much nicer display of discrete iso-surfaces and custom ranges using smooth normals; small bug fixes and cleanups.

New in 1.53: completed support for second order elements in the mesh module (line, triangles, quadrangles, tetrahedra, hexahedra, prisms and pyramids); various background mesh fixes and enhancements; major performance improvements in mesh and post-processing drawing routines (OpenGL vertex arrays for tri/quads); new Plugin(Evaluate) to evaluate arbitrary expressions on post-processing views; generalized Plugin(Extract) to handle any combination of components; generalized "Coherence" to handle transfinite surface/volume attributes; plugin options can now be set in the option file (like all other options); added "undo" capability during geometry creation; rewrote the contour guessing routines so that entities can be selected in an arbitrary order; Mac users can now double click on geo/msh/pos files in the Finder to launch Gmsh; removed support for FLTK 1.0; rewrote most of the code related to quadrangles; fixed 2d elliptic algorithm; removed all OpenGL display list code and options; fixed light positioning; new BoundingBox command to set the bounding box explicitly; added support for inexpensive "fake" transparency mode; many code cleanups.

New in 1.52: new raster ("bitmap") PostScript/EPS/PDF output formats; new Plugin(Extract) to extract a given component from a post-processing view; new Plugin(CutGrid) and Plugin(StreamLines); improved mesh projection on non-planar surfaces; added support for second order tetrahedral elements; added interactive control of element order; refined mesh entity drawing selection (and renamed most of the corresponding options); enhanced log scale in post-processing; better font selection; simplified View.Raise{X,Y,Z} by removing the scaling; various bug fixes (default postscript printing mode, drawing of 3D arrows/cylinders on Linux, default home directory on Windows, default initial file browser directory, extrusion of points with non-normalized axes of rotation, computation of the scene bounding box in scripts, + the usual documentation updates).

New in 1.51: initial support for visualizing mesh partitions; integrated version 2.0 of the MSH mesh file format; new option to compute post-processing ranges (min/max) per time step; Multiple views can now be combined into multi time step ones (e.g. for programs that generate data one time step at a time); new syntax: #var[] returns the size of the list var[]; enhanced "gmsh -convert"; temporary and error files are now created in the home directory to avoid file permission issues; new 3D arrows; better lighting support; STL facets can now be

converted into individual geometrical surfaces; many other small improvements and bug fixes (multi timestep tensors, color by physical entity, parser cleanup, etc.).

New in 1.50: small changes to the visibility browser + made visibility scriptable (new Show/Hide commands); fixed (rare) crash when deleting views; split File->Open into File->Open and File->New to behave like most other programs; Mac versions now use the system menu bar by default (if possible); fixed bug leading to degenerate and/or duplicate tetrahedra in extruded meshes; fixed crash when reloading sms meshes.

New in 1.49: made Merge, Save and Print behave like Include (i.e., open files in the same directory as the main project file if the path is relative); new Plugin(DecomposeInSimplex); new option View.AlphaChannel to set the transparency factor globally for a post-processing view; new "Combine Views" command; various bug fixes and cleanups.

New in 1.48: new DisplacementRaise plugin to plot arbitrary fields on deformed meshes; generalized CutMap, CutPlane, CutSphere and Skin plugins to handle all kinds of elements and fields; new "Save View[n]" command to save views from a script; many small bug fixes (configure tests for libpng, handling of erroneous options, multi time step scalar prism drawings, copy of surface mesh attributes, etc.).

New in 1.47: fixed extrusion of surfaces defined by only two curves; new syntax to retrieve point coordinates and indices of entities created through geometrical transformations; new PDF and compressed PostScript output formats; fixed numbering of elements created with "Extrude Point/Line"; use \$GMSH\_HOME as home directory if defined.

New in 1.46: fixed crash for very long command lines; new options for setting the displacement factor and Triangle's parameters + renamed a couple of options to more sensible names (View.VectorType, View.ArrowSize); various small bug fixes; documentation update.

New in 1.45: small bug fixes (min/max computation for tensor views, missing physical points in read mesh, "jumping" geometry during interactive manipulation of large models, etc.); variable definition speedup; restored support for second order elements in one- and two-dimensional meshes; documentation updates.

New in 1.44: new reference manual; added support for PNG output; fixed small configure script bugs.

New in 1.43: fixed solver interface problem on Mac OS X; new option to

specify the interactive rotation center (default is now the pseudo "center of gravity" of the object, instead of (0,0,0)).

New in 1.42: suppressed the automatic addition of a ".geo" extension if the file given on the command line is not recognized; added missing Layer option for Extrude Point; fixed various small bugs.

New in 1.41: Gmsh is now licensed under the GNU General Public License; general code cleanup (indent).

New in 1.40: various small bug fixes (mainly GSL-related).

New in 1.39: removed all non-free routines; more build system work; implemented Von-Mises tensor display for all element types; fixed small GUI bugs.

New in 1.38: fixed custom range selection for 3D iso graphs; new build system based on autoconf; new image reading code to import bitmaps as post-processing views.

New in 1.37: generalized smoothing and cuts of post-processing views; better Windows integration (solvers, external editors, etc.); small bug fixes.

New in 1.36: enhanced view duplication (one can now use "Duplicate View[num]" in the input file); merged all option dialogs in a new general option window; enhanced discoverability of the view option menus; new 3D point and line display; many small bug fixes and enhancements ("Print" format in parser, post-processing statistics, smooth normals, save window positions, restore default options, etc.).

New in 1.35: graphical user interface upgraded to FLTK 1.1 (tooltips, new file chooser with multiple selection, full keyboard navigation, cut/paste of messages, etc.); colors can be now be directly assigned to mesh entities; initial tensor visualization; new keyboard animation (right/left arrow for time steps; up/down arrow for view cycling); new VRML output format for surface meshes; new plugin for spherical elevation plots; new post-processing file format (version 1.2) supporting quadrangles, hexahedra, prisms and pyramids; transparency is now enabled by default for post-processing plots; many small bug fixes (read mesh, ...).

New in 1.34: improved surface mesh of non-plane surfaces; fixed orientation of elements in 2D anisotropic algorithm; minor user interface polish and additions (mostly in post-processing options); various small bug fixes.

New in 1.33: new parameterizable solver interface (allowing up to 5 user-defined solvers); enhanced 2D aniso algorithm; 3D initial mesh speedup.

New in 1.32: new visibility browser; better floating point exception checks; fixed infinite looping when merging meshes in project files; various small clean ups (degenerate 2D extrusion, view->reload, ...).

New in 1.31: corrected ellipses; PostScript output update (better shading, new combined PS/LaTeX output format); more interface polish; fixed extra memory allocation in 2D meshes; Physical Volume handling in unv format; various small fixes.

New in 1.30: interface polish; fix crash when extruding quadrangles.

New in 1.29: translations and rotations can now be combined in extrusions; fixed coherence bug in Extrude Line; various small bug fixes and additions.

New in 1.28: corrected the 'Using Progression' attribute for transfinite meshes to actually match a real geometric progression; new Triangulate plugin; new 2D graphs (space+time charts); better performance of geometrical transformations (warning: the numbering of some automatically created entities has changed); new text primitives in post-processing views (file format updated to version 1.1); more robust mean plane computation and error checks; various other small additions and clean-ups.

New in 1.27: added ability to extrude curves with Layers/Recombine attributes; new PointSize/LineWidth options; fixed For/EndFor loops in included files; fixed error messages (line numbers+file names) in loops and functions; made the automatic removal of duplicate geometrical entities optional (Geometry.AutoCoherence=0); various other small bug fixes and clean-ups.

New in 1.26: enhanced 2D anisotropic mesh generator (metric intersections); fixed small bug in 3D initial mesh; added alternative syntax for built-in functions (for GetDP compatibility); added line element display; Gmsh now saves all the elements in the mesh if no physical groups are defined (or if Mesh.SaveAll=1).

New in 1.25: fixed bug with mixed recombined/non-recombined extruded meshes; Linux versions are now build with no optimization, due to bugs in gcc 2.95.X.

New in 1.24: fixed characteristic length interpolation for Splines; fixed edge swapping bug in 3D initial mesh; fixed degenerated case in

geometrical extrusion (ruled surface with 3 borders); fixed generation of degenerated hexahedra and prisms for recombined+extruded meshes; added BSplines creation in the GUI; integrated Jonathan Shewchuk's Triangle as an alternative isotropic 2D mesh generator; added AngleSmoothNormals to control sharp edge display with smoothed normals; fixed random crash for lighted 3D iso surfaces.

New in 1.23: fixed duplicate elements generation + non-matching tetrahedra faces in 3D extruded meshes; better display of displacement maps; fixed interactive ellipsis construction; generalized boundary operator; added new explode option for post-processing views; enhanced link view behavior (to update only the changed items); added new default plugins: Skin, Transform, Smooth; fixed various other small bugs (mostly in the post-processing module and for extruded meshes).

New in 1.22: fixed (yet another) bug for 2D mesh in the mean plane; fixed surface coherence bug in extruded meshes; new double logarithmic scale, saturate value and smoothed normals option for post-processing views; plugins are now enabled by default; three new experimental statically linked plugins: CutMap (extracts a given iso surface from a 3D scalar map), CutPlane (cuts a 3D scalar map with a plane section), CutSphere (cuts a 3D scalar map with a sphere); various other bug fixes, additions and clean-ups.

New in 1.21: fixed more memory leaks; added -opt command line option to parse definitions directly from the command line; fixed missing screen refreshes during contour/surface/volume selection; enhanced string manipulation functions (Sprintf, StrCat, StrPrefix); many other small fixes and clean-ups.

New in 1.20: fixed various bugs (memory leaks, functions in included files, solver command selection, ColorTable option, duplicate nodes in extruded meshes (not finished yet), infinite loop on empty views, orientation of recombined quadrangles, ...); reorganized the interface menus; added constrained background mesh and mesh visibility options; added mesh quality histograms; changed default mesh colors; reintegrated the old command-line extrusion mesh generator.

New in 1.19: fixed seg. fault for scalar simplex post-processing; new Solver menu; interface for GetDP solver through sockets; fixed multiple scale alignment; added some options + full option descriptions.

New in 1.18: fixed many small bugs and incoherences in post-processing; fixed broken background mesh in 1D mesh generation.

New in 1.17: corrected physical points saving; fixed parsing of DOS

files (carriage return problems); easier geometrical selections (cursor change); plugin manager; enhanced variable arrays (sublist selection and affectation); line loop check; New arrow display; reduced number of 'fatal' errors + better handling in interactive mode; fixed bug when opening meshes; enhanced File->Open behavior for meshes and post-processing views.

New in 1.16: added single/double buffer selection (only useful for Unix versions of Gmsh run from remote hosts without GLX); fixed a bug for recent versions of the opengl32.dll on Windows, which caused OpenGL fonts not to show up.

New in 1.15: added automatic visibility setting during entity selection; corrected geometrical extrusion bug.

New in 1.14: corrected a few bugs in the GUI (most of them were introduced in 1.13); added interactive color selection; made the option database bidirectional (i.e. scripts now correctly update the GUI); default options can now be saved and automatically reloaded at startup; made some changes to the scripting syntax (PostProcessing.View[n] becomes View[n]; Offset0 becomes OffsetX, etc.); corrected the handling of simple triangular surfaces with large characteristic lengths in the 2D isotropic algorithm; added an ASCII to binary post-processing view converter.

New in 1.13: added support for JPEG output on Windows.

New in 1.12: corrected vector lines in the post-processing parsed format; corrected animation on Windows; corrected file creation in scripts on Windows; direct affectation of variable arrays.

New in 1.11: corrected included file loading problem.

New in 1.10: switched from Motif to FLTK for the GUI. Many small tweaks.

New in 1.00: added PPM and YUV output; corrected nested If/Endif; Corrected several bugs for pixel output and enhanced GIF output (dithering, transparency); slightly changed the post-processing file format to allow both single and double precision numbers.

New in 0.999: added JPEG output and easy MPEG generation (see t8.geo in the tutorial); clean up of export functions; small fixes; Linux versions are now compiled with gcc 2.95.2, which should fix the problems encountered with Mandrake 7.2.

New in 0.998: corrected bug introduced in 0.997 in the generation of

the initial 3D mesh.

New in 0.997: corrected bug in interactive surface/volume selection; Added interactive symmetry; corrected geometrical extrusion with rotation in degenerated or partially degenerated cases; corrected bug in 2D mesh when meshing in the mean plane.

New in 0.996: arrays of variables; enhanced Printf and Sprintf; Simplified options (suppression of option arrays).

New in 0.995: totally rewritten geometrical database (performance has been drastically improved for all geometrical transformations, and most notably for extrusion). As a consequence, the internal numbering of geometrical entities has changed: this will cause incompatibilities with old .geo files, and will require a partial rewrite of your old .geo files if these files made use of geometrical transformations. The syntax of the .geo file has also been clarified. Many additions for scripting purposes. New extrusion mesh generator. Preliminary version of the coupling between extruded and Delaunay meshes. New option and procedural database. All interactive operations can be scripted in the input files. See the last example in the tutorial for an example. Many stability enhancements in the 2D and 3D mesh algorithms. Performance boost of the 3D algorithm. Gmsh is still slow, but the performance becomes acceptable. An average 1000 tetrahedra/second is obtained on a 600Mhz computer for a mesh of one million tetrahedra. New anisotropic 2D mesh algorithm. New (ASCII and binary) post-processing file format and clarified mesh file format. New handling for interactive rotations (trackball mode). New didactic interactive mesh construction (watch the Delaunay algorithm in real time on complex geometries: that's exciting ;-). And many, many bug fixes and cleanups.

New in 0.992: corrected recombined extrusion; corrected ellipses; added simple automatic animation of post-processing maps; fixed various bugs.

New in 0.991: fixed a serious allocation bug in 2D algorithm, which caused random crashes. All users should upgrade to 0.991.

New in 0.990: bug fix in non-recombined 3D transfinite meshes.

New in 0.989: added ability to reload previously saved meshes; some new command line options; reorganization of the scale menu; GIF output.

New in 0.987: fixed bug with smoothing (leading to the possible generation of erroneous 3d meshes); corrected bug for mixed 3D meshes; moved the 'toggle view link' option to Opt->Postprocessing\_Options.

New in 0.986: fixed overlay problems; SGI version should now also run on 32 bits machines; fixed small 3d mesh bug.

New in 0.985: corrected colormap bug on HP, SUN, SGI and IBM versions; corrected small initialization bug in postscript output.

New in 0.984: corrected bug in display lists; added some options in Opt->General.

New in 0.983: corrected some seg. faults in interactive mode; corrected bug in rotations; changed default window sizes for better match with 1024x768 screens (default X resources can be changed: see ex03.geo).

New in 0.982: lighting for mesh and post-processing; corrected 2nd order mesh on non plane surfaces; added example 13.

### 11.3 Credits

\$Id: CREDITS,v 1.34 2006/01/06 00:34:33 geuzaine Exp \$

Gmsh is copyright (C) 1997-2006

Christophe Geuzaine  
<christophe.geuzaine at case.edu>

and

Jean-Francois Remacle  
<remacle at gce.ucl.ac.be>

Major code contributions to Gmsh have been provided by Nicolas Tardieu <ntardieu at giref.ulaval.ca> (help with the GSL integration, new "STL to elementary geometry" interface, Netgen integration).

Other code contributors include: David Colignon <David.Colignon at ulg.ac.be> for new colormaps; Patrick Dular <patrick.dular at ulg.ac.be> for transfinite mesh bug fixes; Laurent Stainier <l.stainier at ulg.ac.be> for the eigenvalue solvers and for help with the Mac OS port and the tensor display code; Pierre Badel <badel at freesurf.fr> for help with the GSL integration; Marc Ume <Marc.Ume at digitalgraphics.be> for the original list code; Matt Gundry <mjgundry at faa-engineers.com> for the Plot3d mesh format; Jozef Vesely <vesely at gjh.sk> for the Tetgen integration.

The AVL tree code (DataStr/avl.\*) and the YUV image code

(Graphics/gl2yuv.\*) are copyright (C) 1988-1993, 1995 The Regents of the University of California. Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. The University of California makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

The trackball code (Common/Trackball.\*) is copyright (C) 1993, 1994, Silicon Graphics, Inc. ALL RIGHTS RESERVED. Permission to use, copy, modify, and distribute this software for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both the copyright notice and this permission notice appear in supporting documentation, and that the name of Silicon Graphics, Inc. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

The GIF and PPM routines (Graphics/gl2gif.cpp) are based on code copyright (C) 1989, 1991, Jef Poskanzer. Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation. This software is provided "as is" without express or implied warranty.

The colorbar widget (Fltk/Colorbar\_Window.cpp) was inspired by code from the Vis5d program for visualizing five dimensional gridded data sets, copyright (C) 1990-1995, Bill Hibbard, Brian Paul, Dave Santek, and Andre Battaiola.

This version of Gmsh may contain code (in the contrib/ANN subdirectory) copyright (C) 1997-2005 University of Maryland and Sunil Arya and David Mount: check the configuration options.

This version of Gmsh may contain code (in the contrib/MathEval subdirectory) based on GNU libmatheval, copyright (C) 1999, 2002, 2003 Free Software Foundation, Inc: check the configuration options.

This version of Gmsh may contain code (in the contrib/Netgen subdirectory) copyright (C) 1994-2004, Joachim Sch"oberl: check the configuration options.

This version of Gmsh may contain code (in the contrib/Triangle subdirectory) copyright (C) 1993, 1995, 1997, 1998, 2002, Jonathan Richard Shewchuk: check the configuration options.

This version of Gmsh may contain code (in the contrib/Tetgen subdirectory) copyright (C) 2002, 2004 Hang Si: check the configuration options.

This version of Gmsh may contain code (in the contrib/Metis subdirectory) written by George Karypis (karypis at cs.umn.edu), copyright (C) 1998, Regents of the University of Minnesota: check the configuration options.

Special thanks to Bill Spitzak <spitzak at users.sourceforge.net>, Michael Sweet <easysw at users.sourceforge.net>, Matthias Melcher <mm at matthiasm.com> and others for the Fast Light Tool Kit on which Gmsh's GUI is based. See <http://www.fltk.org> for more info on this excellent object-oriented, cross-platform toolkit.

Thanks to the following folks who have contributed by providing fresh ideas on theoretical or programming topics, who have sent patches, requests for changes or improvements, or who gave us access to exotic machines for testing Gmsh: Juan Abanto <juanabanto at yahoo.com>, Olivier Adam <o.adam at ulg.ac.be>, Guillaume Alleon <guillaume.alleon at airbus.aeromatra.com>, Eric Bechet <eric.bechet at epost.de>, Laurent Champaney <laurient.champaney at meca.uvsq.fr>, Pascal Dupuis <Pascal.Dupuis at esat.kuleuven.ac.be>, Philippe Geuzaine <geuzaine at gnat.colorado.edu>, Johan Gyselinck <johan.gyselinck at ulg.ac.be>, Francois Henrotte <fhenrott at esat.kuleuven.ac.be>, Benoit Meys <bmeys at techspace-aero.be>, Nicolas Moes <moes at tam9.mech.nwu.edu>, Osamu Nakamura <naka at hasaki.sumitomometals.co.jp>, Chad Schmutz <schmutze at acm.caltech.edu>, Jean-Luc Fl'ejou <jean-luc.flejou at edf.fr>, Xavier Dardenne <dardenne at tele.ucl.ac.be>, Christophe Prud'homme <prudhomm at debian.org>, Sebastien.Clerc <Sebastien.Clerc at space.alcatel.fr>, Jose Miguel Pasini <jmp84 at cornell.edu>, Philippe Lussou <plussou at necs.fr>, Jacques Kools <JKools at veeco.com>, Bayram Yenikaya <yenikaya at math.umn.edu>, Peter Hornby <p.hornby at arrc.csiro.au>, Krishna Mohan Gundu <gkmohan at gmail.com>, Christopher Stott <C.Stott at surrey.ac.uk>, Timmy Schumacher <Tim.Schumacher at colorado.edu>, Carl Osterwisch <osterwischc at asme.org>, Bruno Frackowiak <bruno.frackowiak at onecert.fr>.



## Appendix A Tips and tricks

- Install the ‘info’ version of this user’s guide! On your (Unix) system, this can be achieved by
  1. copying all ‘gmsh.info\*’ files to the place where your info files live (usually ‘/usr/info’), and
  2. issuing the command `install-info /usr/info/gmsh.info /usr/info/dir`.

You will then be able to access the documentation with the command `info gmsh`. Note that particular sections (‘nodes’) can be accessed directly. For example, `info gmsh surfaces` or `info gmsh surf` will take you directly to [Section 3.1.3 \[Surfaces\], page 41](#).

- Use emacs to edit your files, and load the C++ mode! This permits automatic syntax highlighting and easy indentation. Automatic loading of the C++ mode for ‘.geo’ files can be achieved by adding the following command in your `.emacs` file: `(setq auto-mode-alist (append '("\\\\.geo$" . c++-mode)) auto-mode-alist))`.
- Define common geometrical objects and options in separate files, reusable in all your problem definition structures.
- Save your preferred options with ‘Tools->Options->Save’. To reset default options, erase the `General.OptionsFileName` (usually ‘`.gmsh-options`’ in your home directory) or use the ‘Restore default options’ button in ‘Tools->Options->General->Output’.
- In the graphical user interface:
  - dragging the mouse in a numeric input field slides the value. The left button moves one step per pixel, the middle by 10 \* step, and the right button by 100 \* step;
  - selecting the content of an input field, or lines in the message console (‘Tools->Message Console’), copies the selected text to the clipboard;
- Read [Appendix B \[Frequently asked questions\]](#), page 177...



## Appendix B Frequently asked questions

\$Id: FAQ,v 1.72.2.1 2006/04/15 17:27:04 geuzaine Exp \$

This is the Gmsh FAQ

\*\*\*\*\*

### Section 1: The basics

#### \* 1.1 What is Gmsh?

Gmsh is an automatic three-dimensional finite element mesh generator, primarily Delaunay, with built-in pre- and post-processing facilities. Its design goal is to provide a simple meshing tool for academic problems with parametric input and advanced visualization capabilities.

#### \* 1.2 What are the terms and conditions of use?

Gmsh is distributed under the terms of the GNU General Public License. See the file 'doc/LICENSE' for more information, or go to the GNU foundation's web site at <http://www.gnu.org>.

#### \* 1.3 What does 'Gmsh' mean?

Nothing ;-)

(Note that in the US, people tend to pronounce 'Gmsh' as 'Gee-mesh'. Yeehaa!)

#### \* 1.4 Where can I find more information?

<http://www.geuz.org/gmsh/> is the primary location to obtain information about Gmsh. You will for example find a complete reference manual as well as a searchable archive of the Gmsh mailing list ([gmsh@geuz.org](mailto:gmsh@geuz.org)) on this webpage.

\*\*\*\*\*

### Section 2: Installation

#### \* 2.1 Which OSes does Gmsh run on?

Gmsh is known to run on Windows 95/98/NT/2000/XP, Linux, Mac OS X, Compaq Tru64 Unix (aka OSF1, aka Digital Unix), Sun OS, IBM AIX, SGI IRIX, FreeBSD and HP-UX. It should compile on any Unix-like operating

system, provided that you have access to a recent C and C++ compiler.

\* 2.2 Are there additional requirements to run Gmsh?

You should have the OpenGL libraries installed on your system, and in the path of the library loader. A free replacement for OpenGL can be found at <http://www.mesa3d.org>.

\* 2.3 What do I need to compile Gmsh from the sources?

You need a C and a C++ compiler (e.g. the GNU compilers gcc and g++) as well as the GSL (version 1.2 or higher; freely available from <http://sources.redhat.com/gsl/>) and FLTK (version 1.1.x, configured with OpenGL support; freely available from <http://www.fltk.org>). You'll also need the jpeg library if you want to save jpeg images, and the libpng and zlib libraries if you want to save png images.

\* 2.4 How do I compile Gmsh?

Just type './configure; make; make install'. If you change some configuration options (type './configure --help' to get the list of all available choices), don't forget to do 'make clean' before rebuilding Gmsh.

\*\*\*\*\*

### Section 3: General problems

\* 3.1 Gmsh (from a binary distribution) complains about missing libraries.

Try 'ldd gmsh' (or 'otool -L gmsh' on Mac OS X) to check if all the required shared libraries are installed on your system. If not, install them. If it still doesn't work, recompile Gmsh from the sources.

\* 3.2 Gmsh keeps re-displaying its graphics when other windows partially hide the graphical window.

Disable opaque move in your window manager.

\* 3.3 The graphics display very slowly.

Are you are executing Gmsh from a remote host (via the network) without GLX? You should turn double buffering off (with the '-nodb' command line option).

- \* 3.4 There is an ugly "ghost triangulation" in the vector PostScript/PDF files generated by Gmsh!

No, there isn't. This "ghost triangulation" is due to the fact that most PostScript previewers nowadays antialias the graphic primitives when they display the page on screen. (For example, in gv, you can disable antialiasing with the 'State->Antialias' menu.) You should not see this ghost triangulation in the printed output (on paper).

- \* 3.5 How can I save GIF, JPEG, ..., images?

Just choose the appropriate format in 'File->Save As'.

- \* 3.6 How can I save MPEG, AVI, ..., animations?

See question 7.9.

\*\*\*\*\*

#### Section 4: Geometry module

- \* 4.1 Does Gmsh support NURBS curves/surfaces?

Not yet.

- \* 4.2 Gmsh is very slow when I use many transformations (Translate, Rotate, Symmetry, Extrude, etc.). What's wrong?

The default behavior of Gmsh is to check and suppress all duplicate entities (points, lines and surfaces) each time a transformation command is issued. This can slow down things a lot if many transformations are performed. There are two solutions to this problem:

- you may save the unrolled geometry in another file (e.g. with gmsh file.geo -0 > flat.geo), and use this new file for subsequent computations;
- you may set the 'Geometry.AutoCoherence' option to 0. This will prevent any automatic duplicate check/replacement. If you still need to remove the duplicates entities, simply add 'Coherence;' at strategic locations in your geo files (e.g. before the creation of line loops, etc.).

- \* 4.3 How can I display only selected parts of my model?

By using 'Tool->Visibility':

- In the 'Browser' tab, you can select which group of entities to show

(several entities can be selected at once by dragging the mouse or by holding the Ctrl and Shift keys while clicking). There are three main modes: 'Elementary', in which the numbers in the list correspond to elementary geometrical entities; 'Physical', in which the numbers in the list correspond to physical entities; and 'Partitions', in which the numbers in the list correspond to indices of mesh partitions (for multi-domain meshes read from "new" .msh files). If 'Geometry+Mesh' is selected, the selection applies to both the geometrical entities and their associated meshes; if 'Mesh' is selected, the selection applies only to the mesh; if 'Geometry' is selected, the selection applies only to the geometry. If the 'Recursive' option is set, selecting an entity implies that all the entities that are used to construct it (all the "boundaries") are selected too, recursively. For example, if 'Recursive' is set, selecting a surface will automatically select its boundary curves, as well as the boundaries of these curves (i.e., points). If 'Recursive' is not set, only the surface (the dashed cross) would be shown.

- In the 'Numeric Input' tab, you can choose to show or hide any entity or mesh element by giving its number. You can also use the "\*" character to select all the entities/elements at once. For example, to show only the mesh element 13245 in the mesh, you would enter "\*" in the 'Element' input field and click on 'Hide' (this will hide all the mesh elements); and then enter "13245" in the 'Element' input field and click on 'Show' (this will show the element 13245). To show other element, you would just enter another number in the input field, click on 'Show', etc.

\*\*\*\*\*

## Section 5: Mesh module

### \* 5.1 What should I do when the 2D unstructured algorithm fails?

Try one of the other 2D algorithms, e.g.:

- on the command line: 'gmsh -algo tri'
- in the interface: 'Tools->Options->Mesh->2D->Isotropic algorithm (Triangle)'
- in input files: 'Mesh.Algorithm = 3'

The old 2D algorithm may disappear once all its features are integrated in the new ones, so please don't send bug reports on the old algorithm anymore.

### \* 5.2 The new 2D unstructured algorithms also fail! Then what?

Send us your geometry, and we will investigate. Please keep the following in mind though: 2D (surface) meshes are generated by projecting the 2D mesh in a "mean plane" of the surface. This gives

nice results only if the surface curvature is small enough. Otherwise you must cut the surface into several pieces (patches). For example, using half circles to define a cylinder will fail with the unstructured algorithm: you should define arcs with angles smaller than Pi, and thus define the cylinder with at least three patches.

\* 5.3 What should I do when the 3D unstructured algorithm fails?

The 3D algorithm is still very experimental. Try to change some characteristic lengths in your input file to generate meshes that better suit the geometrical details of your structure.

\* 5.4 I changed the characteristic lengths, but the 3D algorithm still does not work. What should I do?

Buy a professional mesh generator ;-) You can also try to use Netgen instead of the default algorithm for the 3D mesh. Note that all surface meshes have to be oriented with exterior normals in this case.

\* 5.5 The 3D algorithm is reaaaaally slow. Can you improve it?

We are working on it. But since we have a (very) limited amount of time to spend on the development of Gmsh, this may take a while. For very big meshes, see the answer to the previous question...

\* 5.6 The quality of the elements generated by the 3D algorithm is very bad.

Upgrade to Gmsh >= 1.54 and use 'Optimize quality'. If badly shaped elements still exist due to the surface recovery step, you can try to use Netgen instead of the default algorithm for the 3D mesh. Note that all surface meshes have to be oriented with exterior normals in this case.

\* 5.7 Non-recombined 3D extruded meshes sometimes fail.

The swapping algorithm is not very clever at the moment. Try to change the surface mesh a bit, or recombine your mesh to generate prisms or hexahedra instead of tetrahedra.

\* 5.8 Tools->Visibility does not seem to work with extruded meshes.

This is fixed in Gmsh >= 1.54. However, when region numbers are explicitly assigned to mesh entities in the extrude commands (which partially destroys the geometry/mesh relationship), the 'Visibility' tool will only work as expected when displaying elementary entities. In this particular case, the only solution to visualize

extruded physical entities is to save the mesh, and to read it again.

\* 5.9 Does Gmsh support curved elements?

Yes, Gmsh can generate both 1st order and 2nd order elements. To generate second order elements, click on 'Second order' in the mesh menu after the mesh is completed. To always generate 2nd order elements, select 'Generate second order elements' in the mesh option panel. From the command line, you can also use '-order 2'.

\* 5.10 Can I import an existing surface mesh in Gmsh and use it to build a 3D mesh?

Yes, see for example 'demos/sphere-discrete.geo'. Note that Gmsh does not currently modify the surface mesh that you provide in this way, so this surface mesh has to be conform (without gaps, hanging nodes, etc.) and must contain surface elements having the final desired sizes.

Gmsh can also import discrete geometries in the form of STL triangulations, and remesh these to respect certain constraints. This is still an experimental feature as of this writing (version 1.64).

\* 5.11 How do I define boundary conditions or material properties in Gmsh?

By design, Gmsh does not try to incorporate every possible definition of boundary conditions or material properties--this is a job best left to the solver. Instead, Gmsh provides a simple mechanism to tag groups of elements, and it is up to the solver to interpret these tags as boundary conditions, materials, etc. Associating tags with elements in Gmsh is done by defining Physical entities (Physical Points, Physical Lines, Physical Surfaces and Physical Volumes): see the reference manual as well as the tutorials (in particular 'tutorial/t1.geo') for a detailed description and some examples.

\* 5.12 How can I display only the mesh associated with selected geometrical entities?

See question 4.3.

\* 5.13 How can I "explore" a mesh (for example, to see inside a complex structure)?

You can use 'Tools->Clipping Planes' to extract the region of interest. You can define up to 6 clipping planes in Gmsh (i.e., enough to define a "cube" inside your model) and each plane can clip either

the geometry, the mesh, the post-processing views, or any combination of the above. The clipping planes are defined using the four coefficients A,B,C,D of the equation  $A*x+B*y+C*y+D=0$ , which can be adjusted interactively by dragging the mouse in the input fields. There is also one additional clipping plane available for "cutting" only the mesh (by keeping entire elements), in 'Tools->Options->Mesh->Cut Plane'.

- \* 5.14 What is the signification of Rho, Eta and Gamma in Tools->Statistics?

They measure the quality of the tetrahedra in a mesh:

```
Rho ~ min_edge_length / max_edge_length
Eta ~ volume^(2/3) / sum_edge_length^2
Gamma ~ volume / sum_face_area / max_edge_length
```

For the exact definitions, look at Mesh/Element.cpp and Mesh/Simplex.cpp.

The graphs plot the the number of elements vs the quality measure.

---

## Section 6: Solver module

- \* 6.1 How do I integrate my own solver with Gmsh?

If you want to simply launch a program from within Gmsh, just edit the options to define your solver commands (e.g. Solver.Name0, Solver.Executable0, etc.), and set the ClientServer option to zero (e.g. Solver.ClientServer0 = 0).

If you want your solver to interact with Gmsh (for error messages, option definitions, post-processing, etc.), you will need to link your solver with the GmshClient routines and add the appropriate function calls inside your program. You will of course also need to define your solver commands in an option file, but this time you should set the ClientServer variable to 1 (e.g. Solver.ClientServer = 1). C, C++, Perl and Python solver examples are available in the source distribution in the 'utils/solvers' directory.

- \* 6.2 On Windows, Gmsh does not seem to find the solver executable. What's wrong?

The solver executable (for example, 'getdp.exe') has to be in your path. If not, simply go to the solver options (for example,

'Solver->GetDP->Options->Executable') to specify its location.

\* 6.3 Can I launch Gmsh from my solver (instead of launching my solver from Gmsh) in order to monitor a solution?

Sure. A simple C program showing how to do this is given in 'utils/misc/callgmsh.c'.

\* 6.4 Is it possible for Gmsh top listen to an external program not launched from Gmsh?

Yes: just create a program as described in 6.1 above (you can skip the option file creation). Then select 'Always listen to incoming connection requests' in the solver option panel (or run gmsh with the '-listen' command line option) and Gmsh will listen for the program on the Solver.SocketName socket.

\*\*\*\*\*

## Section 7: Post-processing module

\* 7.1 How do I compute a section of a plot?

Use 'View->Plugins->Cut Plane'.

\* 7.2 Can I save an isosurface to a file?

Yes: first run 'View->Plugins->Cut Map' to extract the isosurface, then use 'View->Save As' to save the new view.

\* 7.3 Can Gmsh generate isovolumes?

Yes, with the CutMap plugin (set the ExtractVolume option to -1 or 1 to extract the negative or positive levelset).

\* 7.4 How do I animate my plots?

If the views contain multiple time steps, you can press the 'play' button at the bottom of the graphic window, or change the time step by hand in the view option panel. You can also use the left and right arrow keys on your keyboard to change the time step in all visible views in real time.

If you want to loop through different views instead of time steps, you can use the 'Loop through views instead of time steps' option in the view option panel, or use the up and down arrow keys on your keyboard.

\* 7.5 How do I visualize a deformed mesh?

Load a vector view containing the displacement field, and set 'Vector display' to 'Displacement' in View->Options->Aspect. If the displacement is too small (or too large), you can scale it with the 'Displacement factor' option. (Remember that you can drag the mouse in all numeric input fields to slide the value!)

Another option is to use the "general transformation expressions" (in View->Options->Offset) on a scalar view, with the displacement map selected as the data source.

\* 7.6 Can I visualize a field on a deformed mesh?

Yes, there are several ways to do that.

The easiest is to load two views: the first one containing a displacement field (a vector view that will be used to deform the mesh), and the second one containing the field you want to display (this view has to contain the same number of elements as the displacement view). You should then set 'Vector display' to 'Displacement' in the first view, as well as set 'Data source' to point to the second view. (You might want to make the second view invisible, too. If you want to amplify or decrease the amount of deformation, just modify the 'Displacement factor' option.)

Another solution is to use the 'General transformation expressions' (in 'View->Options->Offset') on the field you want to display, with the displacement map selected as the data source.

And yet another solution is to use the Warp plugin.

\* 7.7 Can I color the arrows representing a vector field with data from a scalar field?

Yes: load both the vector and the scalar fields (the two views must have the same number of elements) and, in the vector field options, select the scalar view in 'Data source'.

\* 7.8 Can I color isovalue surfaces with data from another scalar view?

Yes, using either the CutMap plugin (with the 'dView' option) or the Evaluate plugin.

\* 7.9 Is there a way to save animations?

Yes, using scripts. Have a look at 'tutorial/t8.geo' or 'demos/anim.script' for some examples.

\* 7.10 Is there a way to visualize only certain components of vector/tensor fields?

Yes, using 'View->Plugin->Extract'.

\* 7.11 Can I do arithmetic operations on a view? Can I perform operations involving different views?

Yes, with the Evaluate plugin.

\* 7.12 Some plugins seem to create empty views. What's wrong?

There can be several reasons:

- the plugin might be written for specific element types only (for example, only for scalar triangles or tetrahedra). In that case, you should transform your view before running the plugin (you can use Plugin(DecomposeinSimplex) to transform all quads, hexas, prisms and pyramids into triangles and tetrahedra).
- the plugin might expect a mesh while all you provide is a point cloud. In 2D, you can use Plugin(Triangulate) to transform a point cloud into a triangulated surface. A 3D version of this plugin is not available yet but it is on our TODO list.
- the input parameters are out of range.

In any case, you can automatically remove all empty views with 'View->Remove->Empty Views' in the GUI, or with "Delete Empty Views;" in a script.

\* 7.13 My code generates data "time step by time step", and thus cannot easily output Gmsh's multi-time-step post-processing files, where the values for all the time steps are given per element. How can I use Gmsh's post-processor in this situation?

Just create one view for each time step: Gmsh can handle an arbitrary number of views and it can deal with these separate views as efficiently as with a single multi-time-step view. The only disadvantage is that the total amount of disk space used is greater (since the node data is repeated for each time step).

In practice, depending on the size of the data set, you may want to store all the views in a single file or create one separate file for

each view, which you can then load selectively (and thus reduce the memory required for the analysis). In any case you can use 'Tools->Options->Post-processing->View links' to apply options to multiple views at once, and the up and down arrow keys to loop through (animate) the views (instead of the left and right arrow keys for multi-time-step views).

Also note that if all the views are based on the same grid, Gmsh can combine the separate views into a multi-time-step view by using the 'View->Combine->Time Steps' menu, or by using the '-combine' command line option.

\* 7.14 How can I see "inside" a complicated post-processing view?

See question 5.13.

When viewing 3D scalar fields, you can also modify the colormap ('Tools->Options->View->Map') to make the iso-surfaces "transparent": either by holding 'Ctrl' while dragging the mouse to draw the alpha channel by hand, or by using the 'a', 'Ctrl+a', 'p' and 'Ctrl+p' keyboard shortcuts.

Yet another (destructive) option is to use the ExtractVolume option in the CutSphere or CutPlane plugins.

\* 7.15 I am loading a valid 3D scalar view but Gmsh does not display anything!

In versions < 1.61, the default drawing mode for 3D scalar views was to draw iso-surfaces. If your data set was constant per element, Gmsh would not draw anything (a fix for this would be to run Plugin(Smooth), which would average the data on the nodes of the grid)... This behavior has changed in version 1.61, and Gmsh now draws the solution on the boundary of the elements by default. Iso-surfaces are of course still available by setting 'Intervals type' to 'Iso-values' in 'Tools->Options->View->Range'.

Note that the most efficient way to visualize the dataset on the boundary of the elements is to run Plugin(Skin) on the view: this will extract the boundary of the dataset and only draw the data on this boundary.



# Appendix C License

GNU General Public License

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc.  
59 Temple Place - Suite 330, Boston, MA 02111-1307, USA

Everyone is permitted to copy and distribute verbatim copies  
of this license document, but changing it is not allowed.

## Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a. You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b. You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c. If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions

for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a. Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - b. Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - c. Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you

indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

*one line to give the program's name and a brief idea of what it does.*

Copyright (C) yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) 19yy name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type
'show w'.
This is free software, and you are welcome to redistribute it
under certain conditions; type 'show c' for details.
```

The hypothetical commands ‘show w’ and ‘show c’ should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than ‘show w’ and ‘show c’; they could even be mouse-clicks or menu items—whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a “copyright disclaimer” for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program  
‘Gnomovision’ (which makes passes at compilers) written by James Hacker.

*signature of Ty Coon, 1 April 1989*  
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

# Concept index

.	
‘.msh’ file .....	145
‘.pos’ file .....	149
<b>2</b>	
2D plots .....	83
<b>3</b>	
3D plots .....	83
<b>A</b>	
Acknowledgments .....	171
Authors, e-mail .....	161
<b>B</b>	
Background mesh .....	50
Binary operators .....	11
Bindings, keyboard .....	141
Bindings, mouse .....	140
Bugs, reporting .....	161
<b>C</b>	
Changelog .....	161
Characteristic lengths .....	50
Colors .....	11
Command-line options .....	138
Commands, general .....	15
Commands, geometry .....	39
Commands, mesh .....	49
Commands, post-processing .....	83
Comments .....	6
Concepts, index .....	195
Conditionals .....	14
Constants .....	9
Contact information .....	161
Contributors, list .....	171
Copyright .....	1
Credits .....	171
<b>D</b>	
Document syntax .....	6
Download .....	1
<b>E</b>	
E-mail, authors .....	161
Edges, ordering .....	155
Efficiency, tips .....	175
Elementary lines .....	40
Elementary points .....	39
Elementary surfaces .....	41
Elementary volumes .....	42
Elliptic, mesh .....	51
Evaluation order .....	12
Example, solver .....	79
Examples .....	113
Expressions, affectation .....	15
Expressions, character .....	10
Expressions, color .....	11
Expressions, definition .....	9
Expressions, floating point .....	9
Expressions, identifiers .....	15
Expressions, lists .....	10
Extrusion, geometry .....	42
Extrusion, mesh .....	51
<b>F</b>	
Faces, ordering .....	155
FAQ .....	177
File format, mesh .....	145
File format, post-processing, ASCII .....	151
File format, post-processing, binary .....	154
File format, post-processing, parsed .....	149
File formats .....	145
File, comments .....	6
Floating point numbers .....	9
Frequently asked questions .....	177
Functions, built-in .....	13
Functions, user-defined .....	14
<b>G</b>	
General commands .....	15
Geometry commands .....	39
Geometry, extrusion .....	42
Geometry, module .....	39
Geometry, options .....	44
Geometry, transformations .....	43
GNU General Public License .....	189
Graphs .....	83
<b>H</b>	
History, versions .....	161

**I**

Index, concepts	195
Index, syntax	199
Interactive mode	137
Internet address	1
Introduction	3

**K**

Keyboard, shortcuts	141
Keywords, index	199

**L**

License	1, 189
Lines, elementary	40
Lines, physical	40
Loops	14

**M**

Mailing list	1, 161
Mesh commands	49
Mesh, background	50
Mesh, element size	50
Mesh, elliptic	51
Mesh, extrusion	51
Mesh, file format	145
Mesh, module	49
Mesh, options	53
Mesh, transfinite	51
Module, geometry	39
Module, Mesh	49
Module, Post-processing	83
Module, Solver	65
Mouse, actions	140

**N**

Nodes, ordering	155
Non-interactive mode	138
Numbers, real	9

**O**

Operating system	137
Operator precedence	12
Operators, definition	11
Options, command-line	138
Options, geometry	44, 65
Options, mesh	53
Options, post-processing	96
Order, evaluation	12
Overview	3

**P**

Physical lines	40
Physical points	39
Physical surfaces	41
Physical volumes	42
Plots	83
Plugins, post-processing	85
Points, elementary	39
Points, physical	39
Post-processing commands	83
Post-processing plugins	85
Post-processing, ASCII file format	151
Post-processing, binary file format	154
Post-processing, module	83
Post-processing, options	96
Post-processing, parsed file format	149
Precedence, operators	12
Programming, notes	159

**Q**

Questions, frequently asked	177
-----------------------------	-----

**R**

Real numbers	9
Reporting bugs	161
Rotation	43
Rules, syntactic	6
Running Gmsh	137

**S**

Scale	43
Shortcuts, keyboard	141
Size, elements	50
Solver commands	65
Solver example	79
Solver, module	65
Strings	10
Surfaces, elementary	41
Surfaces, physical	41
Symmetry	43
Syntax, index	199
Syntax, rules	6

**T**

Ternary operators	11
Tips	175
Transfinite, mesh	51
Transformations, geometry	43
Translation	43
Tricks	175
Tutorial	113

**U**

Unary operators ..... 11

Views ..... 83  
Volumes, elementary ..... 42  
Volumes, physical ..... 42

**V**

Versions ..... 161

**W**

Web site ..... 1



## Syntax index

!	
! .....	11
!= .....	12
%	
%.....	12
&	
&&.....	12
(	
(.....	12
*	
*.....	12
*=.....	15
+	
+.....	12
++.....	12
+=.....	15
-	
-.....	11, 12
--.....	12
-=.....	15
-0.....	138
-1, -2, -3.....	138
-a, -g, -m, -s, -p.....	140
-algo string.....	138
-bgm file.....	139
-clscale float.....	139
-combine.....	139
-constrain.....	139
-convert file file.....	140
-display string.....	139
-extrude.....	139
-fontsize int.....	139
-format string.....	138
-help.....	140
-histogram.....	139
-info.....	140
-interactive.....	139
-link int.....	139
-listen.....	140
-meshscale float.....	139
-nodb.....	139
-nopopup.....	140
-noview.....	139
-o file.....	138
-optimize.....	138
-option file.....	140
-order int.....	139
-pid.....	140
-rand float.....	139
-recombine.....	139
-saveall.....	138
-scale float.....	139
-scheme string.....	139
-smooth int.....	138
-smoothview.....	139
-string "string".....	140
-v int.....	140
-version.....	140
/	
/.....	12
/*, */.....	6
//.....	6
/=.....	15
:	
:.....	12
<	
<.....	12
<=.....	12
=	
=.....	15
==.....	12
==	
>	
>.....	12
>=.....	12
?	
?.....	12
^	
^.....	12
.....	12

**A**

<code>Acos ( expression )</code> .....	13
<code>Alias View[expression];</code> .....	83
<code>AliasWithOptions View[expression];</code> .....	84
<code>Asin ( expression )</code> .....	13
<code>Atan ( expression )</code> .....	13
<code>Atan2 ( expression, expression )</code> .....	13
<code>Attractor Point   Line { expression-list } = { expression, expression, expression };</code> .....	50

**B**

<code>Background Mesh View[expression];</code> .....	84
<code>Bezier ( expression ) = { expression-list };</code> .....	40
<code>BoundingBox { expression, expression, expression, expression, expression, expression };</code> .....	18
<code>BoundingBox;</code> .....	17
<code>BSpline ( expression ) = { expression-list };</code> .....	40
<code>build-in-function</code> .....	13

**C**

<code>Call string;</code> .....	14
<code>CatmullRom ( expression ) = { expression-list };</code> .....	40
<code>Ceil ( expression )</code> .....	13
<code>char-option = char-expression;</code> .....	16
<code>Characteristic Length { expression-list } = expression;</code> .....	51
<code>Circle ( expression ) = { expression, expression, expression };</code> .....	40
<code>Coherence;</code> .....	44
<code>Color color-expression { Point   Line   Surface   Volume { expression-list } ; ... }</code> .....	52
<code>color-option = color-expression;</code> .....	16
<code>Combine ElementsByViewName;</code> .....	84
<code>Combine ElementsFromAllViews   Combine Views;</code> .....	84
<code>Combine ElementsFromVisibleViews;</code> .....	84
<code>Combine TimeStepsByViewName   Combine TimeSteps;</code> .....	84
<code>Combine TimeStepsFromAllViews;</code> .....	84
<code>Combine TimeStepsFromVisibleViews;</code> .....	84
<code>Cos ( expression )</code> .....	13
<code>Cosh ( expression )</code> .....	13

**D**

<code>Delete { Point   Line   Surface   Volume { expression-list } ; ... }</code> .....	44
<code>Delete All;</code> .....	18
<code>Delete Empty Views;</code> .....	84
<code>Delete Physicals;</code> .....	18
<code>Delete View[expression];</code> .....	84
<code>Dilate { { expression-list }, expression } { transform-list } .....</code>	43

<code>Draw; .....</code>	17
--------------------------	----

**E**

<code>Ellipse ( expression ) = { expression, expression, expression, expression };</code> .....	40
<code>Elliptic Surface { expression } = { expression-list };</code> .....	52
<code>EndFor</code> .....	15
<code>EndIf</code> .....	15
<code>Exit;</code> .....	17
<code>Exp ( expression )</code> .....	13
<code>extrude</code> .....	42
<code>Extrude { { expression-list }, { expression-list }, { expression-list }, expression } { extrude-list } .....</code>	42
<code>Extrude { { expression-list }, { expression-list }, { expression-list }, expression } { extrude-list layers } .....</code>	51
<code>Extrude { { expression-list }, { expression-list }, expression } { extrude-list } .....</code>	42
<code>Extrude { { expression-list }, { expression-list }, expression } { extrude-list layers } .....</code>	51
<code>Extrude { expression-list } { extrude-list } .....</code>	42
<code>Extrude { expression-list } { extrude-list layers } .....</code>	51

**F**

<code>Fabs ( expression )</code> .....	13
<code>Floor ( expression )</code> .....	13
<code>Fmod ( expression, expression )</code> .....	13
<code>For ( expression : expression )</code> .....	14
<code>For ( expression : expression : expression )</code> .....	15
<code>For string In { expression : expression : expression }</code> .....	15
<code>For string In { expression : expression }</code> .....	15
<code>Function string</code> .....	14

**G**

<code>General.AlphaBlending</code> .....	20
<code>General.ArrowHeadRadius</code> .....	20
<code>General.ArrowStemLength</code> .....	20
<code>General.ArrowStemRadius</code> .....	20
<code>General.Axes</code> .....	21
<code>General.AxesAutoPosition</code> .....	21
<code>General.AxesFormatX</code> .....	19
<code>General.AxesFormatY</code> .....	19
<code>General.AxesFormatZ</code> .....	19
<code>General.AxesLabelX</code> .....	19
<code>General.AxesLabelY</code> .....	19
<code>General.AxesLabelZ</code> .....	19
<code>General.AxesMaxX</code> .....	21
<code>General.AxesMaxY</code> .....	21
<code>General.AxesMaxZ</code> .....	21
<code>General.AxesMinX</code> .....	21
<code>General.AxesMinY</code> .....	21

General.AxesMinZ .....	21	General.FileChooserPositionX .....	26
General.AxesTicsX .....	21	General.FileChooserPositionY .....	26
General.AxesTicsY .....	21	General.FileName .....	19
General.AxesTicsZ .....	22	General.FontSize .....	26
General.BackgroundGradient .....	22	General.GraphicsFont .....	20
General.Clip0 .....	22	General.GraphicsFontSize .....	26
General.ClipOA .....	22	General.GraphicsHeight .....	26
General.ClipOB .....	22	General.GraphicsPositionX .....	26
General.ClipOC .....	22	General.GraphicsPositionY .....	26
General.ClipOD .....	22	General.GraphicsWidth .....	27
General.Clip1 .....	22	General.InitialModule .....	27
General.Clip1A .....	22	General.Light0 .....	27
General.Clip1B .....	22	General.Light0W .....	27
General.Clip1C .....	23	General.Light0X .....	27
General.Clip1D .....	23	General.Light0Y .....	27
General.Clip2 .....	23	General.Light0Z .....	27
General.Clip2A .....	23	General.Light1 .....	27
General.Clip2B .....	23	General.Light1W .....	28
General.Clip2C .....	23	General.Light1X .....	27
General.Clip2D .....	23	General.Light1Y .....	28
General.Clip3 .....	23	General.Light1Z .....	28
General.Clip3A .....	23	General.Light2 .....	28
General.Clip3B .....	23	General.Light2W .....	28
General.Clip3C .....	24	General.Light2X .....	28
General.Clip3D .....	24	General.Light2Y .....	28
General.Clip4 .....	24	General.Light2Z .....	28
General.Clip4A .....	24	General.Light3 .....	28
General.Clip4B .....	24	General.Light3W .....	29
General.Clip4C .....	24	General.Light3X .....	28
General.Clip4D .....	24	General.Light3Y .....	29
General.Clip5 .....	24	General.Light3Z .....	29
General.Clip5A .....	24	General.Light4 .....	29
General.Clip5B .....	24	General.Light4W .....	29
General.Clip5C .....	25	General.Light4X .....	29
General.Clip5D .....	25	General.Light4Y .....	29
General.ClipFactor .....	25	General.Light4Z .....	29
General.ClipPositionX .....	25	General.Light5 .....	29
General.ClipPositionY .....	25	General.Light5W .....	30
General.Color.AmbientLight .....	36	General.Light5X .....	29
General.Color.Axes .....	36	General.Light5Y .....	30
General.Color.Background .....	36	General.Light5Z .....	30
General.Color.BackgroundGradient .....	36	General.LineWidth .....	30
General.Color.DiffuseLight .....	36	General.ManipulatorPositionX .....	30
General.Color.Foreground .....	36	General.ManipulatorPositionY .....	30
General.Color.SmallAxes .....	36	General.MenuPositionX .....	30
General.Color.SpecularLight .....	36	General.MenuPositionY .....	30
General.Color.Text .....	36	General.MessageHeight .....	31
General.ColorScheme .....	25	General.MessagePositionX .....	30
General.ConfirmOverwrite .....	25	General.MessagePositionY .....	30
General.ContextPositionX .....	25	General.MessageWidth .....	31
General.ContextPositionY .....	25	General.MouseSelection .....	31
General.DefaultFileName .....	19	General.NoPopup .....	31
General.Display .....	19	General.OptionsFileName .....	20
General.DoubleBuffer .....	26	General.OptionsPositionX .....	31
General.DrawBoundingBoxes .....	26	General.OptionsPositionY .....	31
General.ErrorFileName .....	19	General.Orthographic .....	31
General.ExpertMode .....	26	General.PointSize .....	31
General.FastRedraw .....	26	General.PolygonOffsetAlwaysOn .....	31

General.PolygonOffsetFactor .....	31	Geometry.Color.VolumesSelect .....	47
General.PolygonOffsetUnits .....	31	Geometry.ExtrudeSplinePoints .....	44
General.QuadricSubdivisions .....	32	Geometry.Light .....	45
General.RotationCenterGravity .....	32	Geometry.LineNumbers .....	45
General.RotationCenterX .....	32	Geometry.Lines .....	45
General.RotationCenterY .....	32	Geometry.LineSelectWidth .....	45
General.RotationCenterZ .....	32	Geometry.LineType .....	45
General.RotationX .....	32	Geometry.LineWidth .....	45
General.RotationY .....	32	Geometry.Normals .....	45
General.RotationZ .....	32	Geometry.OldCircle .....	45
General.SaveOptions .....	32	Geometry.OldNewReg .....	45
General.SaveSession .....	33	Geometry.PointNumbers .....	45
General.ScaleX .....	33	Geometry.Points .....	45
General.ScaleY .....	33	Geometry.PointSelectSize .....	46
General.ScaleZ .....	33	Geometry.PointSize .....	46
General.Scheme .....	20	Geometry.PointType .....	46
General.SessionFileName .....	20	Geometry.ScalingFactor .....	46
General.Shininess .....	33	Geometry.SnapX .....	46
General.ShininessExponent .....	33	Geometry.SnapY .....	46
General.SmallAxes .....	33	Geometry.SnapZ .....	46
General.SmallAxesPositionX .....	33	Geometry.SurfaceNumbers .....	46
General.SmallAxesPositionY .....	33	Geometry.Surfaces .....	46
General.SmallAxesSize .....	33	Geometry.Tangents .....	46
General.SolverPositionX .....	33	Geometry.VolumeNumbers .....	47
General.SolverPositionY .....	34	Geometry.Volumes .....	47
General.StatisticsPositionX .....	34	GMSH_MAJOR_VERSION .....	15
General.StatisticsPositionY .....	34	GMSH_MINOR_VERSION .....	15
General.SystemMenuBar .....	34	GMSH_PATCH_VERSION .....	15
General.Terminal .....	34		
General.TextEditor .....	20		
General.TmpFileName .....	20		
General.Tooltips .....	34		
General.Trackball .....	34		
General.TrackballQuaternion0 .....	34		
General.TrackballQuaternion1 .....	34		
General.TrackballQuaternion2 .....	34		
General.TrackballQuaternion3 .....	35		
General.TranslationX .....	35		
General.TranslationY .....	35	Hide { Point   Line   Surface   Volume {	
General.TranslationZ .....	35	<i>expression-list</i> }; ... } .....	44, 52
General.VectorType .....	35	Hide <i>char-expression</i> ; .....	44, 52
General.Verbose .....	35	Hypot ( <i>expression</i> , <i>expression</i> ) .....	13
General.VisibilityMode .....	35		
General.VisibilityPositionX .....	35		
General.VisibilityPositionY .....	35		
General.WebBrowser .....	20		
General.ZoomFactor .....	35		
Geometry.AutoCoherence .....	44	If ( <i>expression</i> ) .....	15
Geometry.CirclePoints .....	44	Include <i>char-expression</i> ; .....	18
Geometry.Color.Lines .....	47		
Geometry.Color.LinesSelect .....	47		
Geometry.ColorNormals .....	48		
Geometry.Color.Points .....	47		
Geometry.Color.PointsSelect .....	47	Line ( <i>expression</i> ) = { <i>expression</i> , <i>expression</i> }; .....	40
Geometry.Color.Surfaces .....	47	Line Loop ( <i>expression</i> ) = { <i>expression-list</i> };; .....	40
Geometry.Color.SurfacesSelect .....	47	Log ( <i>expression</i> ) .....	14
Geometry.Color.Tangents .....	48	Log10 ( <i>expression</i> ) .....	14
Geometry.Color.Volumes .....	47		

**M**

Merge <i>char-expression</i> ; . . . . .	17	Mesh.LabelType . . . . .	55
Mesh.Algorithm . . . . .	53	Mesh.Light . . . . .	55
Mesh.Algorithm3D . . . . .	53	Mesh.LightLines . . . . .	56
Mesh.AllowDegeneratedExtrude . . . . .	53	Mesh.LightTwoSide . . . . .	56
Mesh.AngleSmoothNormals . . . . .	53	Mesh.LineNumbers . . . . .	56
Mesh.BetaSmoothMetric . . . . .	53	Mesh.Lines . . . . .	56
Mesh.CharacteristicLengthFactor . . . . .	53	Mesh.LineType . . . . .	56
Mesh.Color.Eight . . . . .	63	Mesh.LineWidth . . . . .	56
Mesh.Color.EIGHTEEN . . . . .	64	Mesh.MinimumCirclePoints . . . . .	56
Mesh.Color.Eleven . . . . .	63	Mesh.MinimumElementSizeFact . . . . .	56
Mesh.Color.Fifteen . . . . .	63	Mesh.MshFileVersion . . . . .	56
Mesh.Color.Five . . . . .	62	Mesh.NbElemsPerRadiusOfCurv . . . . .	56
Mesh.Color.Four . . . . .	62	Mesh.NbHexahedra . . . . .	57
Mesh.Color.Fourteen . . . . .	63	Mesh.NbNodes . . . . .	57
Mesh.Color.Hexahedra . . . . .	61	Mesh.NbPrisms . . . . .	57
Mesh.Color.Lines . . . . .	61	Mesh.NbPyramids . . . . .	57
Mesh.Color.Nine . . . . .	63	Mesh.NbQuadrangles . . . . .	57
Mesh.Color.Nineteen . . . . .	64	Mesh.NbTetrahedra . . . . .	57
Mesh.ColorNormals . . . . .	62	Mesh.NbTriangles . . . . .	57
Mesh.Color.One . . . . .	62	MeshNormals . . . . .	57
Mesh.Color.Points . . . . .	61	Mesh.Optimize . . . . .	57
Mesh.Color.PointsSup . . . . .	61	Mesh.Partitioning . . . . .	59
Mesh.Color.Prisms . . . . .	61	Mesh.PointInsertion . . . . .	58
Mesh.Color.Pyramids . . . . .	61	Mesh.PointNumbers . . . . .	58
Mesh.Color.Quadrangles . . . . .	61	Mesh.Points . . . . .	57
Mesh.Color.Seven . . . . .	62	MeshPointSize . . . . .	58
Mesh.Color.Seventeen . . . . .	63	Mesh.PointsPerElement . . . . .	58
Mesh.Color.Six . . . . .	62	Mesh.PointType . . . . .	58
Mesh.Color.Sixteen . . . . .	63	Mesh.Quality . . . . .	58
Mesh.Color.Tangents . . . . .	62	Mesh.QualityInf . . . . .	58
Mesh.Color.Ten . . . . .	63	Mesh.QualitySup . . . . .	58
Mesh.Color.Tetrahedra . . . . .	61	Mesh.QualityType . . . . .	58
Mesh.Color.Thirteenth . . . . .	63	Mesh.RadiusInf . . . . .	59
Mesh.Color.Three . . . . .	62	Mesh.RadiusSup . . . . .	59
Mesh.Color.Triangles . . . . .	61	Mesh.RandomFactor . . . . .	59
Mesh.Color.Twelve . . . . .	63	Mesh.RecombineAlgo . . . . .	59
Mesh.Color.Two . . . . .	62	Mesh.RenumberNodes . . . . .	59
Mesh.Color.Zero . . . . .	62	Mesh.SaveAll . . . . .	59
Mesh.ColorCarousel . . . . .	54	Mesh.ScalingFactor . . . . .	59
Mesh.ConstrainedBackgroundMesh . . . . .	54	Mesh.Smoothing . . . . .	59
Mesh.CpuTime . . . . .	54	Mesh.SmoothNormals . . . . .	59
Mesh.CutPlane . . . . .	54	Mesh.SpeedMax . . . . .	59
Mesh.CutPlaneA . . . . .	54	Mesh.StlDistanceTol . . . . .	60
Mesh.CutPlaneAsSurface . . . . .	54	Mesh.SurfaceEdges . . . . .	60
Mesh.CutPlaneB . . . . .	54	Mesh.SurfaceFaces . . . . .	60
Mesh.CutPlaneC . . . . .	54	Mesh.SurfaceNumbers . . . . .	60
Mesh.CutPlaneD . . . . .	55	Mesh.Tangents . . . . .	60
Mesh.CutPlaneOnlyVolume . . . . .	54	Mesh.TargetElementSizeFact . . . . .	60
Mesh.DihedralAngleTol . . . . .	55	Mesh.TriangleOptions . . . . .	53
Mesh.Dual . . . . .	55	Mesh.VertexArrays . . . . .	60
Mesh.EdgeProlongationThreshold . . . . .	55	Mesh.VolumeEdges . . . . .	60
Mesh.ElementOrder . . . . .	55	Mesh.VolumeFaces . . . . .	60
Mesh.Explode . . . . .	55	Mesh.VolumeNumbers . . . . .	60
Mesh.Format . . . . .	55	Modulo ( <i>expression</i> , <i>expression</i> ) . . . . .	14
Mesh.InitialOnly . . . . .	55	MPI_Rank . . . . .	16
Mesh.Interactive . . . . .	55	MPI_Size . . . . .	15
Mesh.LabelsFrequency . . . . .	61		

**N**

newl.....	16
newl1.....	16
newp.....	16
newreg.....	16
news.....	16
news1.....	16
newv.....	16

**O**

operator-binary .....	11
operator-ternary-left .....	11
operator-ternary-right .....	11
operator-unary-left .....	11
operator-unary-right .....	11

**P**

Physical Line ( <i>expression</i> ) = { <i>expression-list</i> };	41
Physical Point ( <i>expression</i> ) = { <i>expression-list</i> };	39
Physical Surface ( <i>expression</i> ) = { <i>expression-list</i> };	41
Physical Volume ( <i>expression</i> ) = { <i>expression-list</i> };	42
Pi.....	15
Plane Surface ( <i>expression</i> ) = { <i>expression-list</i> };	41
Plugin (string) . Run; .....	85
Plugin (string) . string = <i>expression</i>   <i>char-expression</i> ; .....	85
Plugin(Annotate) .....	85
Plugin(Curl) .....	86
Plugin(CutGrid) .....	86
Plugin(CutMap) .....	87
Plugin(CutParametric) .....	87
Plugin(CutPlane) .....	88
Plugin(CutSphere) .....	88
Plugin(DecomposeInSimplex) .....	88
Plugin(Divergence) .....	89
Plugin(Eigenvalues) .....	89
Plugin(Eigenvectors) .....	89
Plugin(Evaluate) .....	89
Plugin(Extract) .....	90
Plugin(ExtractEdges) .....	91
Plugin(ExtractElements) .....	91
Plugin(Gradient) .....	91
Plugin(HarmonicToTime) .....	92
Plugin(Integrate) .....	92
Plugin(Lambda2) .....	92
Plugin(ModulusPhase) .....	93
Plugin(Probe) .....	93
Plugin(Remove) .....	93
Plugin(Skin) .....	94
Plugin(Smooth) .....	94
Plugin(StreamLines) .....	94

Plugin(Transform) .....	95
Plugin(Triangulate) .....	95
Plugin(Warp) .....	96
Point ( <i>expression</i> ) = { <i>expression</i> , <i>expression</i> , <i>expression</i> , <i>expression</i> }; .....	39
PostProcessing.AnimationCycle .....	96
PostProcessing.AnimationDelay .....	96
PostProcessing.CombineRemoveOriginal .....	96
PostProcessing.Format .....	96
PostProcessing.HorizontalScales .....	97
PostProcessing.Link .....	97
PostProcessing.NbViews .....	97
PostProcessing.Plugins .....	97
PostProcessing.Smoothing .....	97
PostProcessing.VertexArrays .....	97
Print <i>char-expression</i> ; .....	18
Print.EpsBackground .....	36
Print.EpsBestRoot .....	37
Print.EpsCompress .....	37
Print.EpsLineWidthFactor .....	37
Print.EpsOcclusionCulling .....	37
Print.EpsPointSizeFactor .....	37
Print.EpsPS3Shading .....	37
Print.EpsQuality .....	37
Print.Format .....	37
Print.GifDither .....	37
Print.GifInterlace .....	37
Print.GifSort .....	38
Print.GifTransparent .....	38
Print.JpegQuality .....	38
Print.JpegSmoothing .....	38
Printf ( <i>char-expression</i> , <i>expression-list</i> ); ...	17

**R**

Rand ( <i>expression</i> ) .....	14
real-option = <i>expression</i> ; .....	16
Recombine Surface { <i>expression-list</i> } <= <i>expression</i> >; .....	52
Return .....	14
Rotate { { <i>expression-list</i> }, { <i>expression-list</i> }, <i>expression</i> } { <i>transform-list</i> } .....	43
Ruled Surface ( <i>expression</i> ) = { <i>expression-list</i> };	41

**S**

Save <i>char-expression</i> ; .....	53
Save View[ <i>expression</i> ] <i>char-expression</i> ; .....	85
Show { Point   Line   Surface   Volume { <i>expression-list</i> } ; ... } .....	44, 53
Show <i>char-expression</i> ; .....	44, 53
Sin ( <i>expression</i> ) .....	14
Sinh ( <i>expression</i> ) .....	14
Sleep <i>expression</i> ; .....	18
Solver.AlwaysListen .....	77
Solver.ClientServer0 .....	77
Solver.ClientServer1 .....	78

Solver.ClientServer2.....	78	Solver.Help0 .....	65
Solver.ClientServer3.....	78	Solver.Help1 .....	67
Solver.ClientServer4.....	78	Solver.Help2 .....	70
Solver.Executable0.....	65	Solver.Help3 .....	72
Solver.Executable1.....	68	Solver.Help4 .....	75
Solver.Executable2.....	70	Solver.MaximumDelay.....	77
Solver.Executable3.....	72	Solver.MergeViews0.....	77
Solver.Executable4.....	75	Solver.MergeViews1.....	78
Solver.Extension0.....	65	Solver.MergeViews2.....	78
Solver.Extension1.....	68	Solver.MergeViews3.....	78
Solver.Extension2.....	70	Solver.MergeViews4.....	79
Solver.Extension3.....	72	Solver.MeshCommand0.....	66
Solver.Extension4.....	75	Solver.MeshCommand1.....	68
Solver.FifthButton0.....	67	Solver.MeshCommand2.....	70
Solver.FifthButton1.....	70	Solver.MeshCommand3.....	73
Solver.FifthButton2.....	72	Solver.MeshCommand4.....	75
Solver.FifthButton3.....	74	Solver.MeshName0.....	65
Solver.FifthButton4.....	77	Solver.MeshName1.....	68
Solver.FifthButtonCommand0.....	67	Solver.MeshName2.....	70
Solver.FifthButtonCommand1.....	70	Solver.MeshName3.....	73
Solver.FifthButtonCommand2.....	72	Solver.MeshName4.....	75
Solver.FifthButtonCommand3.....	74	Solver.Name0 .....	65
Solver.FifthButtonCommand4.....	77	Solver.Name1 .....	67
Solver.FifthOption0.....	66	Solver.Name2 .....	70
Solver.FifthOption1.....	69	Solver.Name3 .....	72
Solver.FifthOption2.....	71	Solver.Name4 .....	75
Solver.FifthOption3.....	73	Solver.NameCommand0.....	66
Solver.FifthOption4.....	76	Solver.NameCommand1.....	68
Solver.FirstButton0.....	66	Solver.NameCommand2.....	70
Solver.FirstButton1.....	69	Solver.NameCommand3.....	73
Solver.FirstButton2.....	71	Solver.NameCommand4.....	75
Solver.FirstButton3.....	74	Solver.OptionCommand0.....	66
Solver.FirstButton4.....	76	Solver.OptionCommand1.....	68
Solver.FirstButtonCommand0.....	66	Solver.OptionCommand2.....	71
Solver.FirstButtonCommand1.....	69	Solver.OptionCommand3.....	73
Solver.FirstButtonCommand2.....	71	Solver.OptionCommand4.....	75
Solver.FirstButtonCommand3.....	74	Solver.Plugins .....	77
Solver.FirstButtonCommand4.....	76	Solver.PopupMessages0.....	77
Solver.FirstOption0.....	66	Solver.PopupMessages1.....	78
Solver.FirstOption1.....	68	Solver.PopupMessages2.....	78
Solver.FirstOption2.....	71	Solver.PopupMessages3.....	78
Solver.FirstOption3.....	73	Solver.PopupMessages4.....	79
Solver.FirstOption4.....	75	Solver.SecondButton0.....	67
Solver.FourthButton0.....	67	Solver.SecondButton1.....	69
Solver.FourthButton1.....	69	Solver.SecondButton2.....	71
Solver.FourthButton2.....	72	Solver.SecondButton3.....	74
Solver.FourthButton3.....	74	Solver.SecondButton4.....	76
Solver.FourthButton4.....	77	Solver.SecondButtonCommand0.....	67
Solver.FourthButtonCommand0.....	67	Solver.SecondButtonCommand1.....	69
Solver.FourthButtonCommand1.....	69	Solver.SecondButtonCommand2.....	71
Solver.FourthButtonCommand2.....	72	Solver.SecondButtonCommand3.....	74
Solver.FourthButtonCommand3.....	74	Solver.SecondButtonCommand4.....	76
Solver.FourthButtonCommand4.....	77	Solver.SecondOption0.....	66
Solver.FourthOption0.....	66	Solver.SecondOption1.....	68
Solver.FourthOption1.....	69	Solver.SecondOption2.....	71
Solver.FourthOption2.....	71	Solver.SecondOption3.....	73
Solver.FourthOption3.....	73	Solver.SecondOption4.....	76
Solver.FourthOption4.....	76	Solver.SocketCommand0 .....	66

Solver.SocketCommand1 .....	68	transform .....	43
Solver.SocketCommand2 .....	70	Translate { <i>expression-list</i> } { <i>transform-list</i> } .....	43
Solver.SocketCommand3 .....	73		
Solver.SocketCommand4 .....	75		
Solver.SocketName .....	65		
Solver.ThirdButton0 .....	67		
Solver.ThirdButton1 .....	69		
Solver.ThirdButton2 .....	72		
Solver.ThirdButton3 .....	74		
Solver.ThirdButton4 .....	76		
Solver.ThirdButtonCommand0 .....	67		
Solver.ThirdButtonCommand1 .....	69		
Solver.ThirdButtonCommand2 .....	72		
Solver.ThirdButtonCommand3 .....	74		
Solver.ThirdButtonCommand4 .....	76		
Solver.ThirdOption0 .....	66		
Solver.ThirdOption1 .....	68		
Solver.ThirdOption2 .....	71		
Solver.ThirdOption3 .....	73		
Solver.ThirdOption4 .....	76		
Spline ( <i>expression</i> ) = { <i>expression-list</i> } .....	40		
Sqrt ( <i>expression</i> ) .....	14		
Status <i>expression</i> ; .....	18		
string = <i>expression</i> ; .....	15		
string [ ] += { <i>expression-list</i> }; .....	17		
string [ ] = { } .....	16		
string [ ] = { <i>expression-list</i> }; .....	16		
string [ { <i>expression-list</i> } ] *= { <i>expression-list</i> }; .....	17		
string [ { <i>expression-list</i> } ] += { <i>expression-list</i> }; .....	17		
string [ { <i>expression-list</i> } ] -= { <i>expression-list</i> }; .....	17		
string [ { <i>expression-list</i> } ] /= { <i>expression-list</i> }; .....	17		
string [ { <i>expression-list</i> } ] = { <i>expression-list</i> }; .....	16		
string   real-option *= <i>expression</i> ; .....	17		
string   real-option += <i>expression</i> ; .....	16		
string   real-option -= <i>expression</i> ; .....	17		
string   real-option /= <i>expression</i> ; .....	17		
Surface Loop ( <i>expression</i> ) = { <i>expression-list</i> }; .....	41		
Symmetry { <i>expression-list</i> } { <i>transform-list</i> } .....	43		
System <i>char-expression</i> ; .....	18		
<b>T</b>			
Tan ( <i>expression</i> ) .....	14		
Tanh ( <i>expression</i> ) .....	14		
Transfinite Line { <i>expression-list</i> } = <i>expression</i> < Using Progression   Bump <i>expression</i> >; .....	51		
Transfinite Surface { <i>expression</i> } = { <i>expression-list</i> } < Left   Right   Alternate >; .....	52		
Transfinite Volume { <i>expression</i> } = { <i>expression-list</i> }; .....	52		
<b>V</b>			
View "string" { <i>string</i> ( <i>expression-list</i> ) { <i>expression-list</i> } ; ... }; .....	85		
View.AngleSmoothNormals .....	99		
View.ArrowHeadRadius .....	99		
View.ArrowSize .....	99		
View.ArrowSizeProportional .....	100		
View.ArrowStemLength .....	100		
View.ArrowStemRadius .....	100		
View.AutoPosition .....	100		
View.Axes .....	100		
View.AxesAutoPosition .....	100		
View.AxesFormatX .....	97		
View.AxesFormatY .....	97		
View.AxesFormatZ .....	97		
View.AxesLabelX .....	97		
View.AxesLabelY .....	98		
View.AxesLabelZ .....	98		
View.AxesMaxX .....	100		
View.AxesMaxY .....	100		
View.AxesMaxZ .....	100		
View.AxesMinX .....	100		
View.AxesMinY .....	101		
View.AxesMinZ .....	101		
View.AxesTicsX .....	101		
View.AxesTicsY .....	101		
View.AxesTicsZ .....	101		
View.Boundary .....	101		
View.Color.Axes .....	111		
View.Color.Hexahedra .....	110		
View.Color.Lines .....	109		
View.Color.Normals .....	110		
View.Color.Points .....	109		
View.Color.Prisms .....	110		
View.Color.Pyramids .....	110		
View.Color.Quadrangles .....	110		
View.Color.Tangents .....	110		
View.Color.Tetrahedra .....	110		
View.Color.Text2D .....	110		
View.Color.Text3D .....	110		
View.Color.Triangles .....	110		
View.ColormapAlpha .....	101		
View.ColormapAlphaPower .....	101		
View.ColormapBeta .....	101		
View.ColormapBias .....	101		
View.ColormapCurvature .....	102		
View.ColormapInvert .....	102		
View.ColormapNumber .....	102		
View.ColormapRotation .....	102		
View.ColormapSwap .....	102		
View.ColorTable .....	111		
View.CustomMax .....	102		
View.CustomMin .....	102		

View.DisplacementFactor .....	102	View.OffsetY .....	106
View.DrawHexahedra .....	102	View.OffsetZ .....	106
View.DrawLines .....	102	View.PointSize .....	106
View.DrawPoints .....	103	View.PointType .....	106
View.DrawPrisms .....	103	View.PositionX .....	106
View.DrawPyramids .....	103	View.PositionY .....	107
View.DrawQuadrangles .....	103	View.RaiseX .....	107
View.DrawScalars .....	103	View.RaiseY .....	107
View.DrawStrings .....	103	View.RaiseZ .....	107
View.DrawTensors .....	103	View.RangeType .....	107
View.DrawTetrahedra .....	103	View.SaturateValues .....	107
View.DrawTriangles .....	103	View.ScaleType .....	107
View.DrawVectors .....	103	View>ShowElement .....	107
View.Explode .....	104	View>ShowScale .....	107
View.ExternalView .....	104	View>ShowTime .....	107
View.FakeTransparency .....	104	View.SmoothNormals .....	108
View.FileName .....	98	View.Stipple .....	108
View.Format .....	98	View.Stipple0 .....	98
View.GeneralizedRaiseFactor .....	104	View.Stipple1 .....	98
View.GeneralizedRaiseView .....	104	View.Stipple2 .....	98
View.GeneralizedRaiseX .....	98	View.Stipple3 .....	99
View.GeneralizedRaiseY .....	98	View.Stipple4 .....	99
View.GeneralizedRaiseZ .....	98	View.Stipple5 .....	99
View.GlyphLocation .....	104	View.Stipple6 .....	99
View.Grid .....	104	View.Stipple7 .....	99
View.Height .....	104	View.Stipple8 .....	99
View.IntervalsType .....	104	View.Stipple9 .....	99
View.Light .....	104	View.Tangents .....	108
View.LightLines .....	105	View.TensorType .....	108
View.LightTwoSide .....	105	View.TimeStep .....	108
View.LineType .....	105	View.Transform11 .....	108
View.LineWidth .....	105	View.Transform12 .....	108
View.Max .....	105	View.Transform13 .....	108
View.MaxX .....	105	View.Transform21 .....	108
View.MaxY .....	105	View.Transform22 .....	108
View.MaxZ .....	105	View.Transform23 .....	109
View.Min .....	105	View.Transform31 .....	109
View.MinX .....	105	View.Transform32 .....	109
View.MinY .....	106	View.Transform33 .....	109
View.MinZ .....	106	View.Type .....	109
View.Name .....	98	View.UseGeneralizedRaise .....	109
View.NbIso .....	106	View.VectorType .....	109
View.NbTimeStep .....	106	View.Visible .....	109
ViewNormals .....	106	View.Width .....	109
View.OffsetX .....	106	Volume ( <i>expression</i> ) = { <i>expression-list</i> } ; .....	42

